

200A

202A

201A

279A

278A

276B

275A

281A

279J

279K

237Y

205A

204A

203A

208E

208C

208D

208B

611B

610A

601A

606C

601B

 
601C

 
 
 
 
 
 
 
 
 
612A

 
208A

 
 
210B

210E

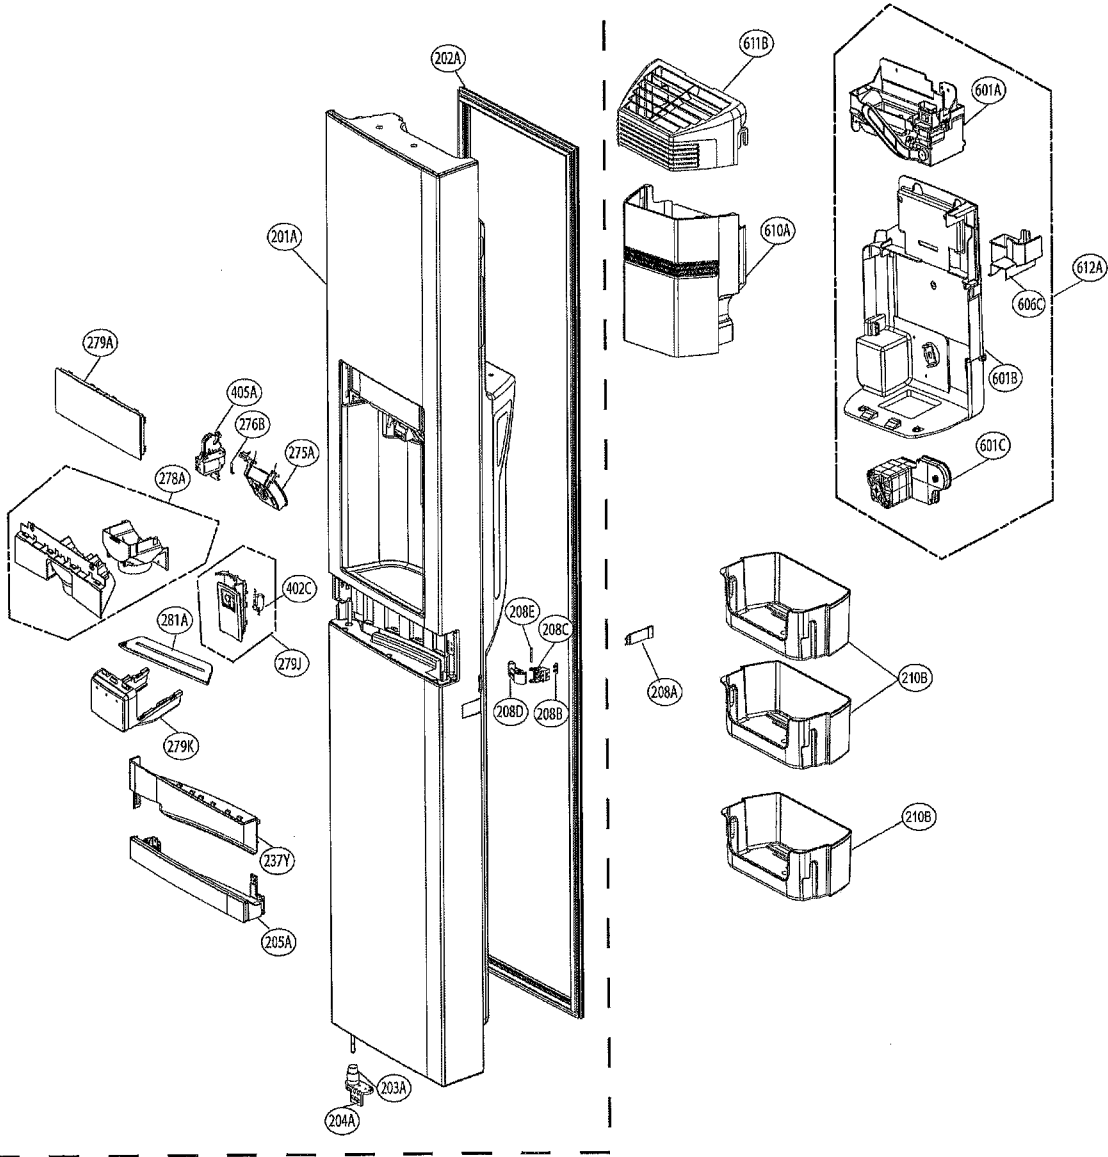

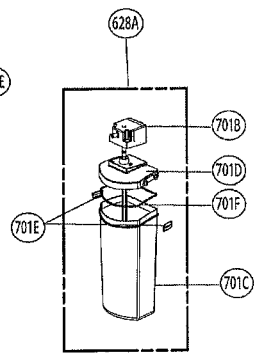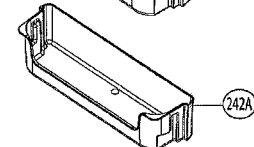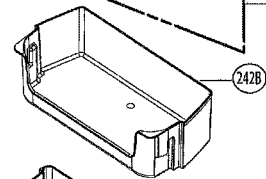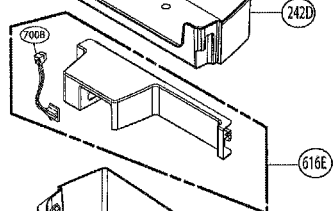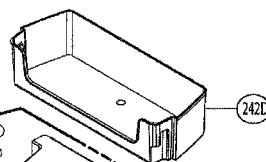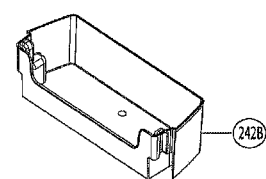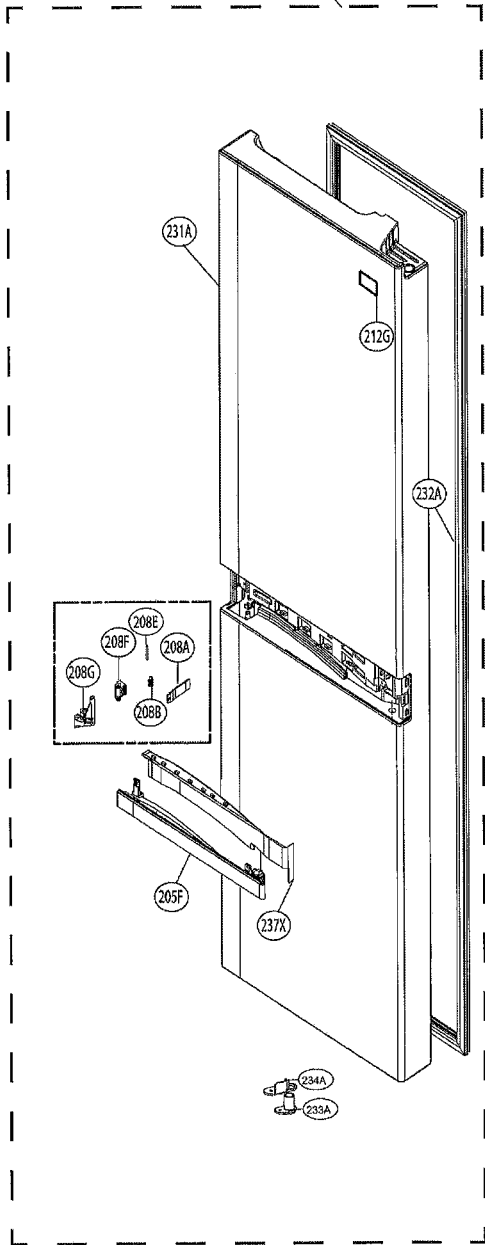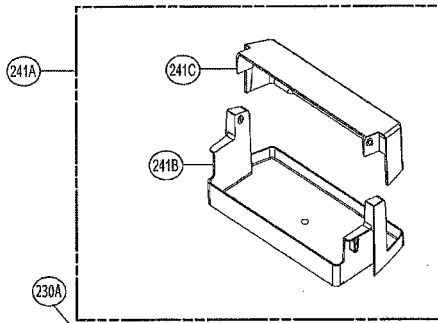

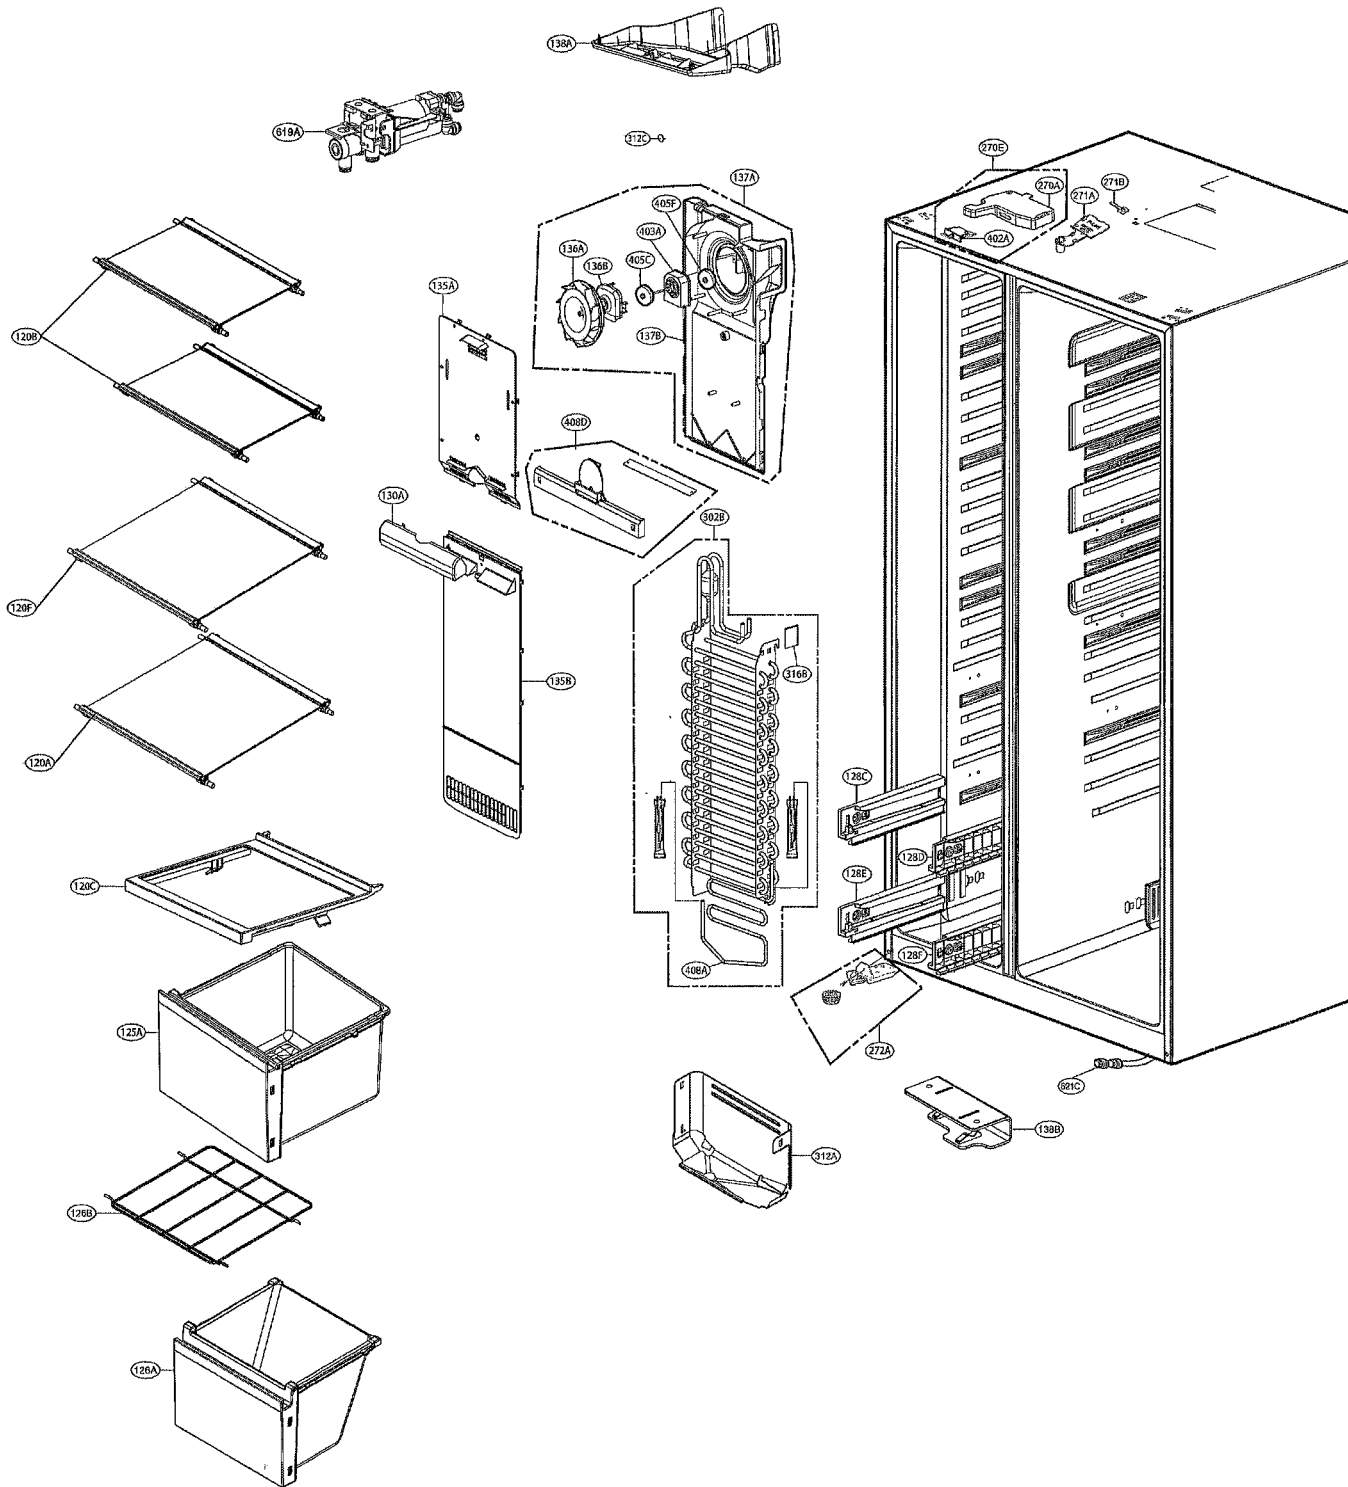

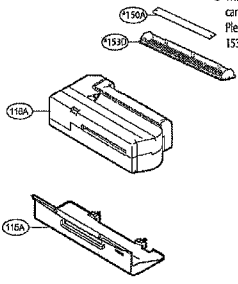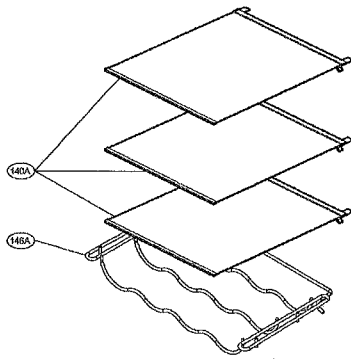

Ⓜ When disassemble 150A, 153D can not be reused. Please prepare extra 153D in advance.

