 


140A

140B

140C

140D

 


150A

153D




110A



115A

© When disassemble 150A, 153D
can not be reused.
Please prepare extra
153D in advance.

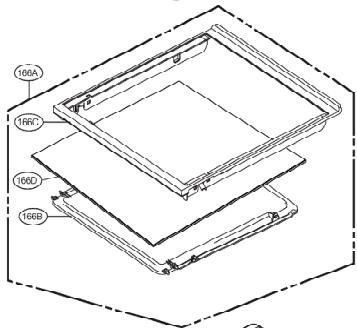


105A


166F

166D

166B

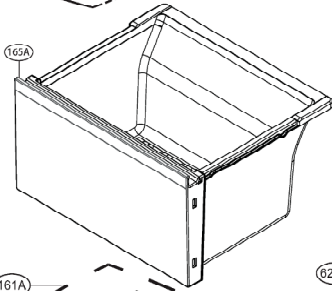


165A

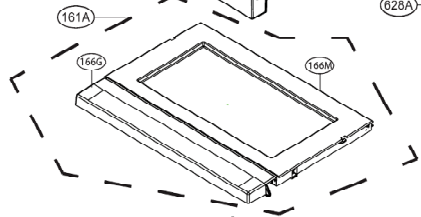


161A

166G

166M

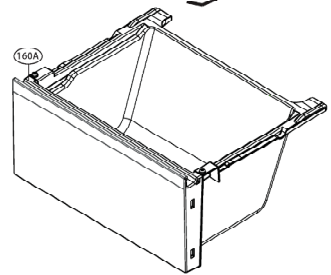


160A

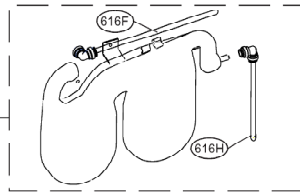

616F

616H

628A

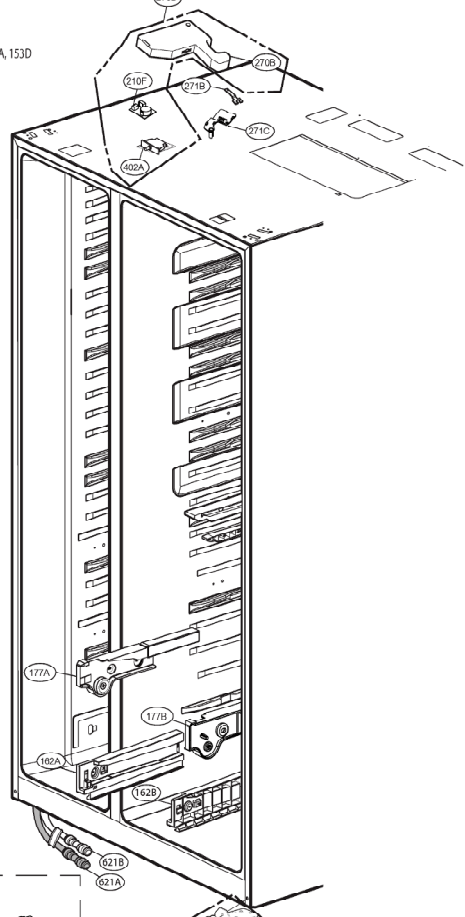

270C

270B

271C

271B

271A

270A

177A

162B

 
162A

621B


621A

272B

152B




138B

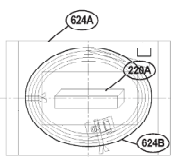

624A

228A

624B

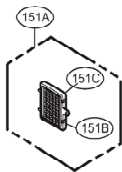

151A

151C

151B

