



6

29

7

33

8

9

10



Always exchange the whole lid-button assy 6.
Never unscrew the screws **D** which are holding the button case assy.
 When you do so the button case will not be air-tight anymore which can result in steam/water leakage.
 This will cause that the button assy PCB will malfunction after some use!





