


[1] OVEN PARTS

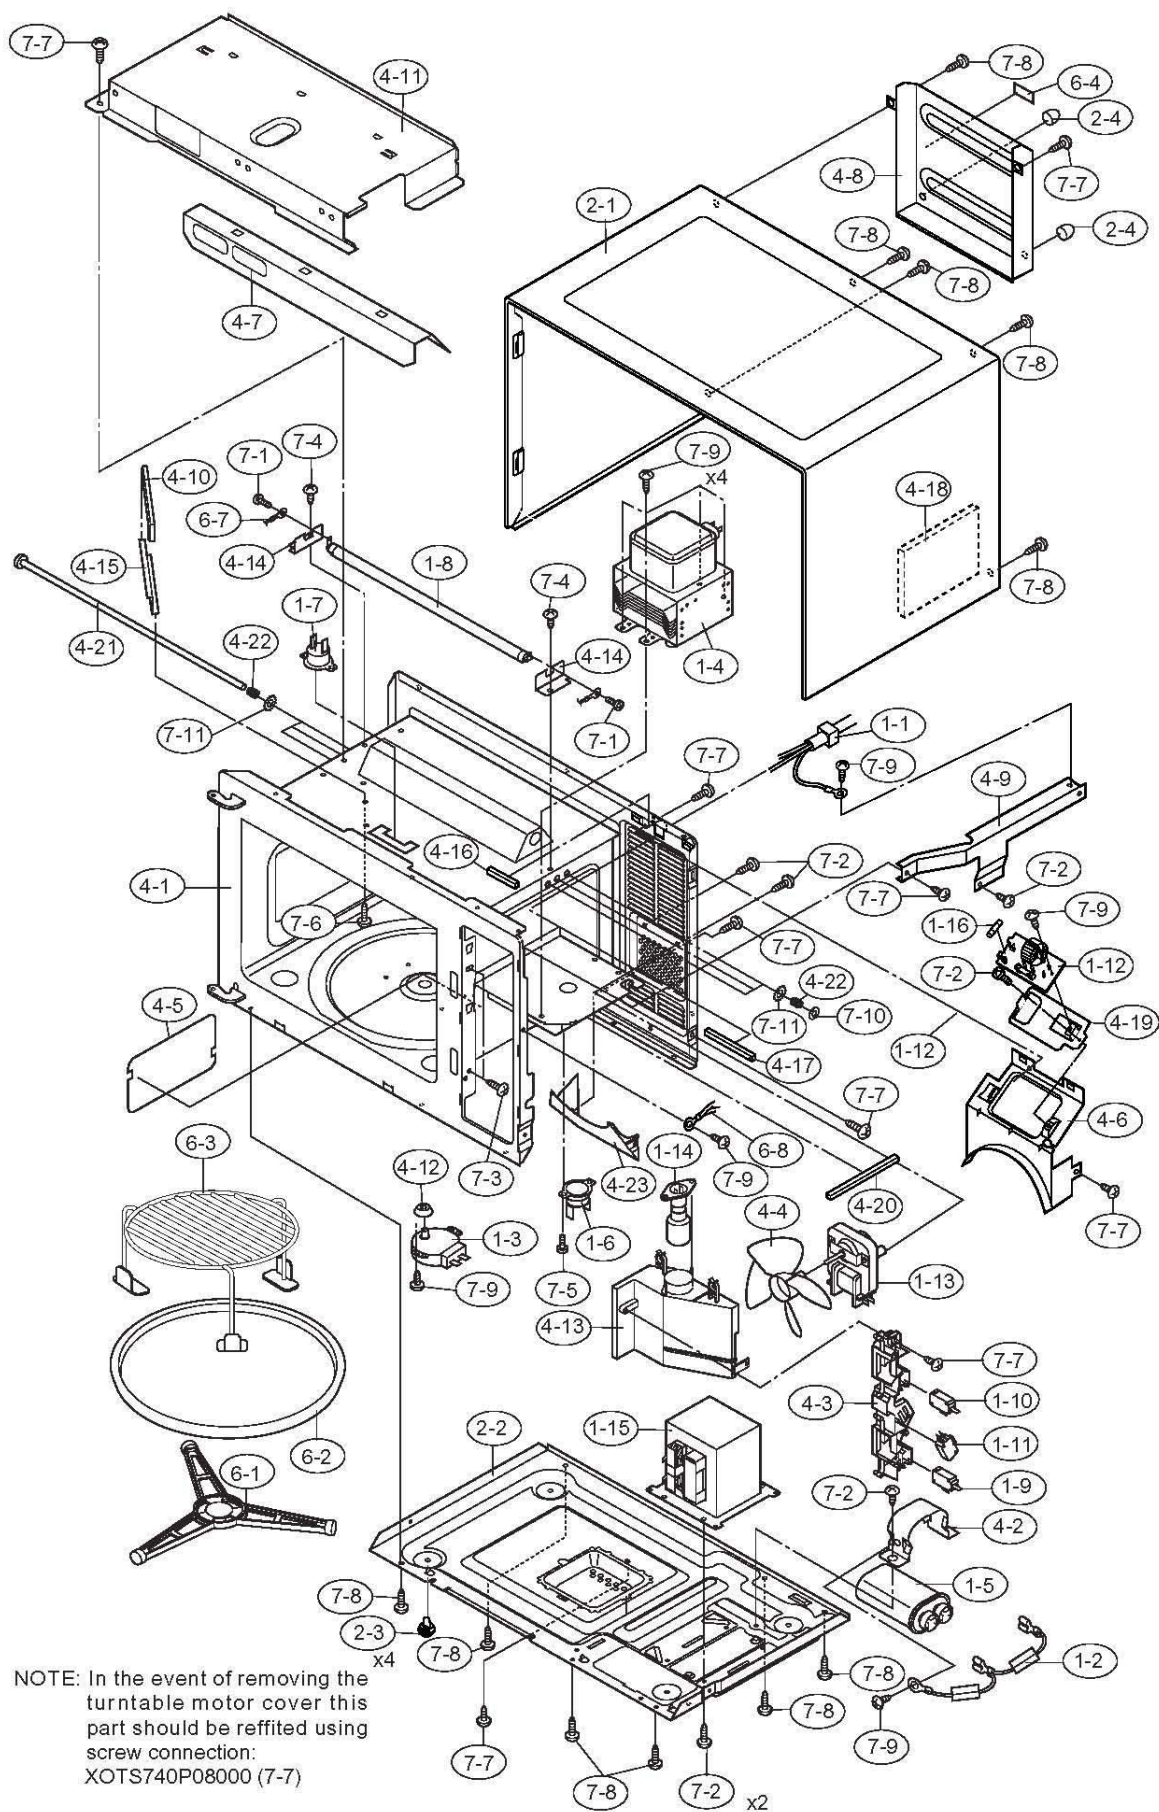

NOTE: In the event of removing the turntable motor cover this part should be refitted using screw connection:
XOTS740P08000 (7-7)

[2] DOOR AND CONTROL PANEL PARTS

