


OVEN PARTS

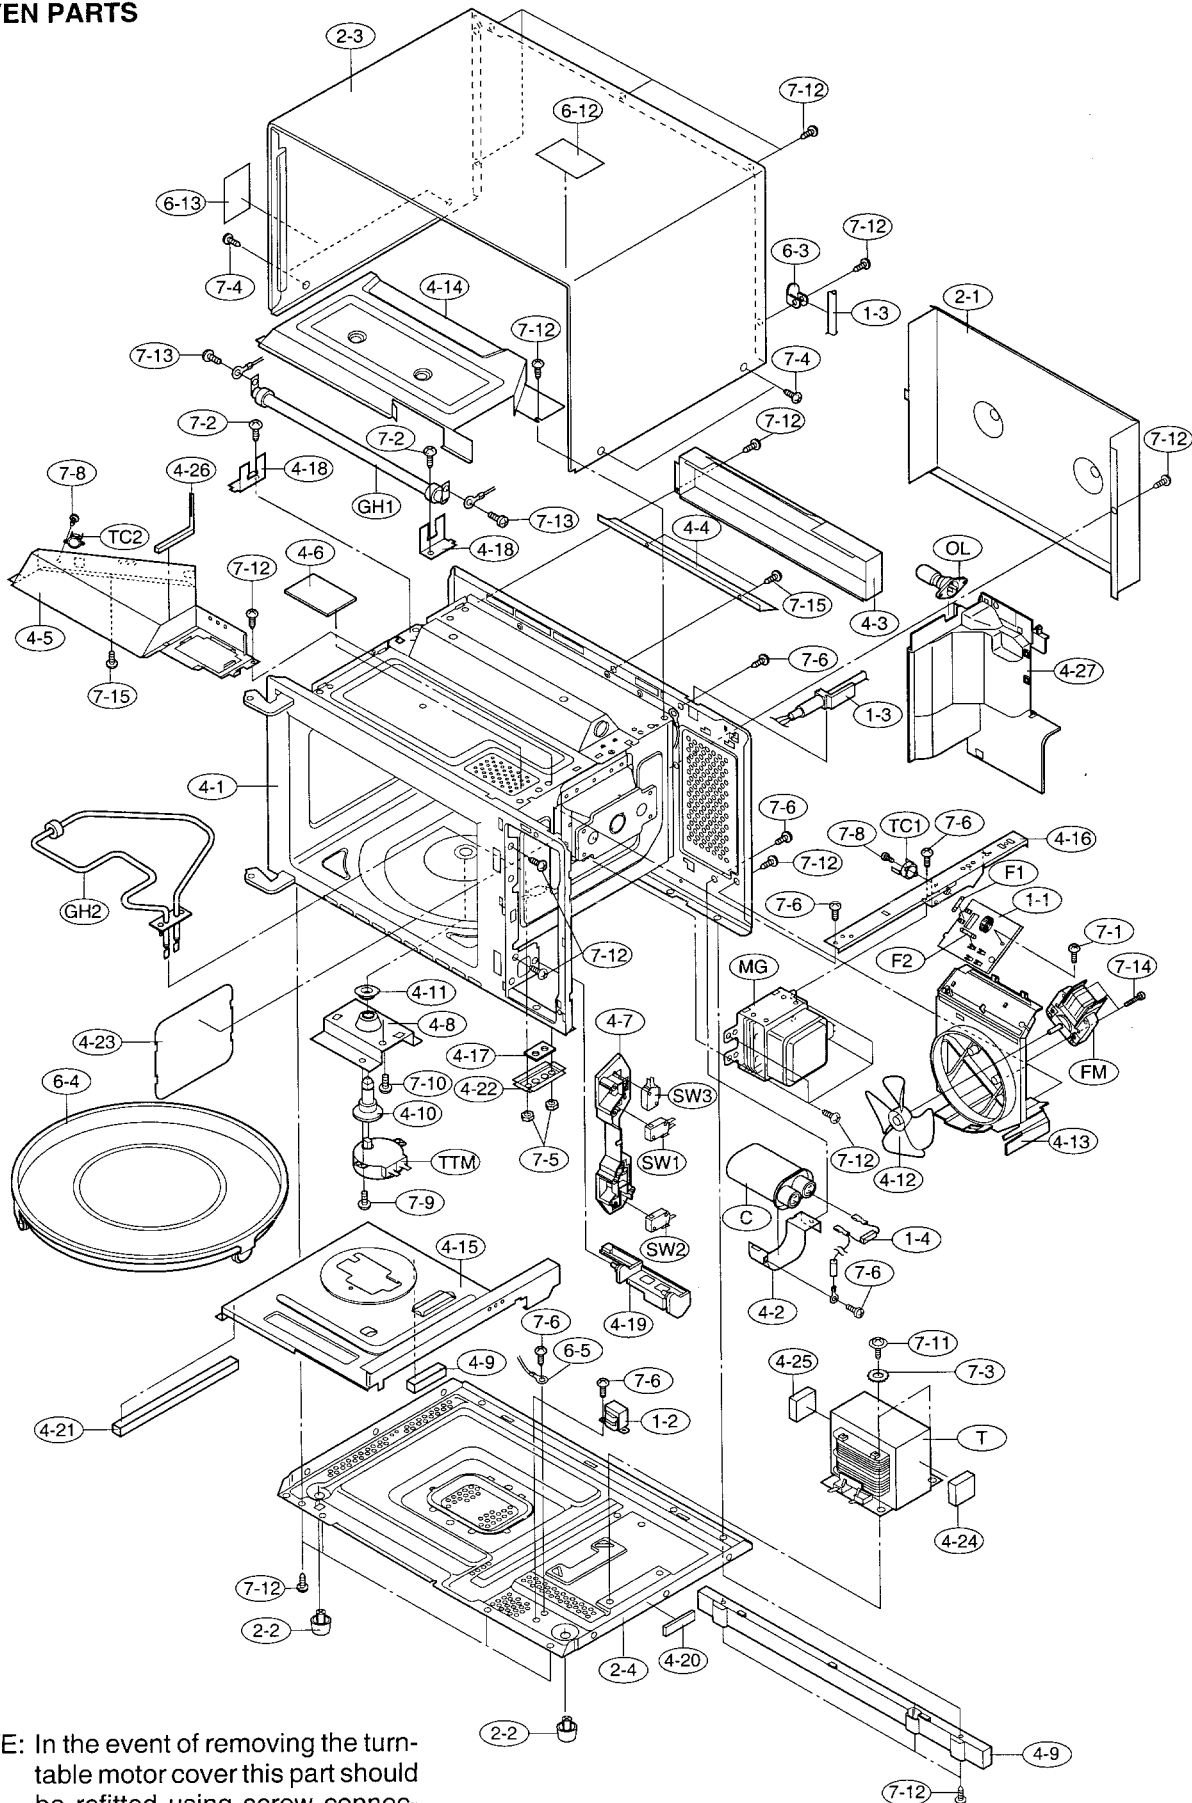

NOTE: In the event of removing the turntable motor cover this part should be refitted using screw connection: LX-EZA045WRE0 (7- 7)

CONTROL PANEL PARTS

