



OVEN PARTS

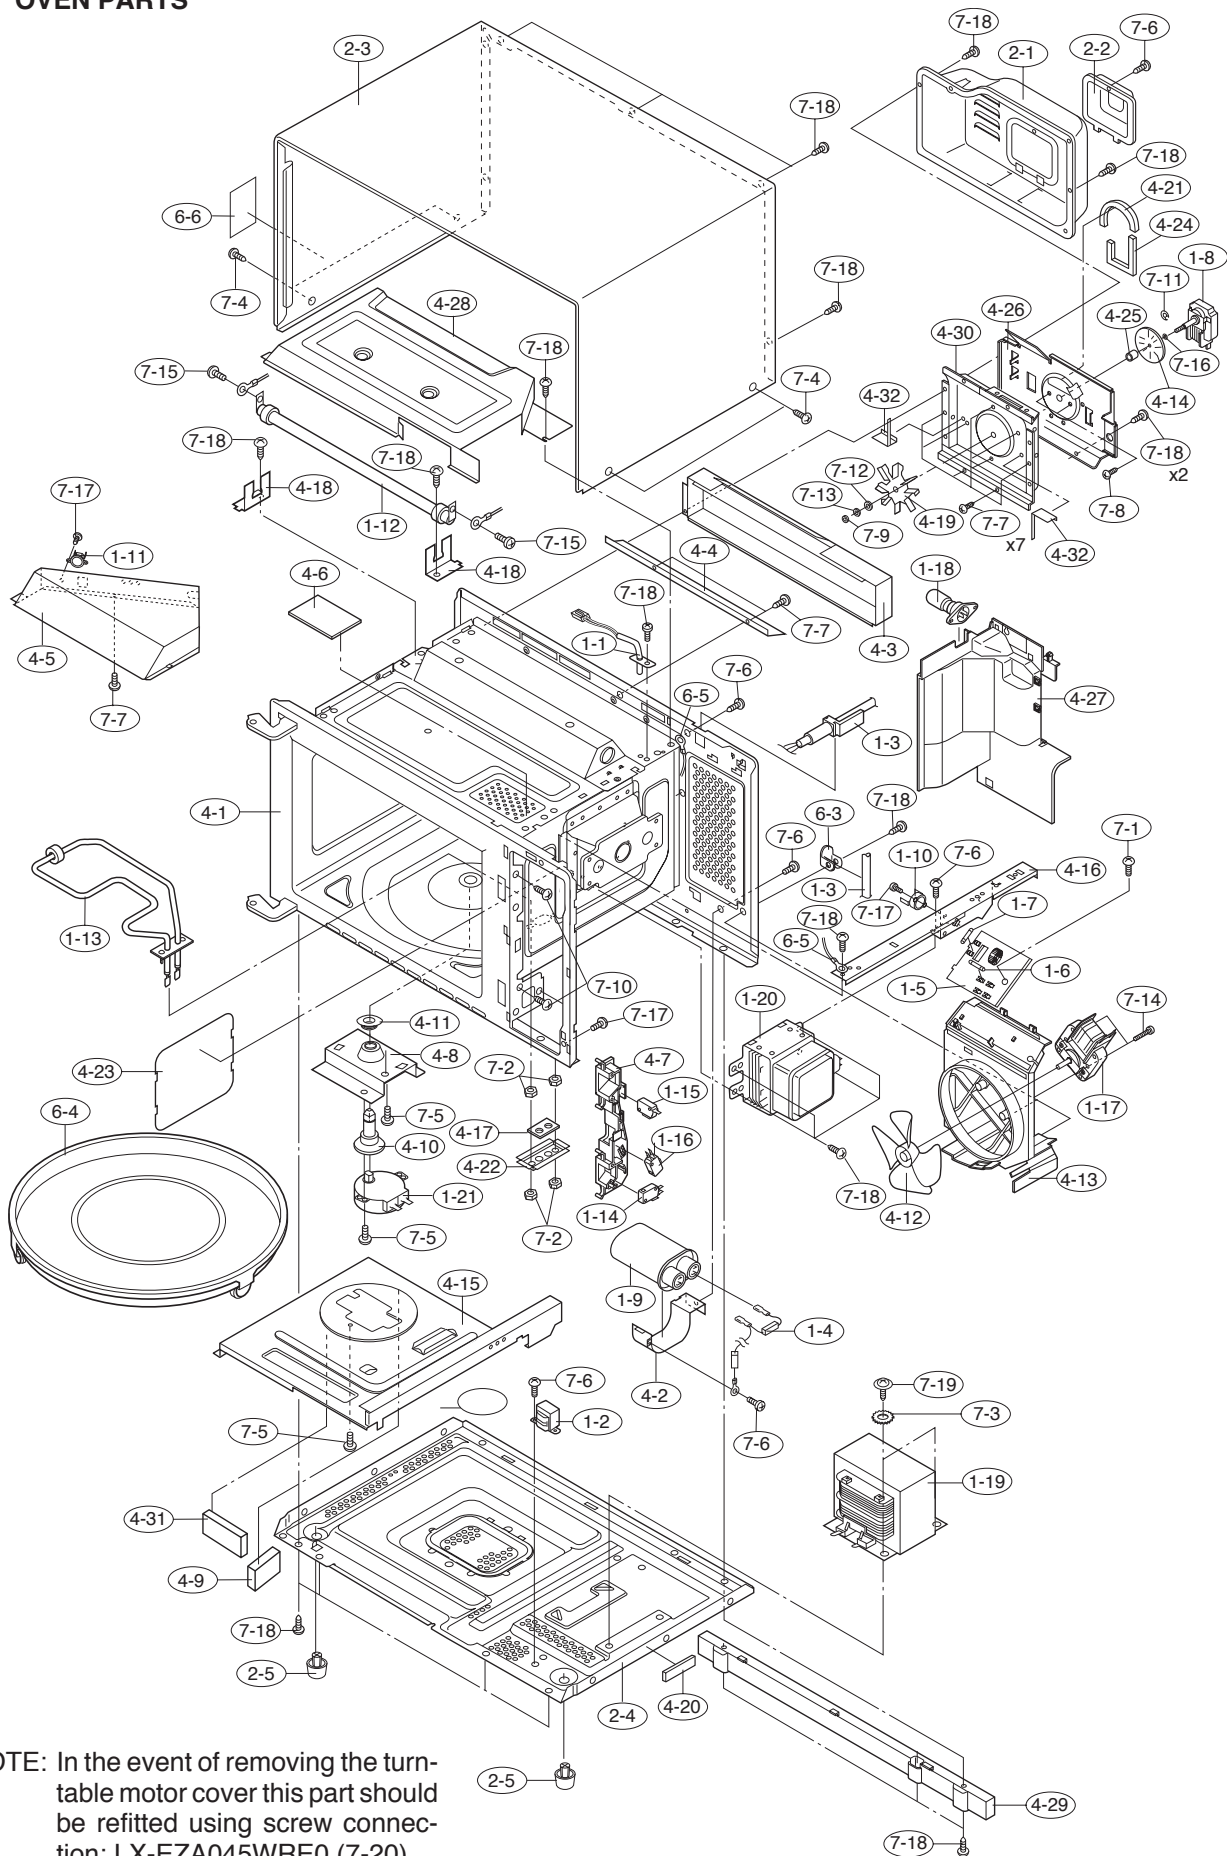


NOTE: In the event of removing the turntable motor cover this part should be refitted using screw connection: LX-EZA045WRE0 (7-20)

CONTROL PANEL PARTS

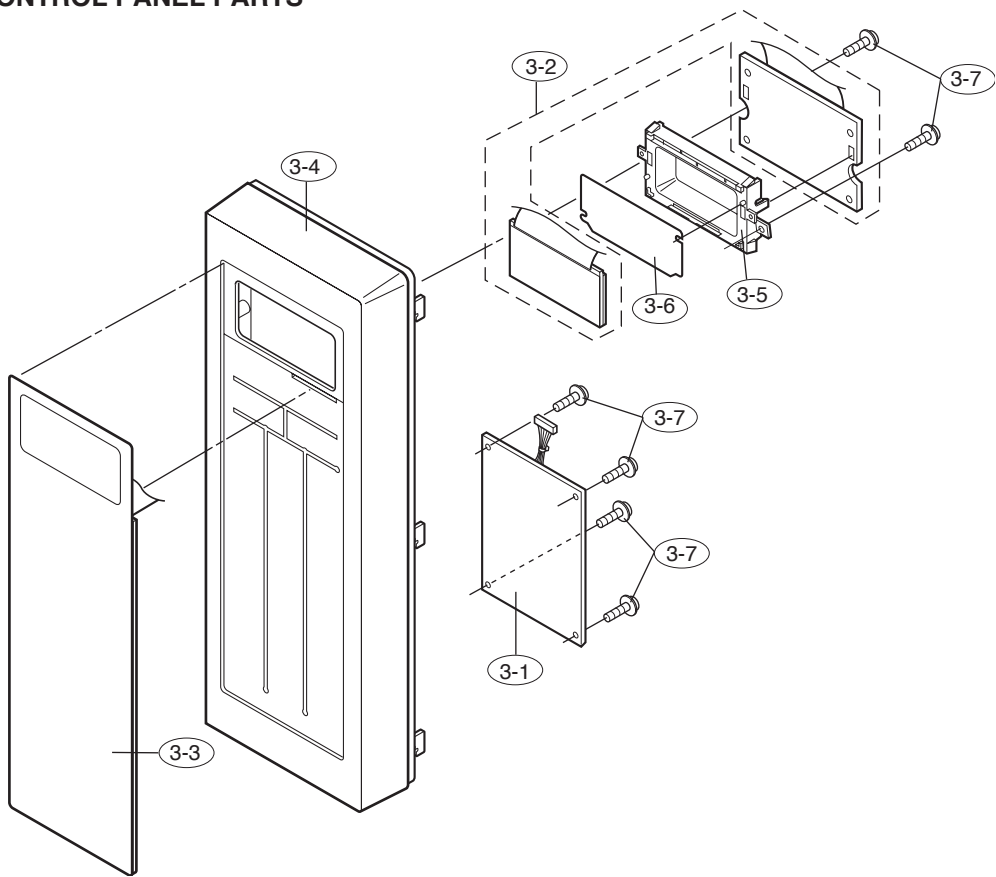

DOOR PARTS

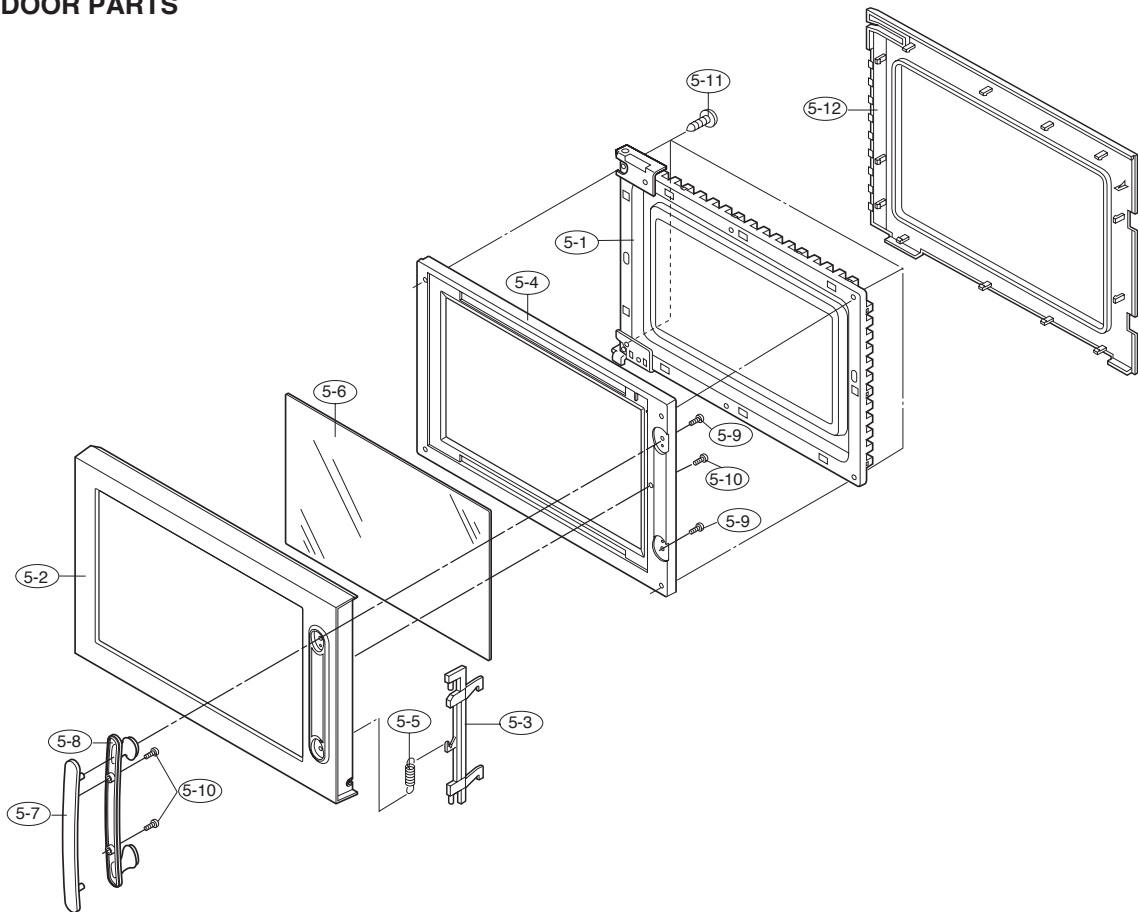

MISCELLANEOUS

