


Display and Control Panel

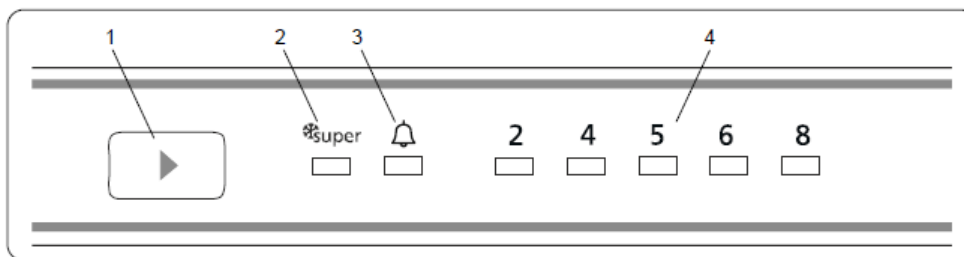

Using the Control Panel

1. Fridge temperature set button
2. Super cooling symbol (Super cooling LED)
3. Alarm symbol (Alarm LED)
4. Fridge adjusted temperature indicator

Fridge Temperature Set Button

This button allows setting temperature of the fridge. In order to set values for fridge partition, press this button. Use this button also to activate super cooling mode.

Alarm symbol (Alarm LED)

In case of a problem within the fridge, the alarm led will release red light.

Super Cooling Mode

When would it be used?

- To cooling huge quantities of food.
- To cooling fast food.
- To cooling food quickly.
- To store seasonal food for a long time.

How to use?

- Press temperature set button until süper cooling light comes on.
- Super cooling led will light during this mode.
- For optimal appliance performance in maximum cooling capacity, set the appliance to active super cooling mode 2 hours before you put the fresh food into the fridge.

During this mode:

If you press temperature set button, the mode will be cancelled and the setting will be restored from 2.

	BUILT IN – 1507 / 1907 / 2507 (PBD-S CAP)	
	Display and Control Panel	

Fridge Temperature Settings

- The initial temperature of the setting display is 5 °C.
- Press fridge setting button once.
- Every time you press the button, the setting temperature will increase. (2 °C, 4 °C, 5 °C, 6 °C, 8 °C, Super cooling)
- Press fridge setting button until süper symbol is displayed on your fridge to set super mode.
- Do not press any button within the following 3 seconds to keep chosen set.
- Super cooling will blink.
- If you keep on pressing, it will restart from last value.

Stand-By Mode

How To Activate ?

Set “2” set value and push set button until all leds are blink three times.

How It Works?

In stand-by mode; all components will be disabled. If user push set button while in stand-by mode, all leds will blink three times to show stand-by mode is active.

How To Deactivate ?

Push and hold set button until display returns to normal working. After the mode is eactivated, the “Alarm LED” may light on the display because the product may be hot. The “Alarm LED” will turn off when the product reaches normal temperature.


Door Open Alarm Function

If fridge door is opened more than 2 minutes, appliance sounds ‘beep beep’.

Demo Mode

Entering demo mode
The product can be set into demo mode within 1 minute after plugging the product.
While the product is set to super, demo mode is entered by pressing the set button for 10 seconds.
During demo mode
Super led continuously blinks
All functions of display work
Since the super led is flashing continuously to show the demo mode, the max led will go to super after it is lit, but the super will continue to flash continuously.
No errors shall appear in the display
Exiting demo mode
While the product is set to super, demo mode is exited by pressing the set button for 10 seconds.
All functions of display work

Changing The Door Swing Direction

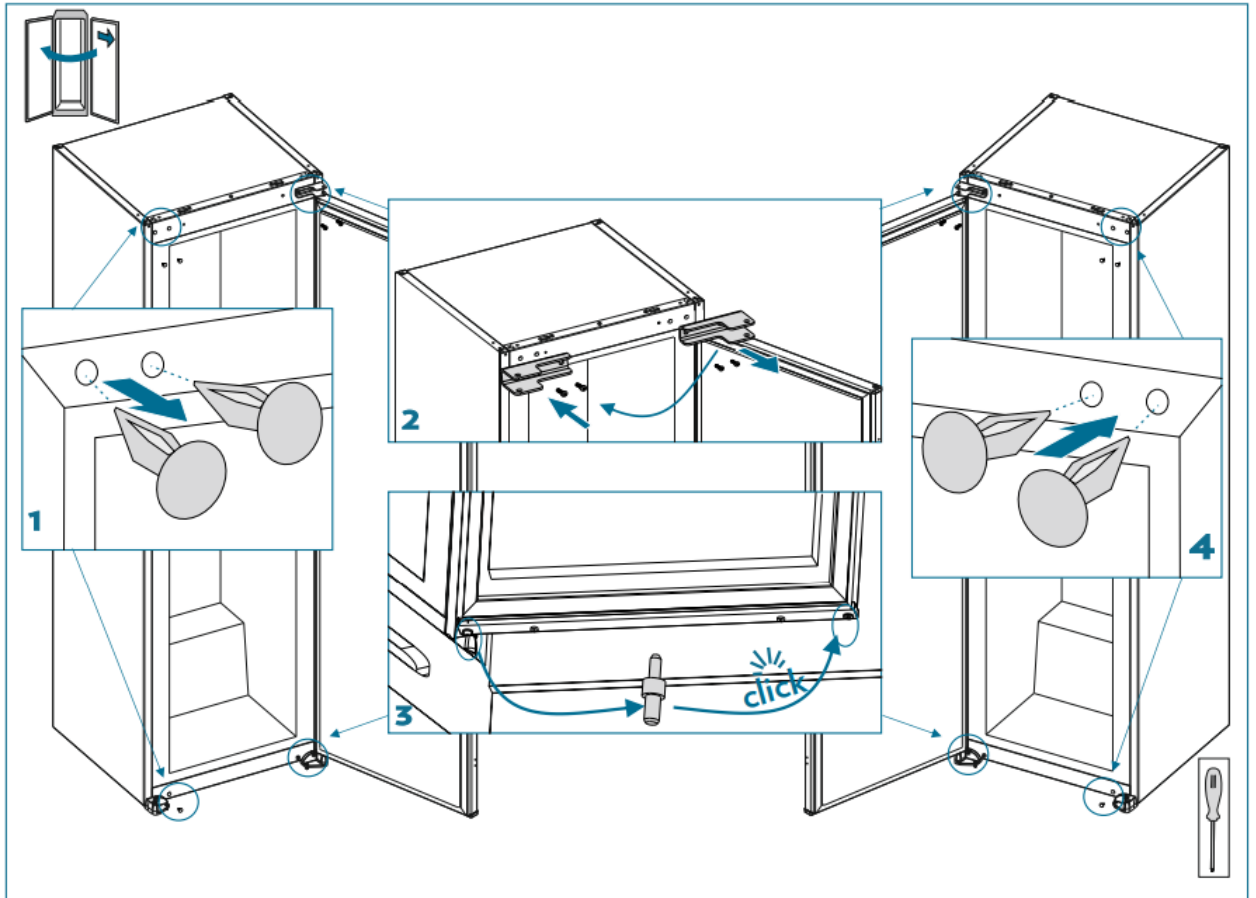

Replecament of Door Switch

Remove the door switch by pulling forward and disconnect switch connector.




Door switch
Door open = switch closed
Door closed = switch open



Warning: Pay attention not to damage to the door switch body details!


Replacement Led and Led Cover

Remove the led cover by pulling forward and disconnect the connector.

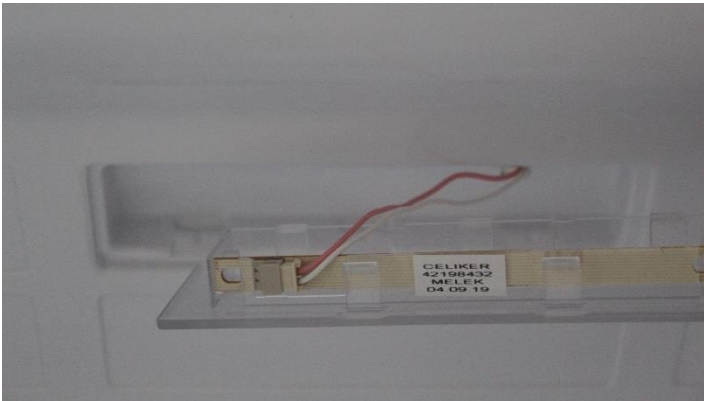


Replecament of Door Gasket

Pull the gasket towards starting middle of the top edge as shown. Slowly pull towards left and right corner. Then continue through frame until the gasket will completely removebe removed from door.

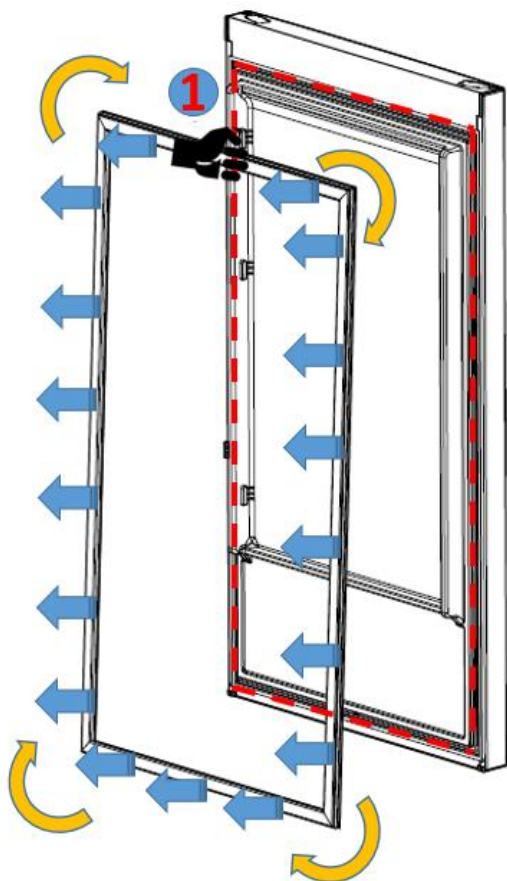


Check the replacement gasket form. Starting with upper left corner, press on the gasket until it fits to its place.. Place the other sides of the gasket with the help of your thumb as the sequence shown on picture.

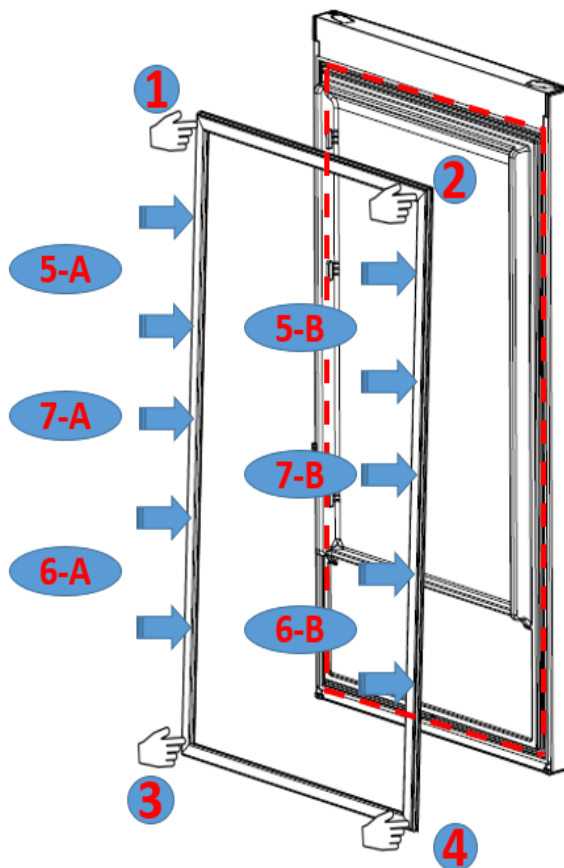

After the replacement check if there any non-fitting point on the gasket. Also check if there any opening at the gasket while the door is closed. If so that might cause condensation/icing or insufficient cooling/freezing. To prevent this soften the form of the gasket with the help of a hair dryer or hot water and make sure that all points are closing perfectly.




The plug must be pulled out before condanser is removed.

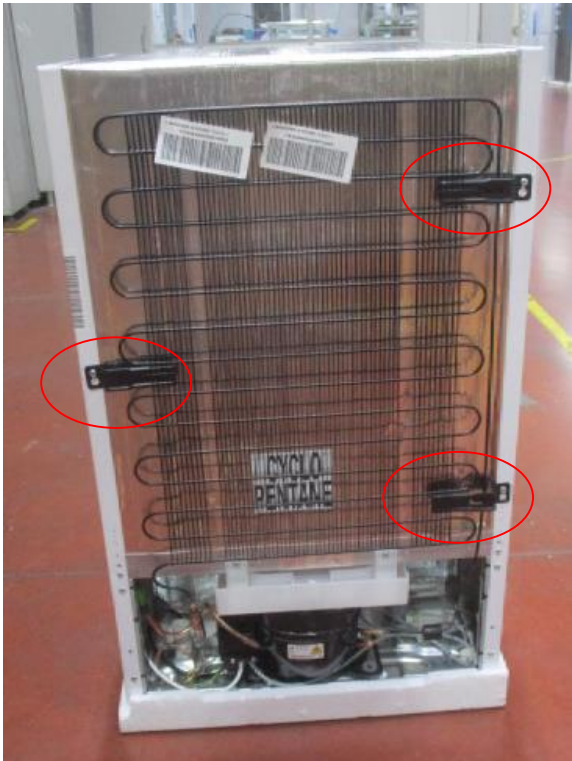

Dissassemble the back condanser by using the screwdriver to remove 3 screws.

Separate the compressor by using the plier to cut the welding connector.

Condensation water tray

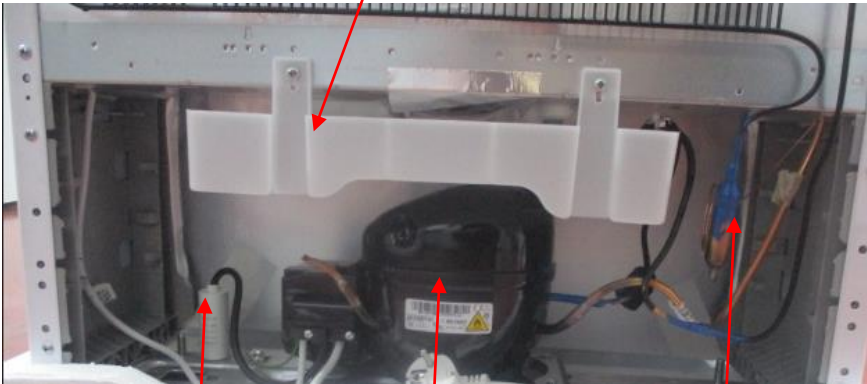

Capacitor
(Optional)

Compressor

Dryer

Vestel refrigerator serial numbers are consist of 22 digits.

