

1. Troubleshooting for electric machine

SYMPTOM	CHECK FOR THE FOLLOWING	REEDY
the drying light flicker fleetly	The water supply is turned off	Turn the water supply on
	The pipe was snapped	Put the pipe in the right way
	Low water pressure	Minimum water pressure of 0.04Mpa
	Defective water fill valve	Replace the water fill valve
	Obstructed water fill valve or hose	Disassemble and clean the water fill valve and hose
	Damaged or defective wiring	Repair the wiring
	Defective pressure switch(not for 9319A)	Replace the pressure switch
	Heavy water usage elsewhere in home.	Use dishwasher when water usage is at a minimum.
	Defective the electric control	Replace the electric control
the rinse light flicker fleetly	The sump or the filter was obstructed	Clear the sump and filter
	Damaged or defective drain pump	Replace the drain pump
	Drain hose was obstructed or snapped	Put the hose in the right way
	Defective pressure switch	Replace the pressure switch
	Damaged or defective wiring	Repair the wiring
	Defective the electric control	Replace the electric control
the rinse light and drying light flicker fleetly	The voltage too low	Minimum voltage of 198V
	Damaged the thermostat	Replace the thermostat
	Damaged or defective wiring	Repair the wiring
	The NTC thermistor was damaged or not in the right position	Replace the thermistor or make it in the right position
	Damaged the heating element	Replace the heating element
	Defective the electric control	Replace the electric control
the wash light flicker fleetly	The sump or the filter was obstructed	Clear the sump and filter
	Soap suds leak from dishwasher	Refer to owners manual
	Damaged the sump/pump/tub/drain pump	Repair or replace the sump /pump /tub/drain pump
	Damaged or defective The drain pump (for 9319A)	Replace the drain pump
	Drain hose was obstructed or snap (for 9319A)	Put the hose in the right way
	Defective pressure switch(not for 9319A)	Replace the pressure switch
	Loose hose clamps	Tighten or replace hose clamps
	Loose heater element	Tighten heater element mounting nuts
	Loose sump	Tighten the sump
	Loose axe of the lower spray arm	Tighten the axe
	Loose softener	Tighten the softener
	Damaged or defective wiring	Repair the wiring
	Defective the electric control	Replace the electric control

the wash light and rinse light flicker fleetly	The NTC thermistor was damaged or not in the right position	Replace thermistor or make it in the right position
	The temperature is lower than -20°	Temperature should be higher than -20°
	Damaged or defective wiring	Repair wiring
	Defective electric control	Replace electric control
The wash light, rinse light and drying light flicker fleetly	NTC thermistor was damaged	Replace thermistor
	temperature is higher than 120°	The temperature should be below than 120°
	Damaged or defective wiring	Repair wiring
	Defective electric control	Replace electric control