

BUILT IN OVEN SERVICE MANUAL CONTENTS


1. Upper and Rear Panel	2
2. Side Panel	3
3. Bottom Panel	4
4. Front Panel	5
5. Full Glass Doors	7
6. Flat Oven Doors	11
7. Fan Cover	15
8. Catalytic Shelf	16
9. Cooling Fan	17
10. Upper Heater	19
11. Ring Heater	20
12. Bottom Heater	21
13. Oven Light Group	23
14. Fan Motor	24
15. Turnspit Motor	25
16. Changing Visio Touch Control Panels / Visio Touch Error Codes	26

BUILT IN OVEN SERVICE MANUAL

For disassembling upper panel, unscrew which are shown inside circles.



For disassembling rear panel, unscrew which are shown inside circles. Also, unscrew the screws right side of rear panel which is placed same locations

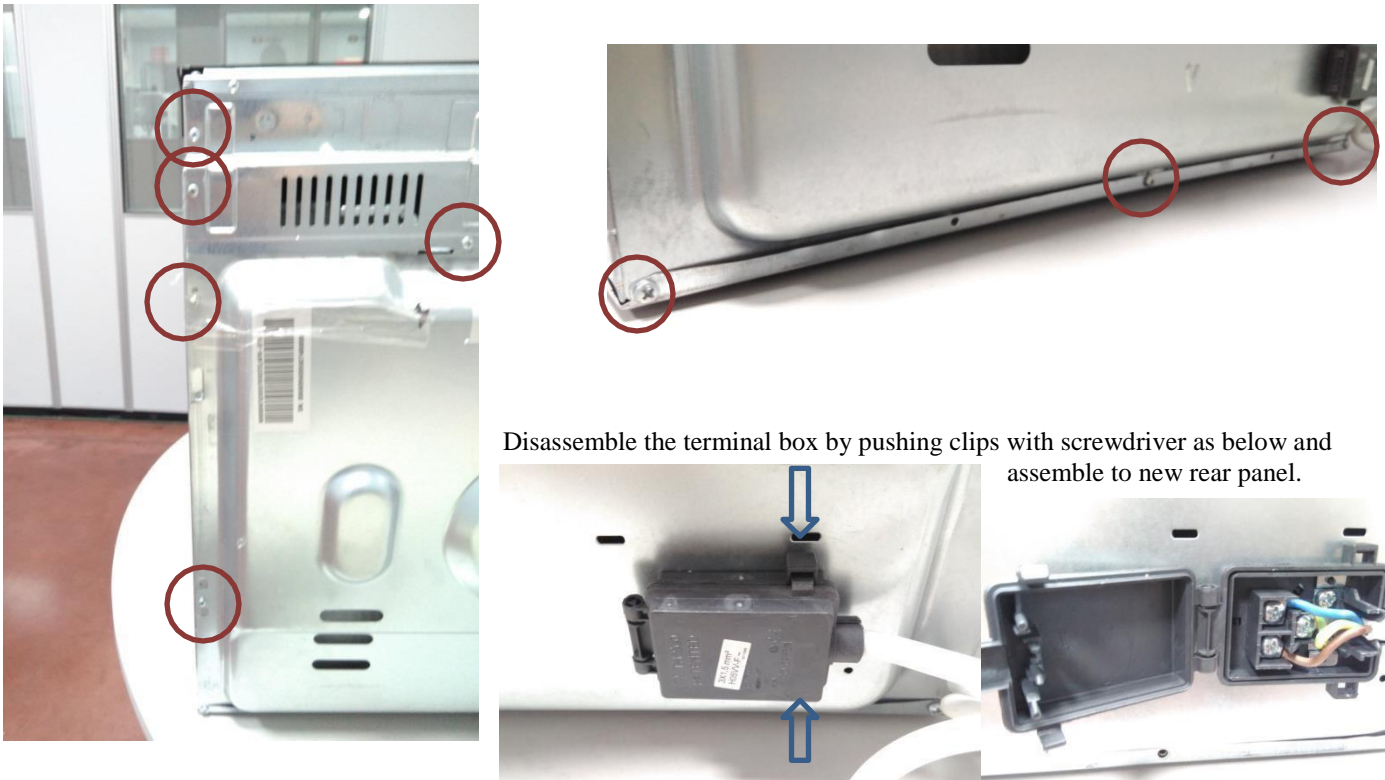



Disassemble the terminal box by pushing clips with screwdriver as below and assemble to new rear panel.

BUILT IN OVEN SERVICE MANUAL

Free the rear panel from clips.




For disassembling side panel, unscrew which are shown inside circles at rear, upper and side panels.

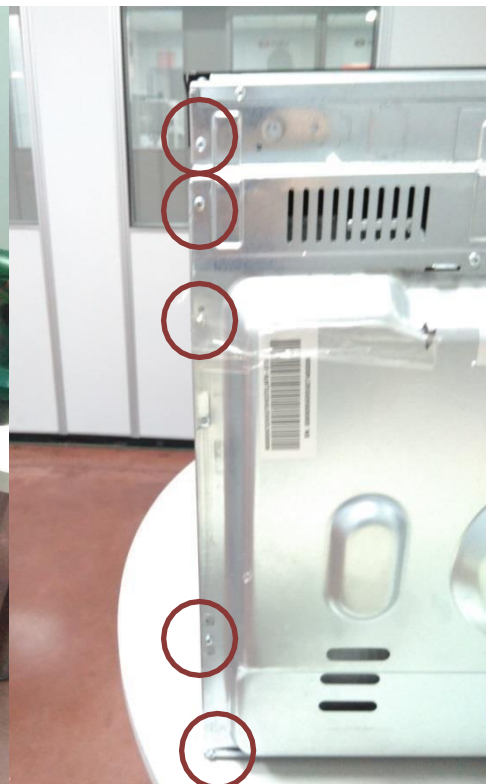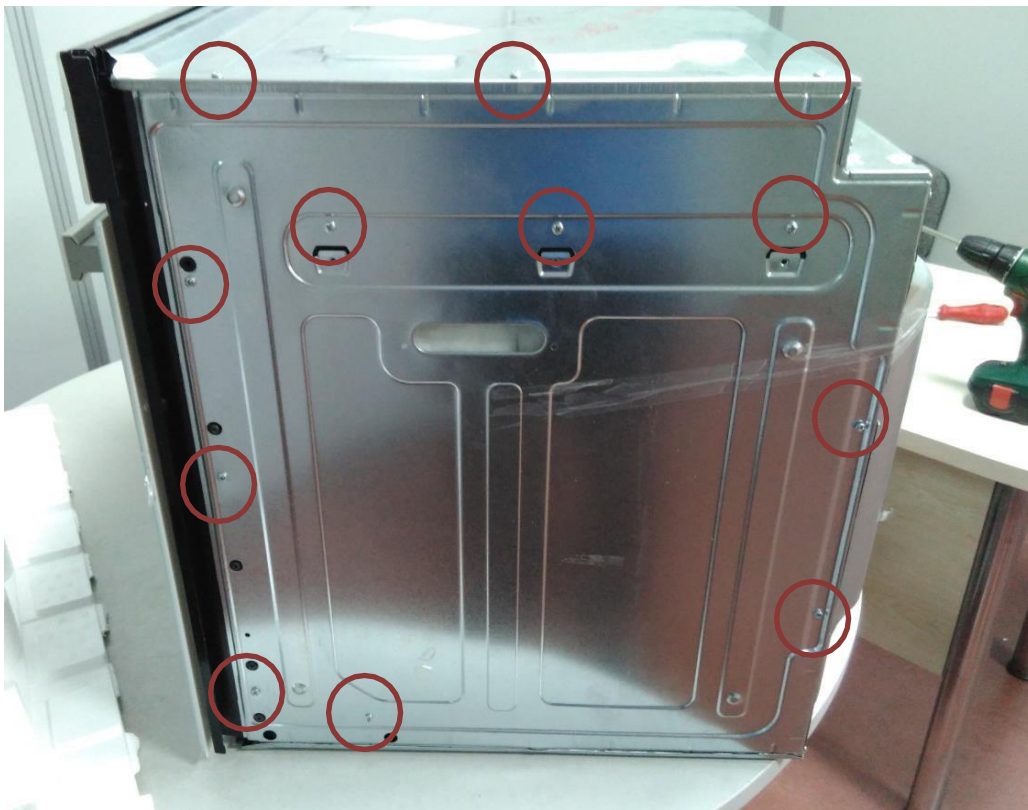

BUILT IN OVEN SERVICE MANUAL

For disassembling bottom panel, unscrew which are shown inside circles at rear, buttom panels.

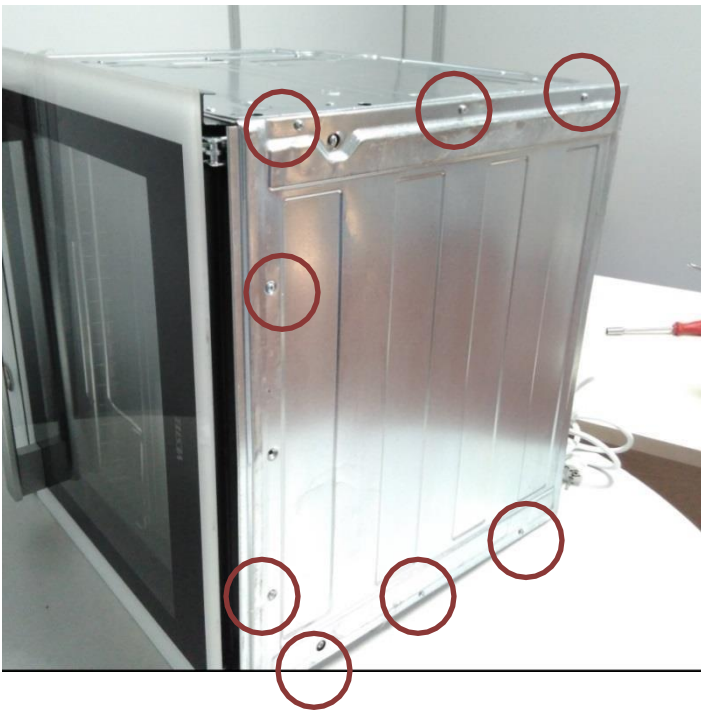


BUILT IN OVEN SERVICE MANUAL

Disassembly of Front Panel


Unscrew the screws which is at bottom of front panel. Some models have 3 screws which are located, right, left and middle.



Remove the knobs by pulling.

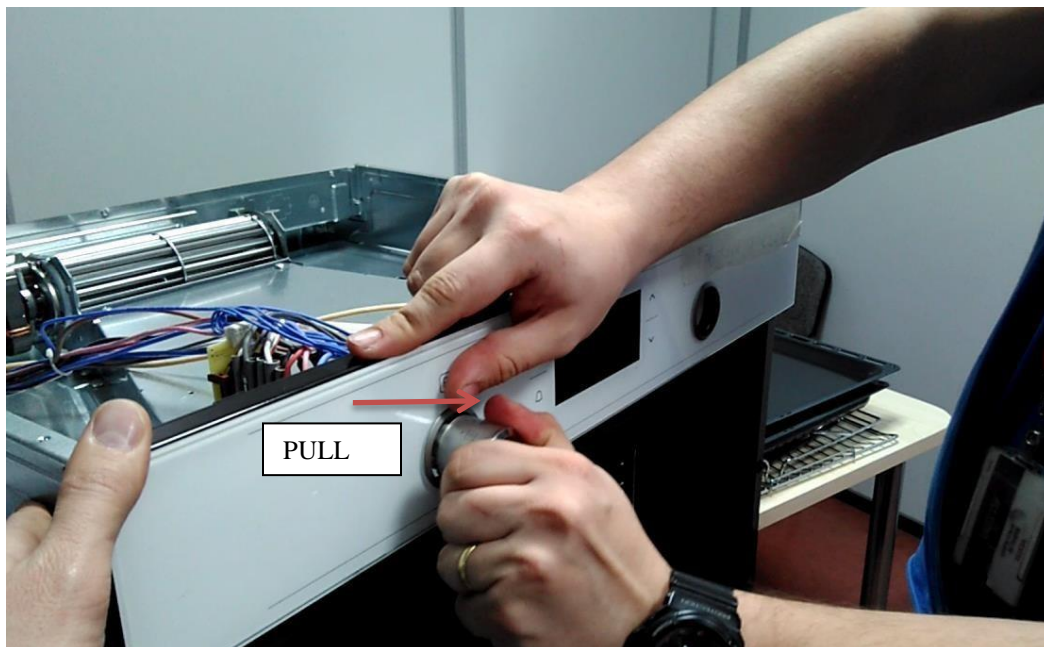

Pull to right the panel for removing the clips from inner panel.

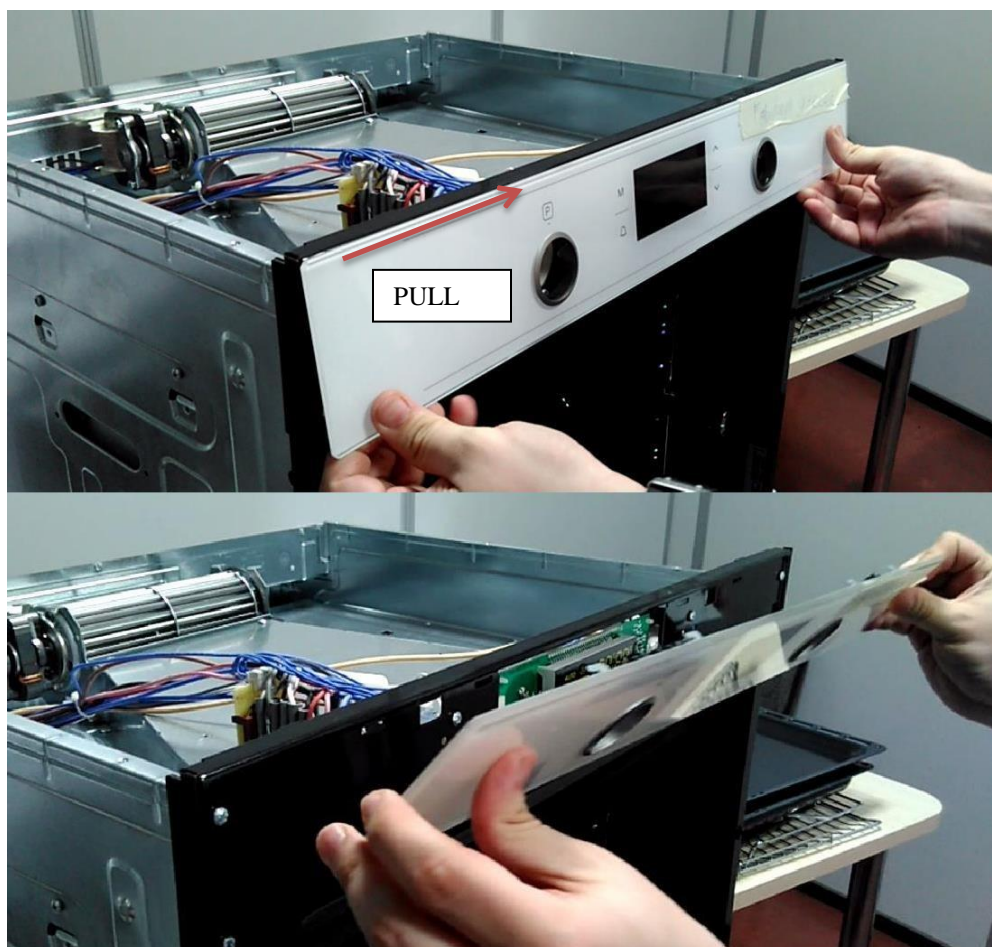


BUILT IN OVEN SERVICE MANUAL

DISASSEMBLY OF FULL GLASS DOORS




After unlock the hinge, pull and free the door as below.

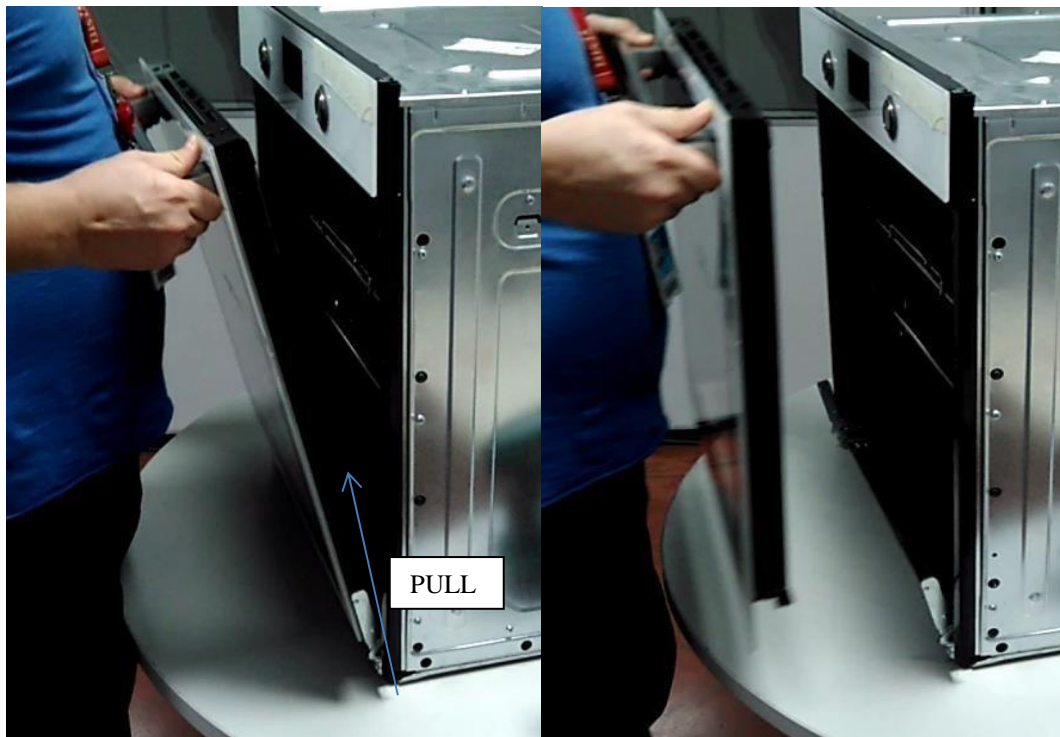

BUILT IN OVEN SERVICE MANUAL

If product has easy to remove glass, remove inner glass as below.

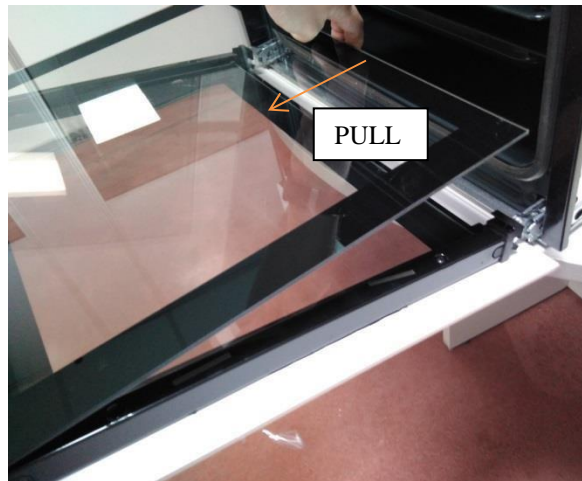

Unscrew as below to disassemble door profile.



BUILT IN OVEN SERVICE MANUAL

If there is a middle glass, remove it as below. For assembly, be sure the glass fit properly.



BUILT IN OVEN SERVICE MANUAL

Disassemble plastic hinge slot as below



Disassemble removable inner glass spring as below,




BUILT IN OVEN SERVICE MANUAL

DISASSEMBLY OF FLAT OVEN DOORS



After unlock the hinge, pull and free the door as below.

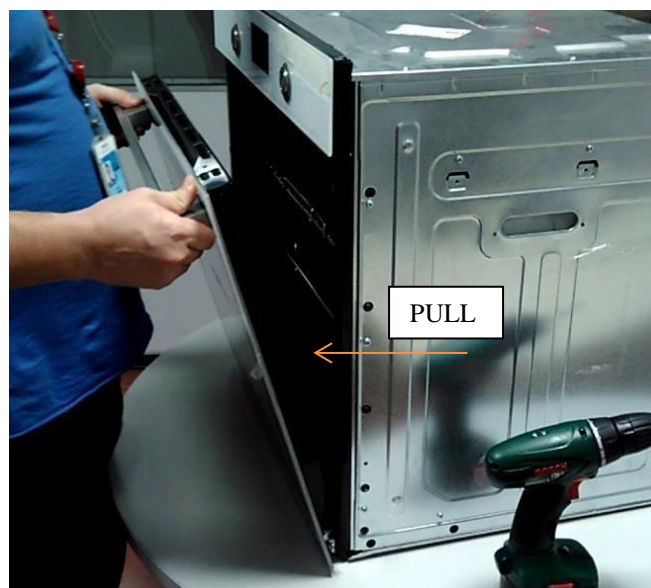


BUILT IN OVEN SERVICE MANUAL

Unscrew as below to disassemble door profile.




Remove inner glass as below.

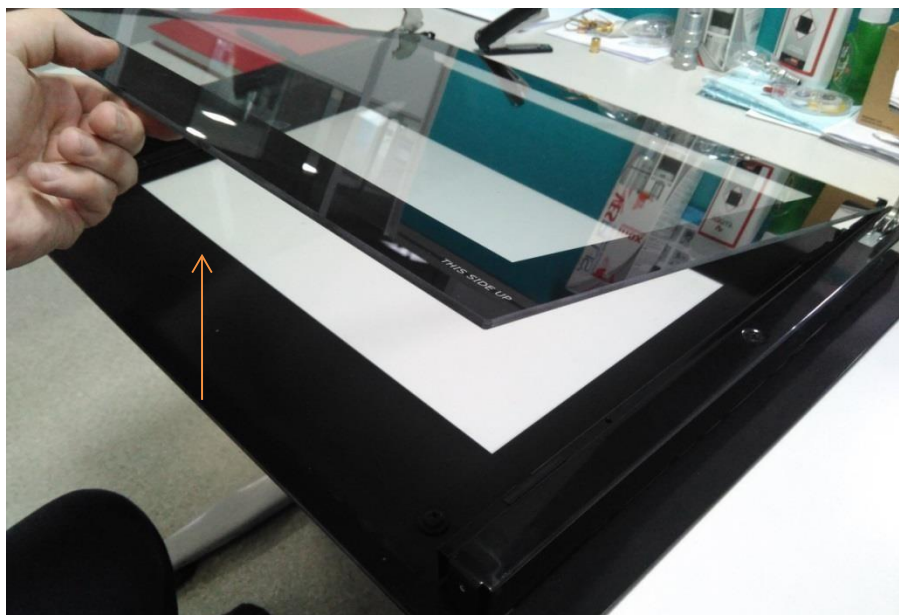

BUILT IN OVEN SERVICE MANUAL

Remove hinge as below

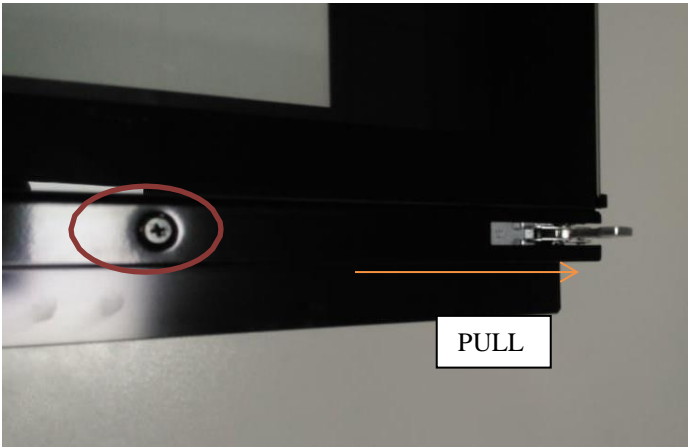

Remove handle as below



BUILT IN OVEN SERVICE MANUAL

Changing full glass door hinges




OR



BUILT IN OVEN SERVICE MANUAL

Disassembly Of Fan Cover

Unscrews the screws which are shown as below

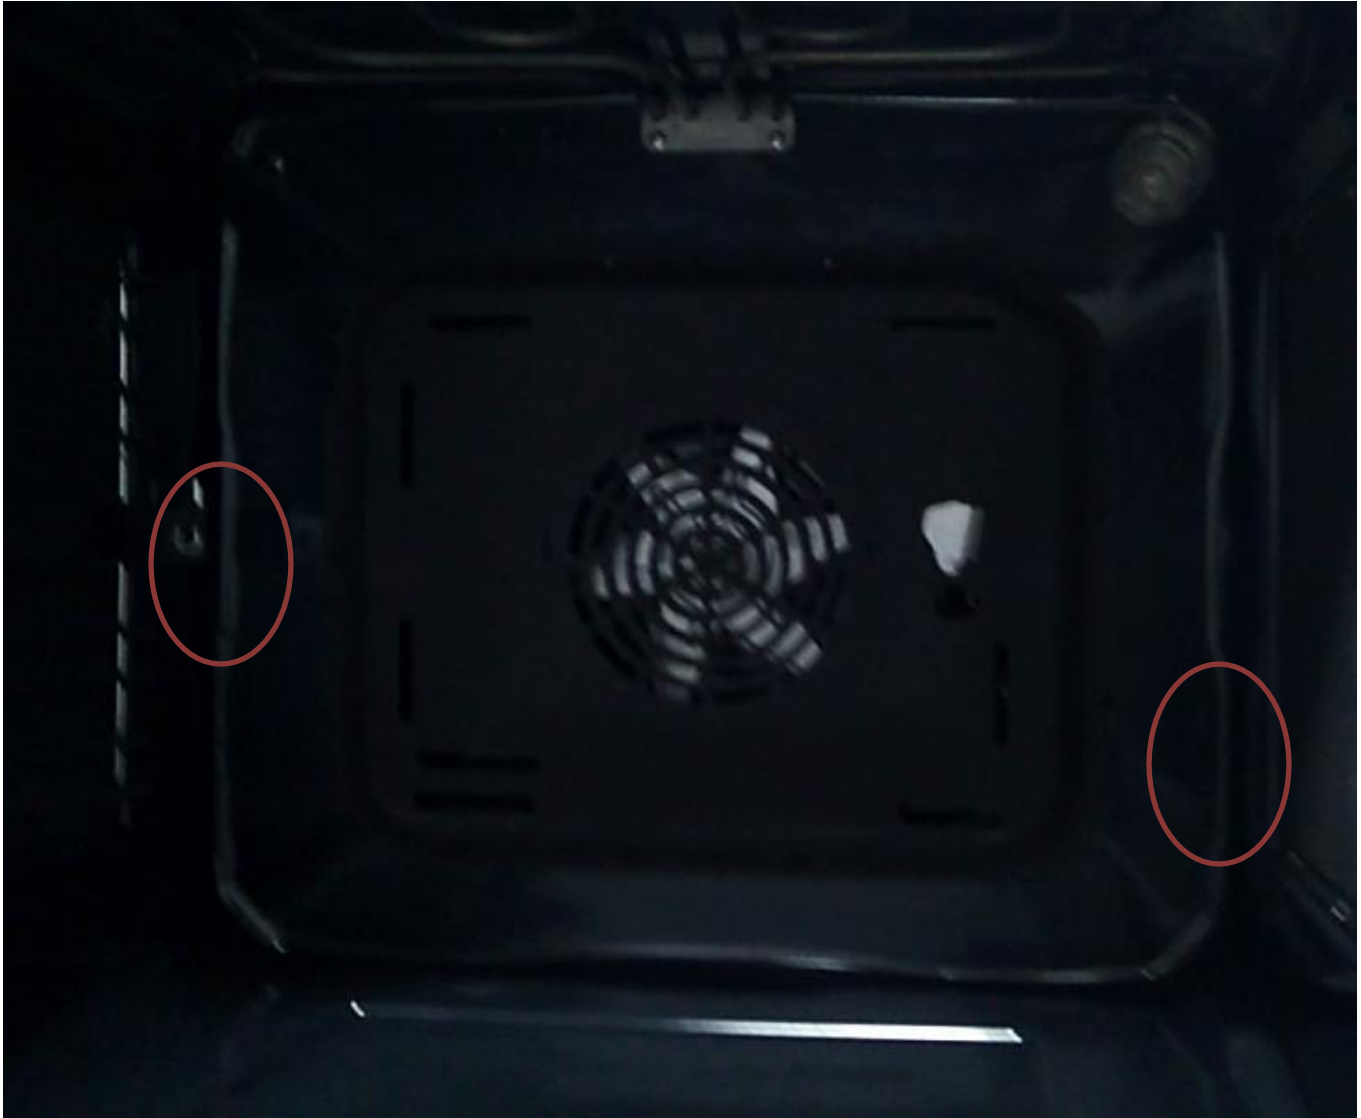

BUILT IN OVEN SERVICE MANUAL

Disassembly Of Catalytic Shelf


Unscrews six screws which are shown as below




BUILT IN OVEN SERVICE MANUAL

Disassembly Of Cooling Fan

unscrew which are shown inside circles.

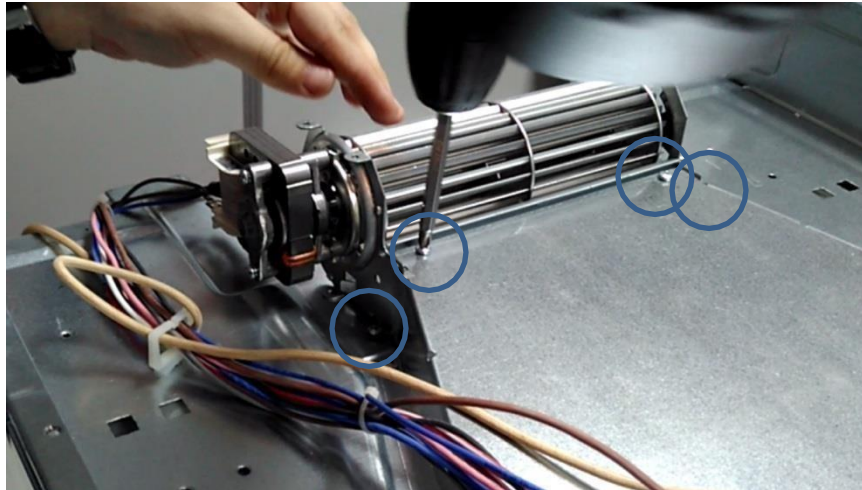


Pull the motor to below direction and remove

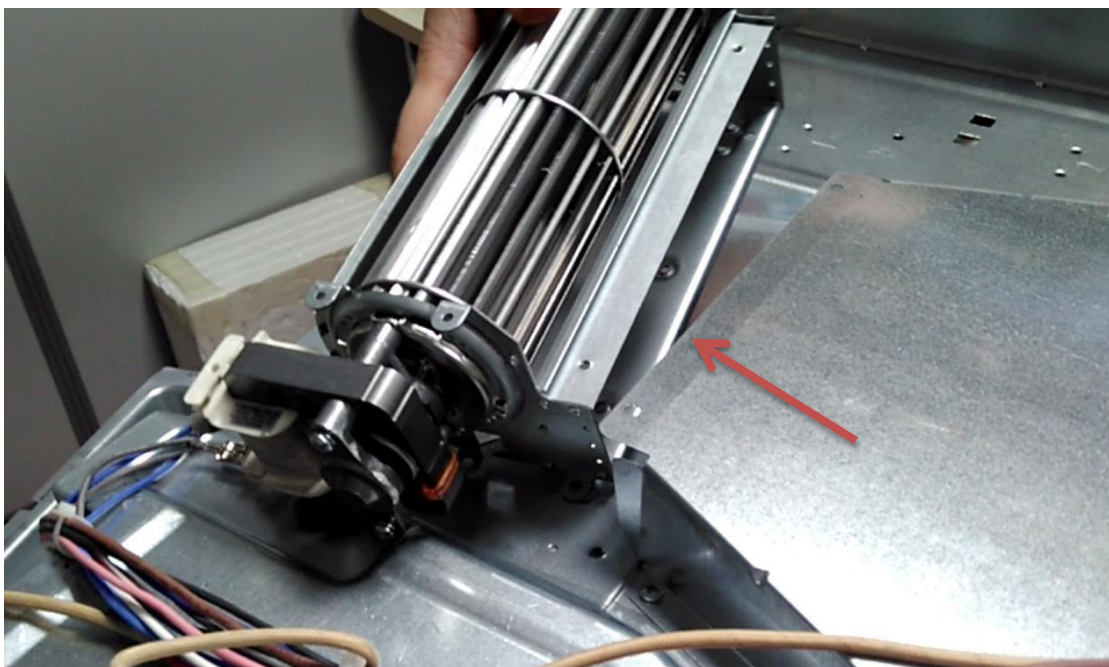

BUILT IN OVEN SERVICE MANUAL

Disassembly of new design cooling fan

unscrew which are shown inside circles.

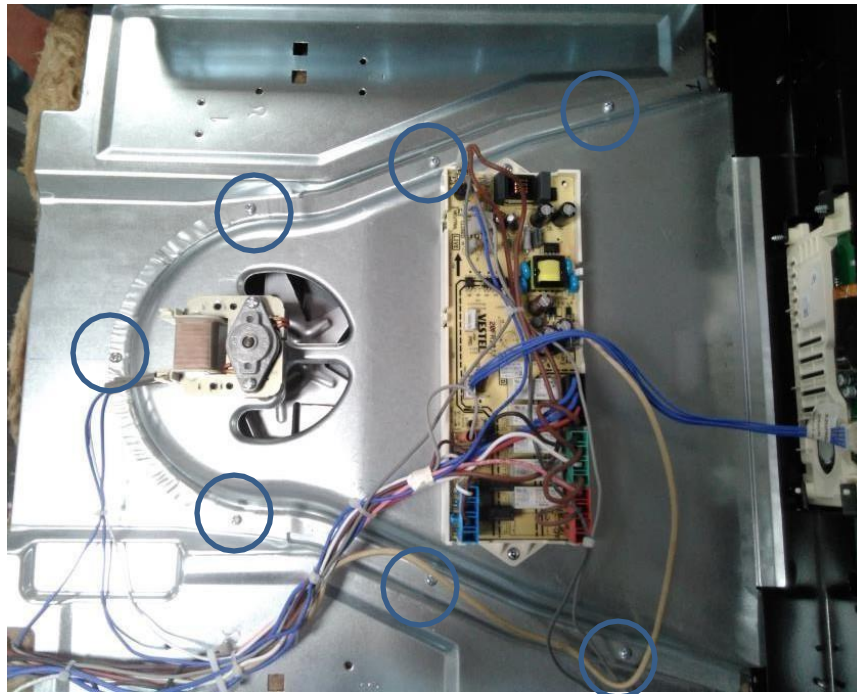

Detach the nut by turning counterclockwise

Unscrew and free cooling fan



BUILT IN OVEN SERVICE MANUAL

Disassembly Of Upper Heater

Remove wiring connections from rear side.




Unscrew which are shown inside circles.



BUILT IN OVEN SERVICE MANUAL

Disassembly Of Ring Heater

Remove wiring connections from rear side

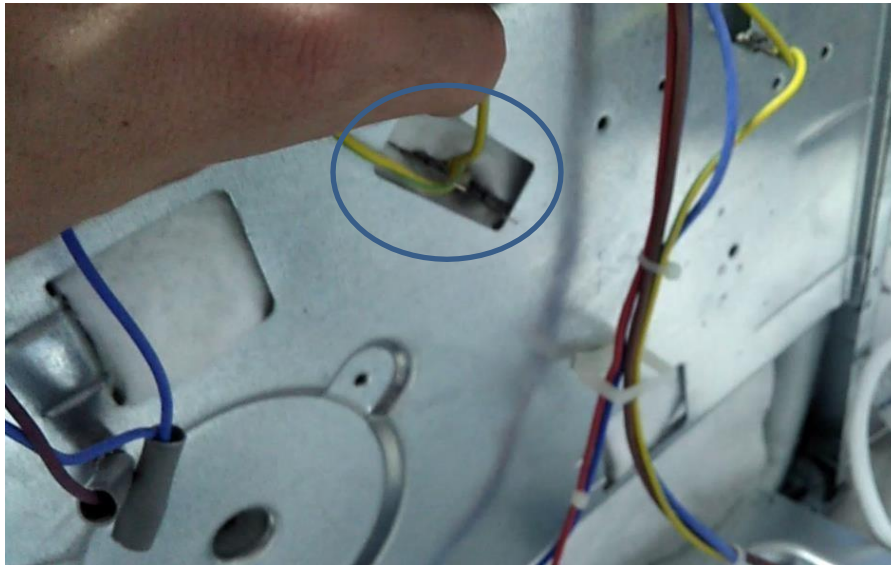


Unscrew which are shown inside circles.



BUILT IN OVEN SERVICE MANUAL

Bottom Heater:

Open the rear panel of the oven.
Remove the cables which are connected to bottom heater.

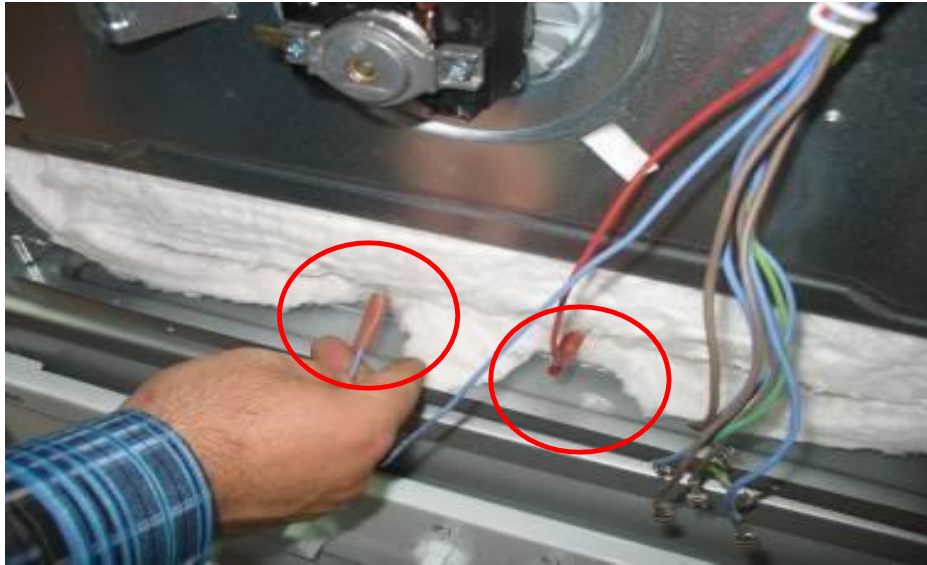

Raise the isolation wool softly upwards, remove the left and right screws which are connects bottom heater protection sheet metal to oven.



BUILT IN OVEN SERVICE MANUAL

Remove the protection sheet metal of bottom heater by pushing softly downward and pulling it to yourself..



Pull out the bottom heater by raising it to upwards softly.



BUILT IN OVEN SERVICE MANUAL

Follow these instructions backwards while re-assembly.


Disassembly Of Oven Light Group.

Remove wiring connections and push the clips. After that push lamp to inside of cavity.



Disassembly Of Only Bulb


Remove the cover by turning as below direction and remove bulb as same.

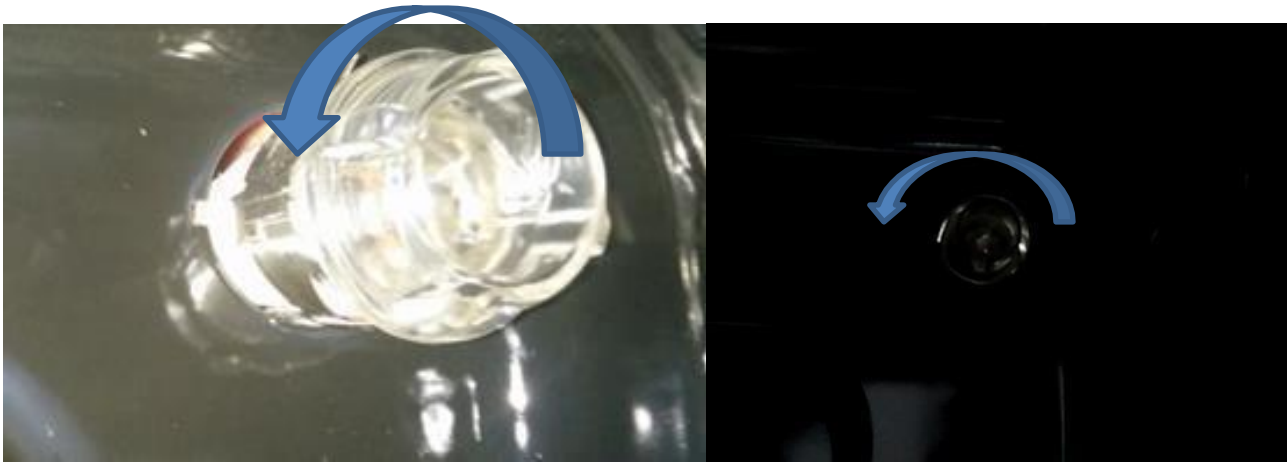


BUILT IN OVEN SERVICE MANUAL

Disassembly Of Fan Motor

Disassemble the nut as below direction to remove, for assembling, be careful about "D" form.

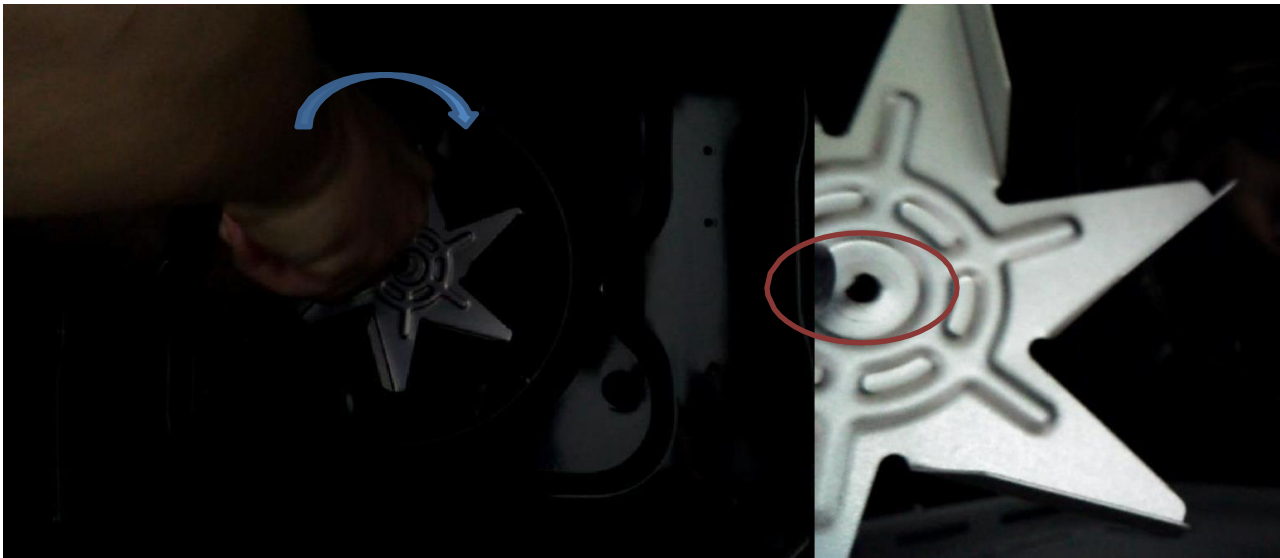


After that, remove the screws which hold fan motor.

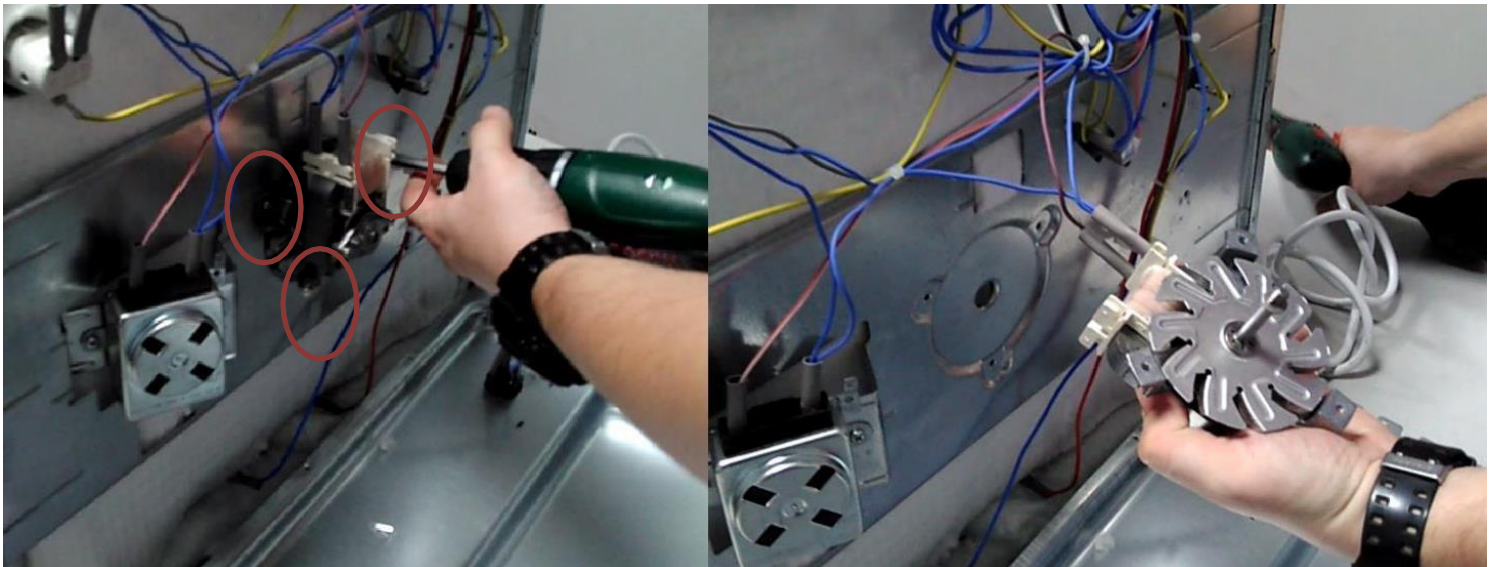

BUILT IN OVEN SERVICE MANUAL

Dissassembly Of Turnspit Motor

Remove the screws as below.

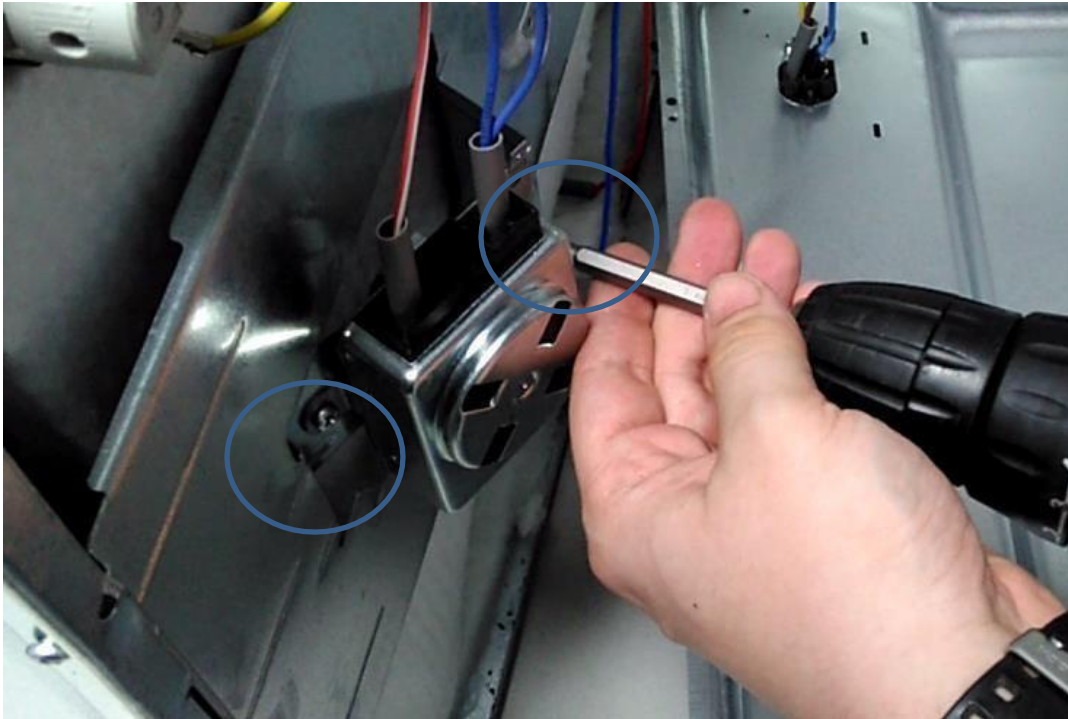


BUILT IN OVEN SERVICE MANUAL


Changing Visio Touch Control Panels / Visio Touch Error Codes

ER1: There is a fault with the pt1000 sensor (circuit, sensor or cable) that detects the internal temperature of the oven.

1. Check PT1000 connections at display.

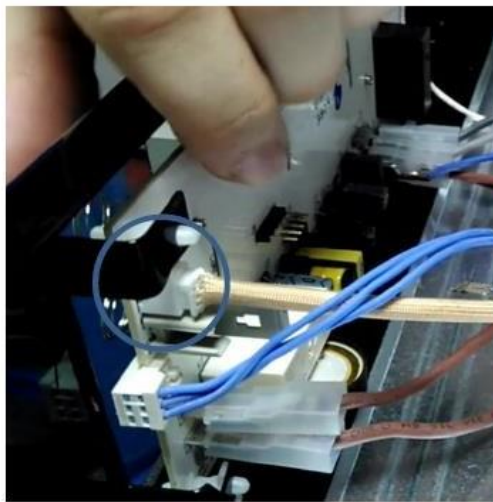

2. Remove PT1000 from Visio touch and unscrew the bulb from cavity as below.

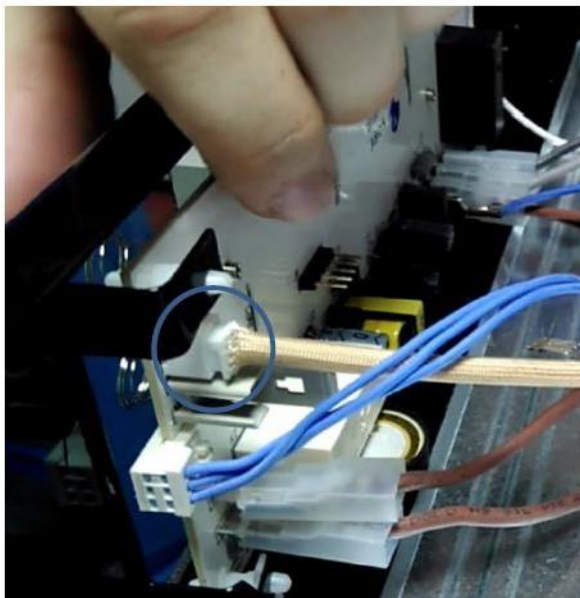


BUILT IN OVEN SERVICE MANUAL

3. If problem is not solved, change visio touch. Remove the visio touch by using nippers



ER2: Error about encoder of thermostat

Check encoder wiring

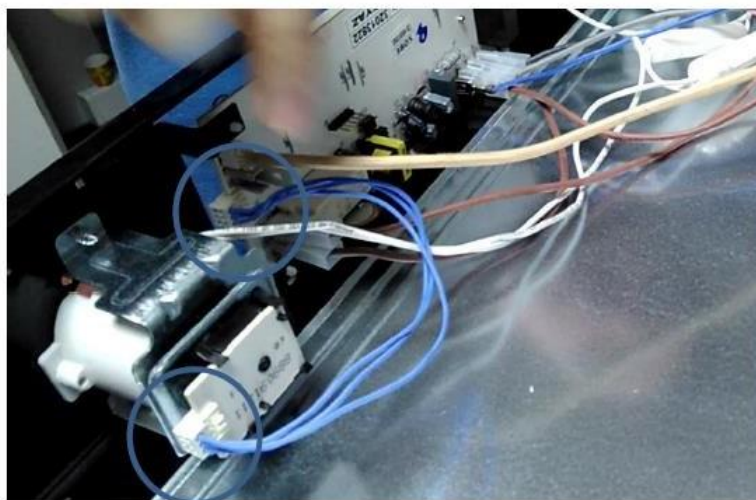


BUILT IN OVEN SERVICE MANUAL

Change encoder cable . if problem not solved, change encoder itself.



ER3: Error about Meat Probe

Check wiring of meat probe or encoder connections. if problem not solved, change meat probe, if error still continues, change encoder.

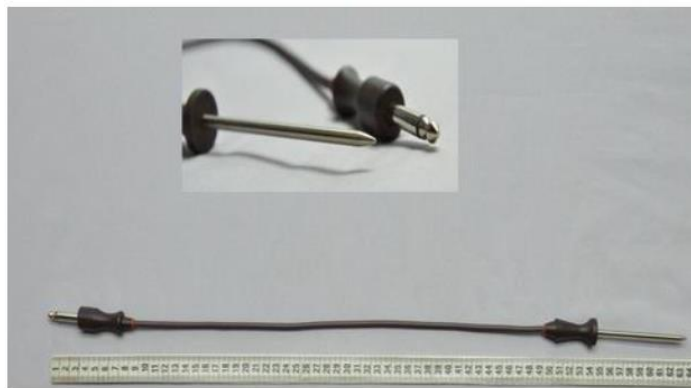

BUILT IN OVEN SERVICE MANUAL

If there is a temporary disconnection when Er 1, Er 2 or Er 3 occurs, the "-" and "+" keys can be pressed together to bring the oven to ready status. If the fault is not temporary, the electronic circuit must be repaired.

ER4: Oven temperature is higher than 350 degrees.

When Er 4 is formed, the oven can be used again by pressing the "-" and "+" keys together when the oven temperature falls below 260 ° C.

If temperature is not decreased, change limit thermostat.



If limit thermostat is active, check PT1000 and encoder of thermostat, if you find a problem change the part.


ER5: While manual cooking and cooking with meat probe, there is a maximum cooking time. If function is not changed for 3 hours, heaters will be stopped and error code is shown on display.

When Er 5 is formed, the oven can be ready to use again by pressing the "-" and "+" keys together


ER6: If door lock is not detected when the door is locked, the resistances are disabled and the error condition is indicated.

Check door lock connections, change door lock or cables. if the problem not solved, change Visio Touch


FULL TOUCH OVEN ERROR CODES

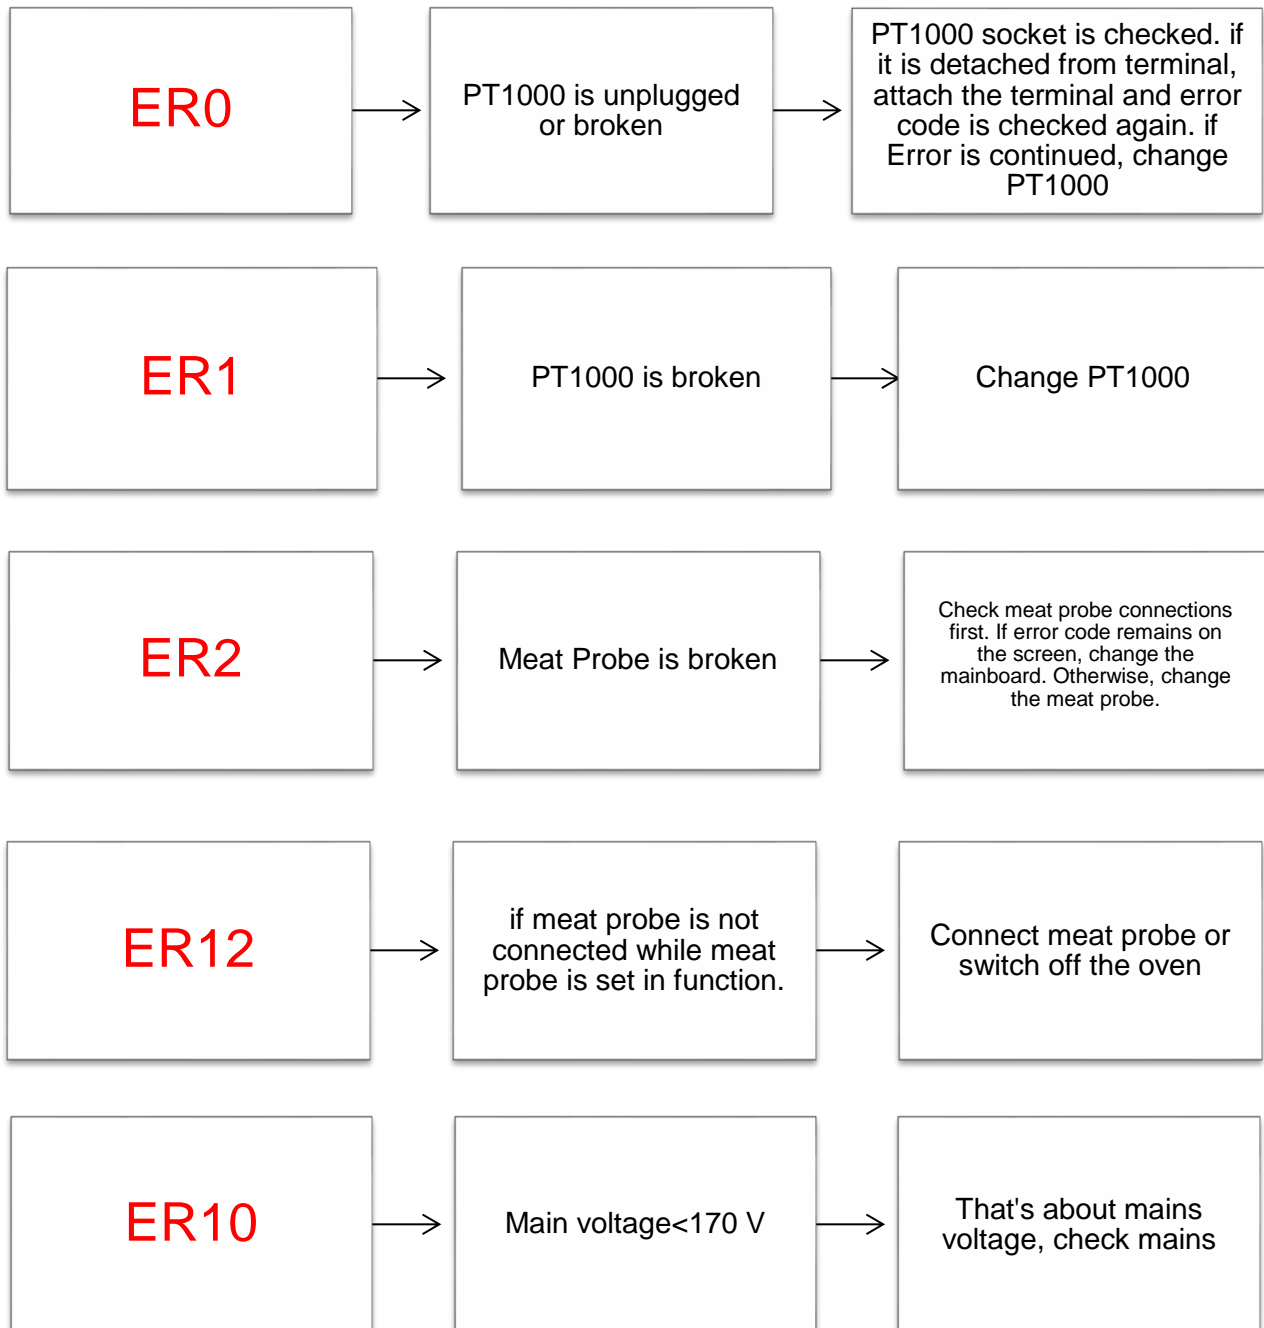

BUILT IN OVEN SERVICE MANUAL

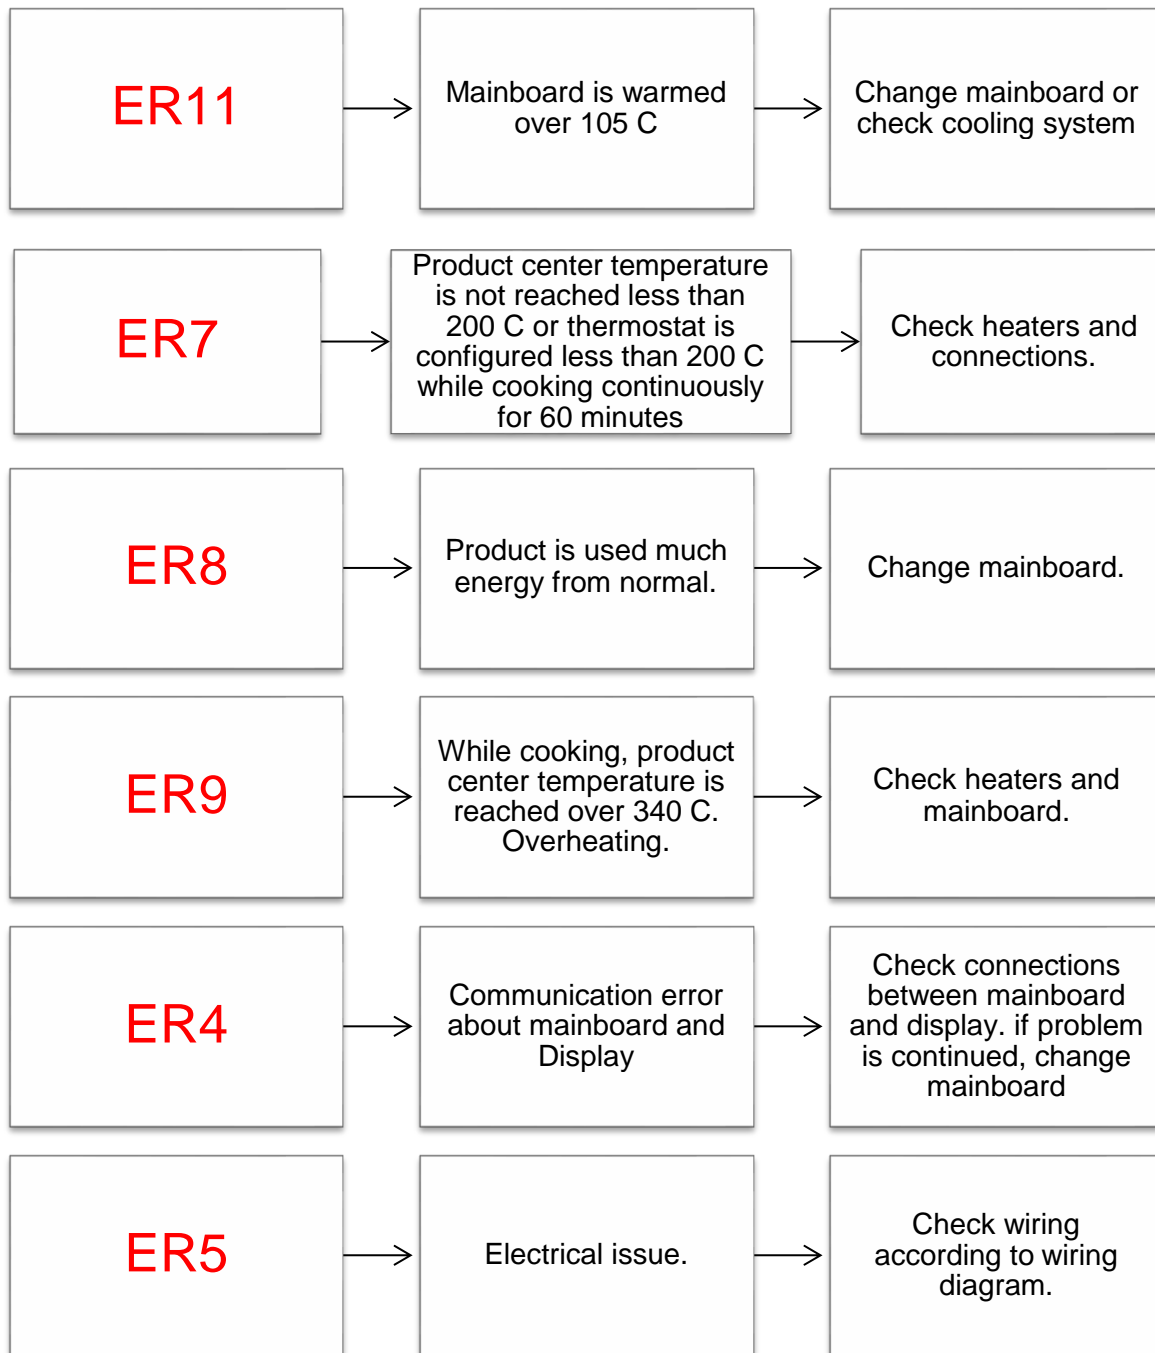

BUILT IN OVEN SERVICE MANUAL

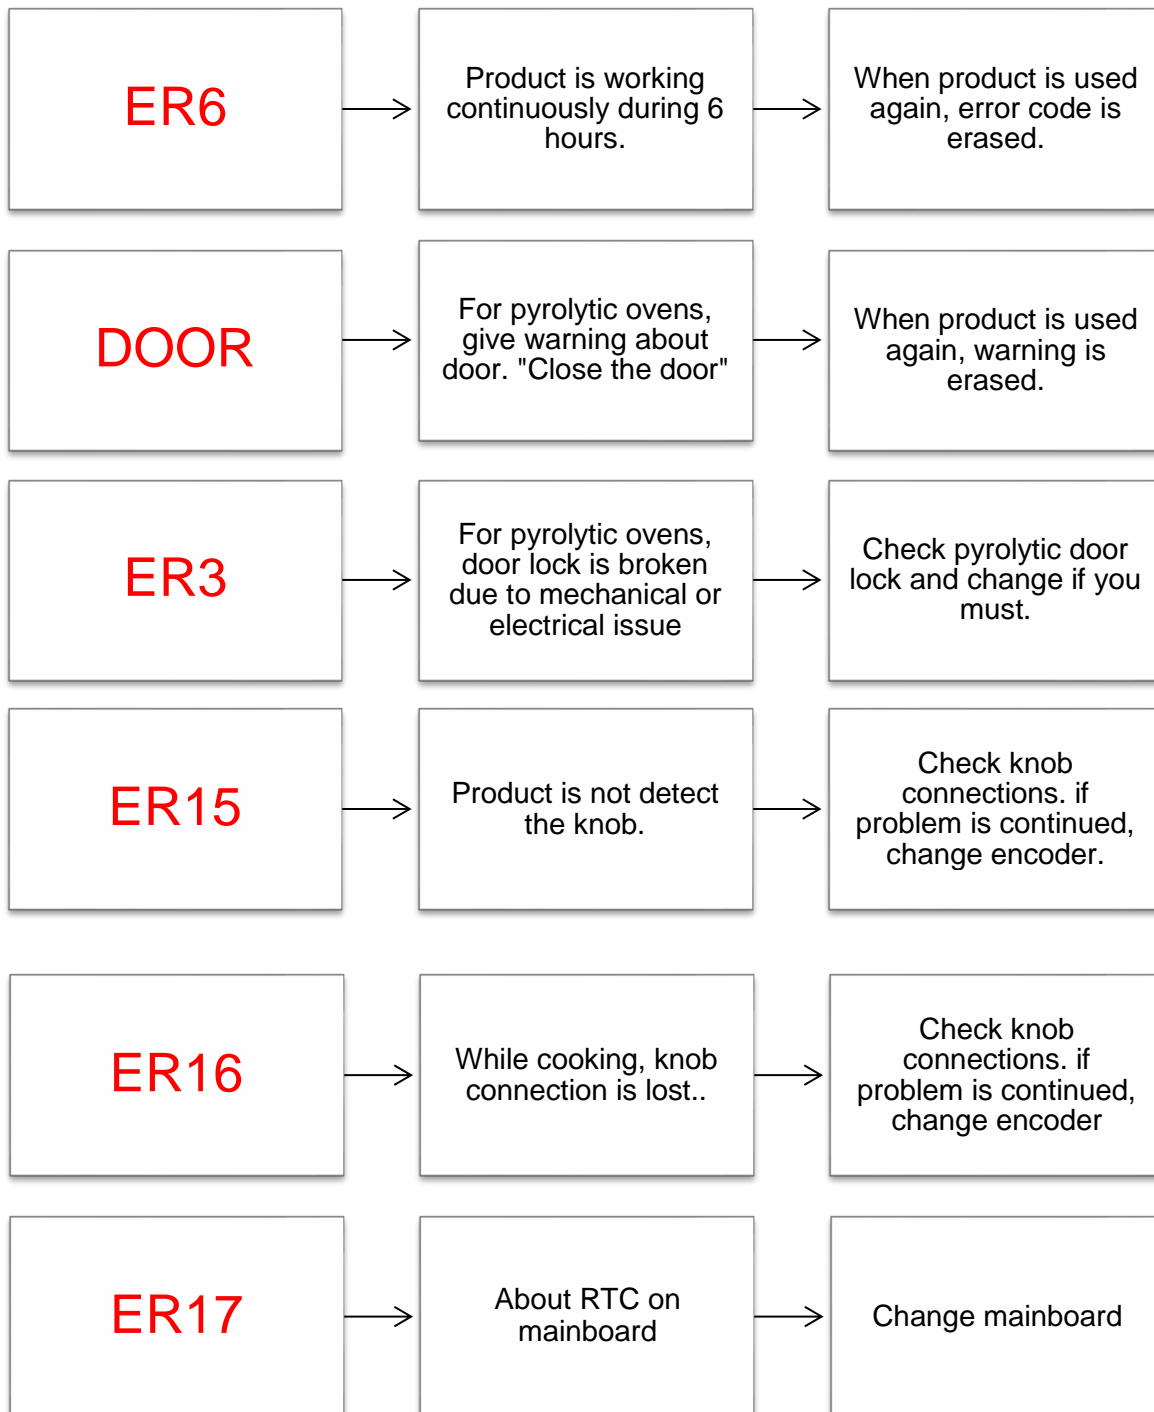

BUILT IN OVEN SERVICE MANUAL
