


Chapter 10 Error Display and troubleshooting

10-1. Error Display




Error message: Door is not properly shut 20s after program is started.


Troubleshooting:

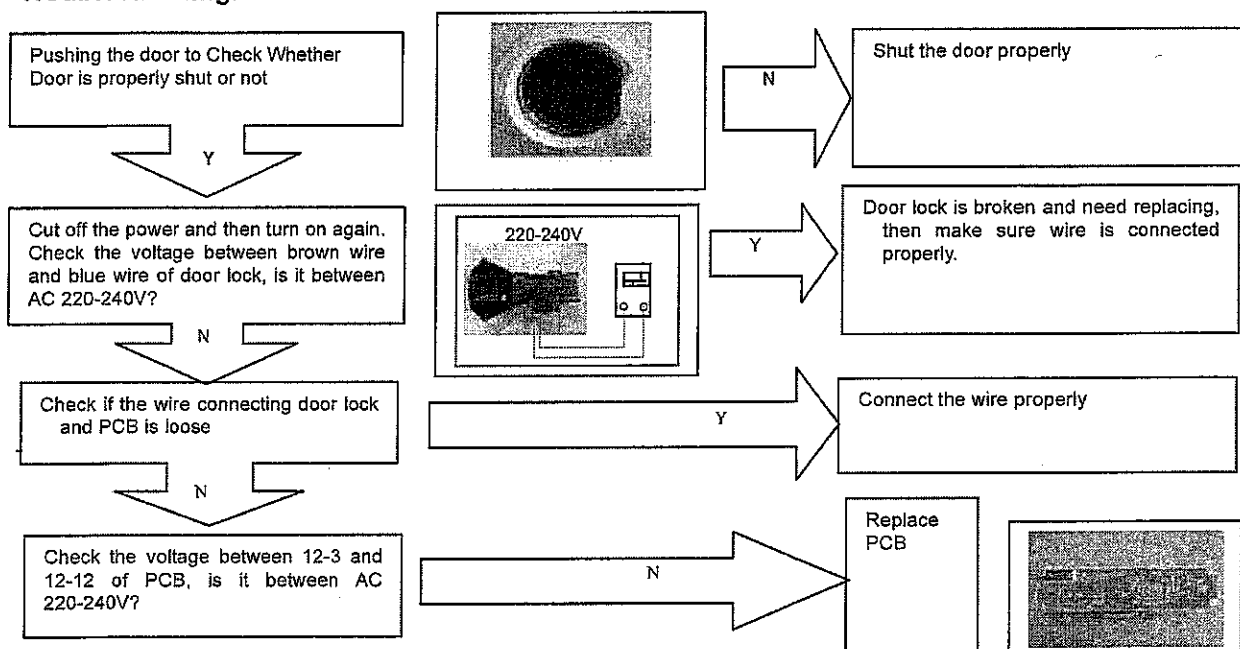

Error message: Drainage error, water not emptied within 4 min.


Troubleshooting:

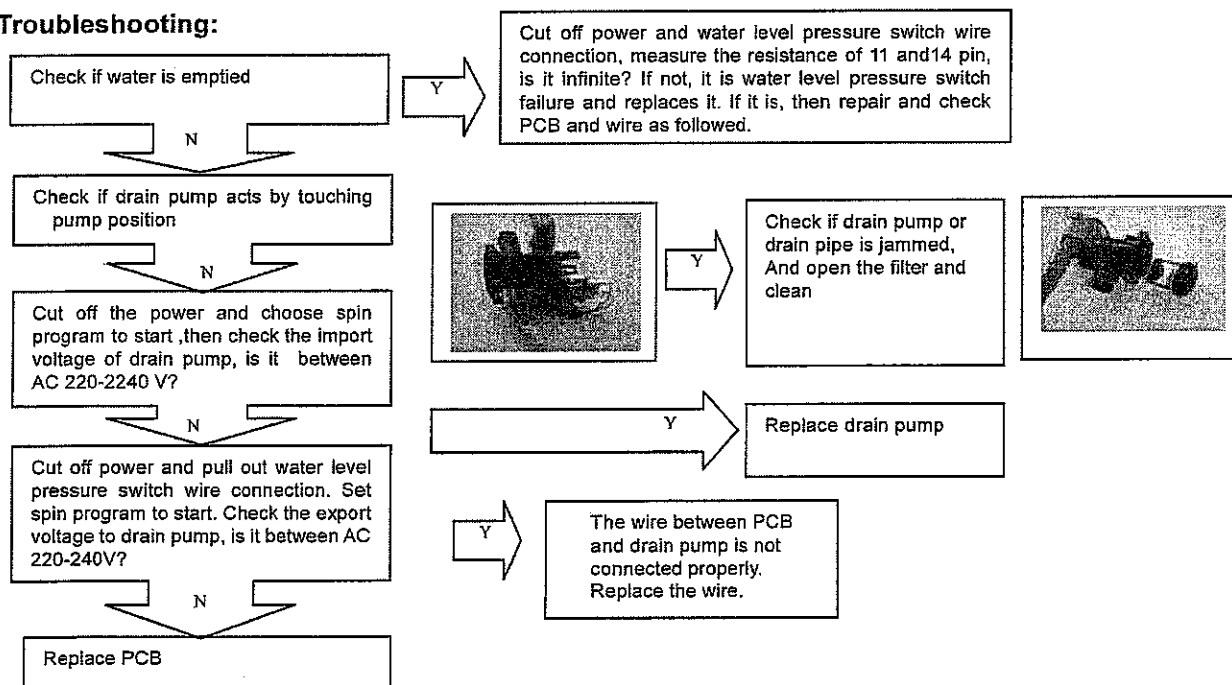

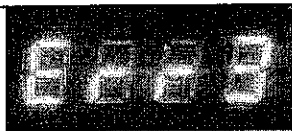


Error message: Temperature sensor is not properly connected or damaged (display at the end of a program).


Troubleshooting:

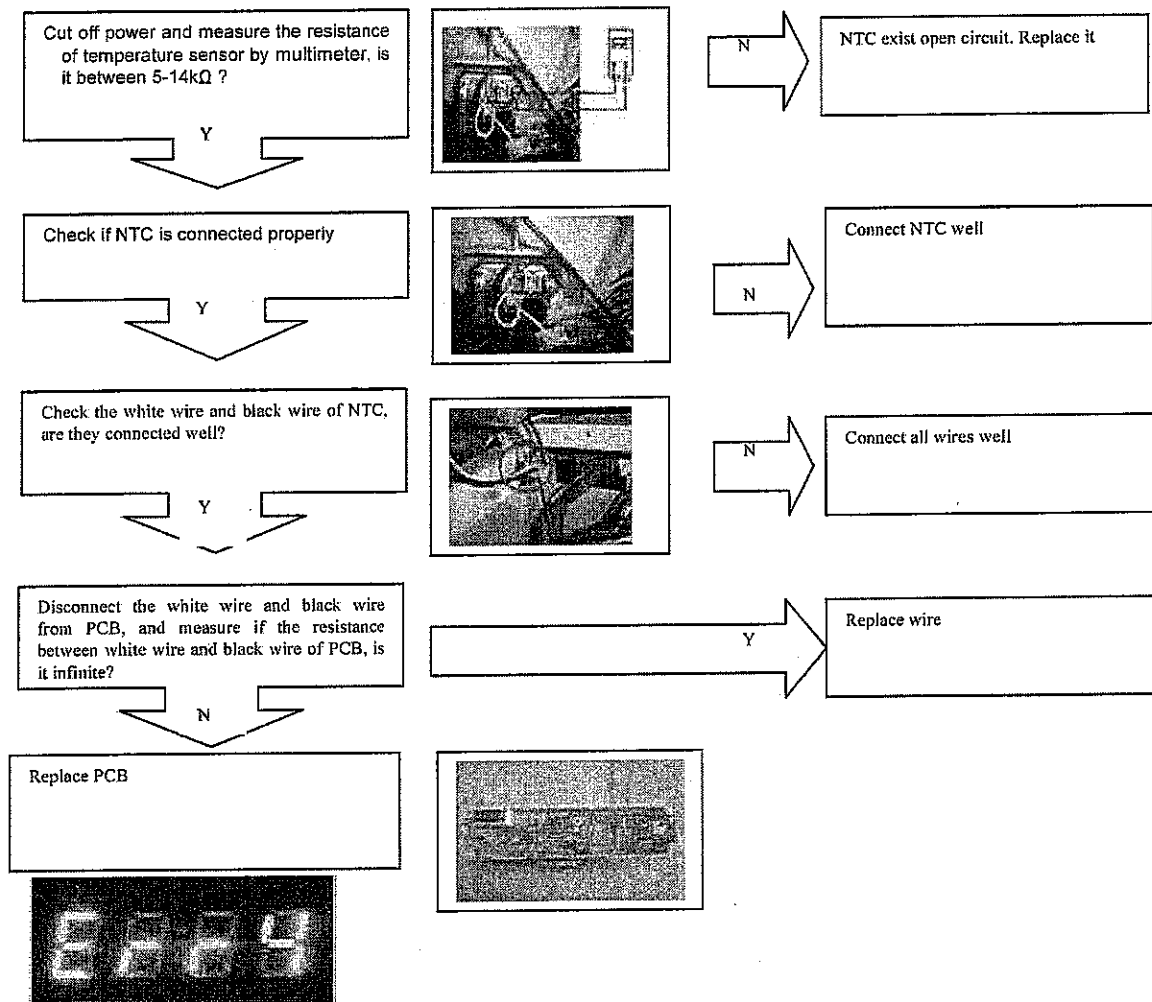

Error message: The heater may be broken


Troubleshooting:

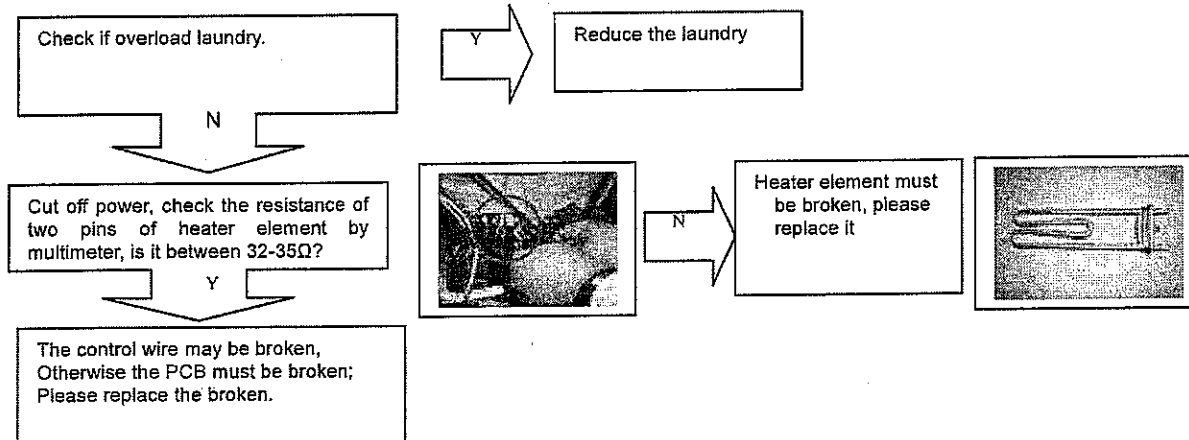

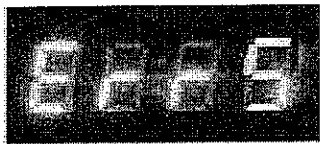


Error message: The required water level is not reached within 8 min, or the water level exceeds the protection value

Troubleshooting:

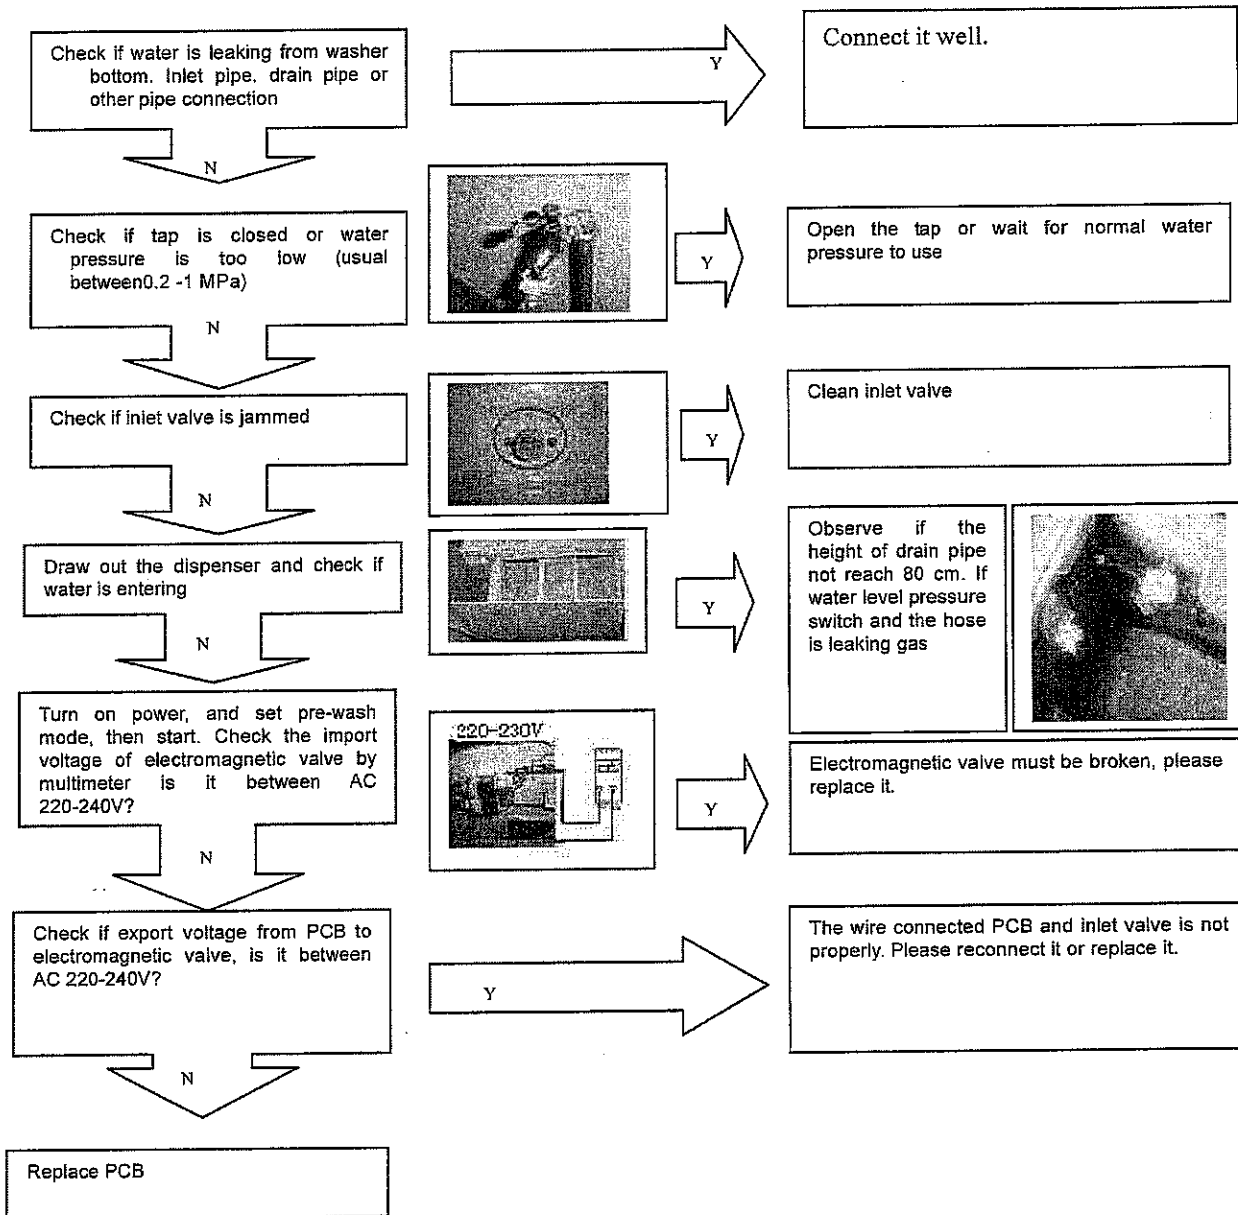


L 0620

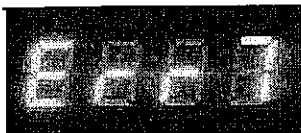


Error message. Motor overheat protection or is damaged.

Troubleshooting:

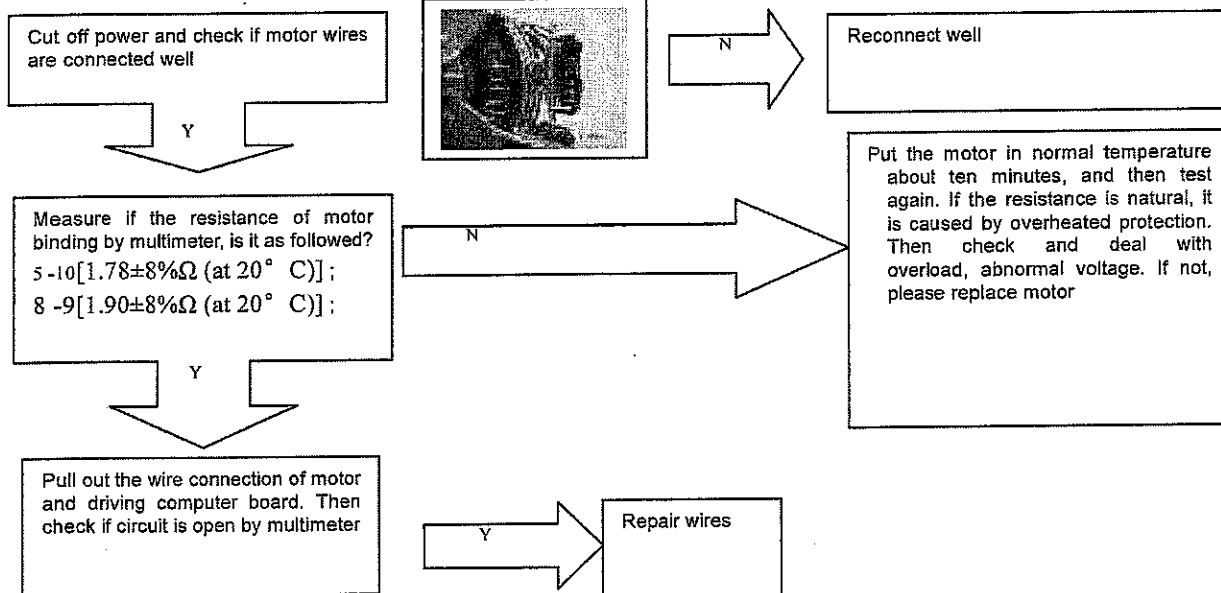

Error message. Water level exceeds protection value.


Troubleshooting:

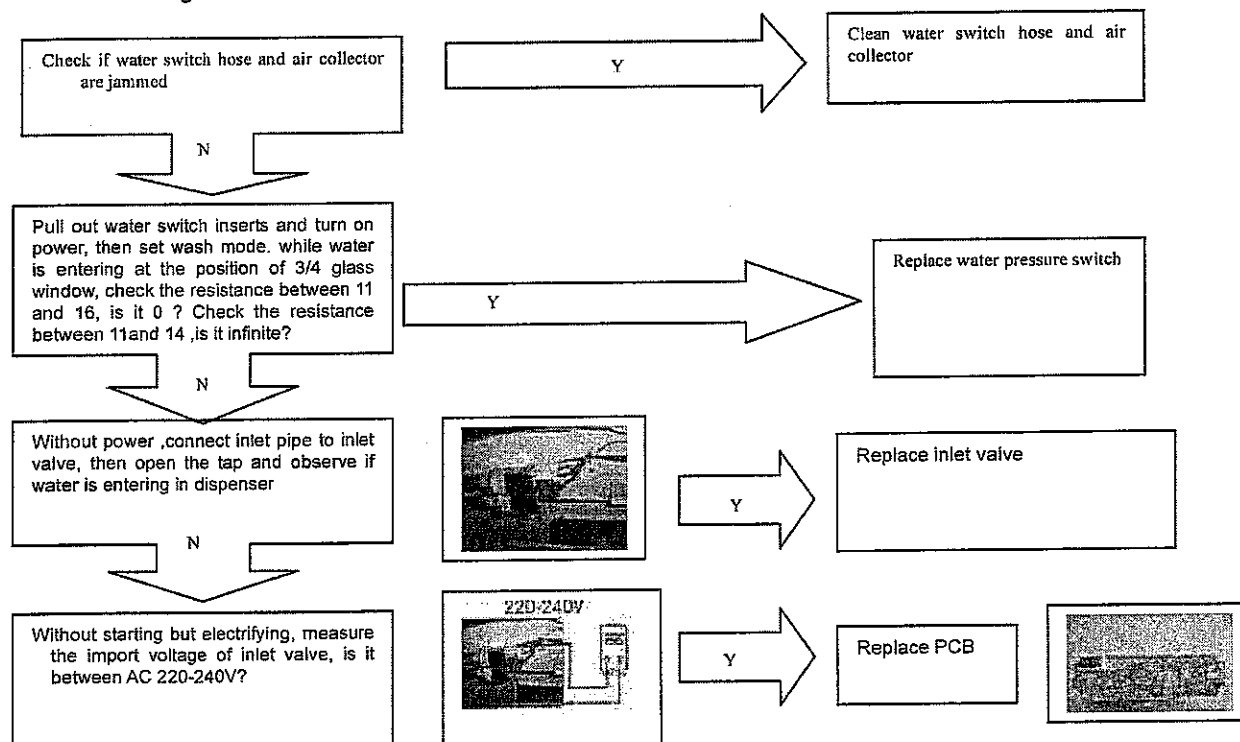

10-2. Examination & Troubleshooting


10-2-1. Display nothing

Troubleshooting:

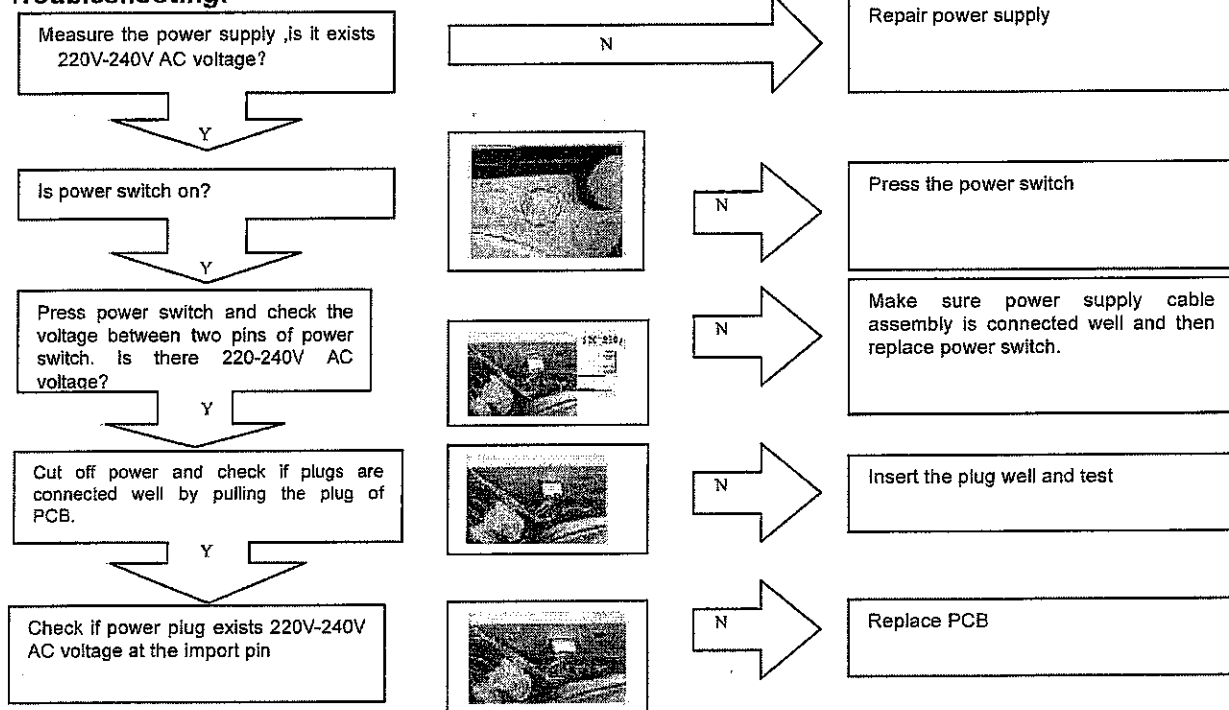


10-2-2. No water inletting


Troubleshooting:

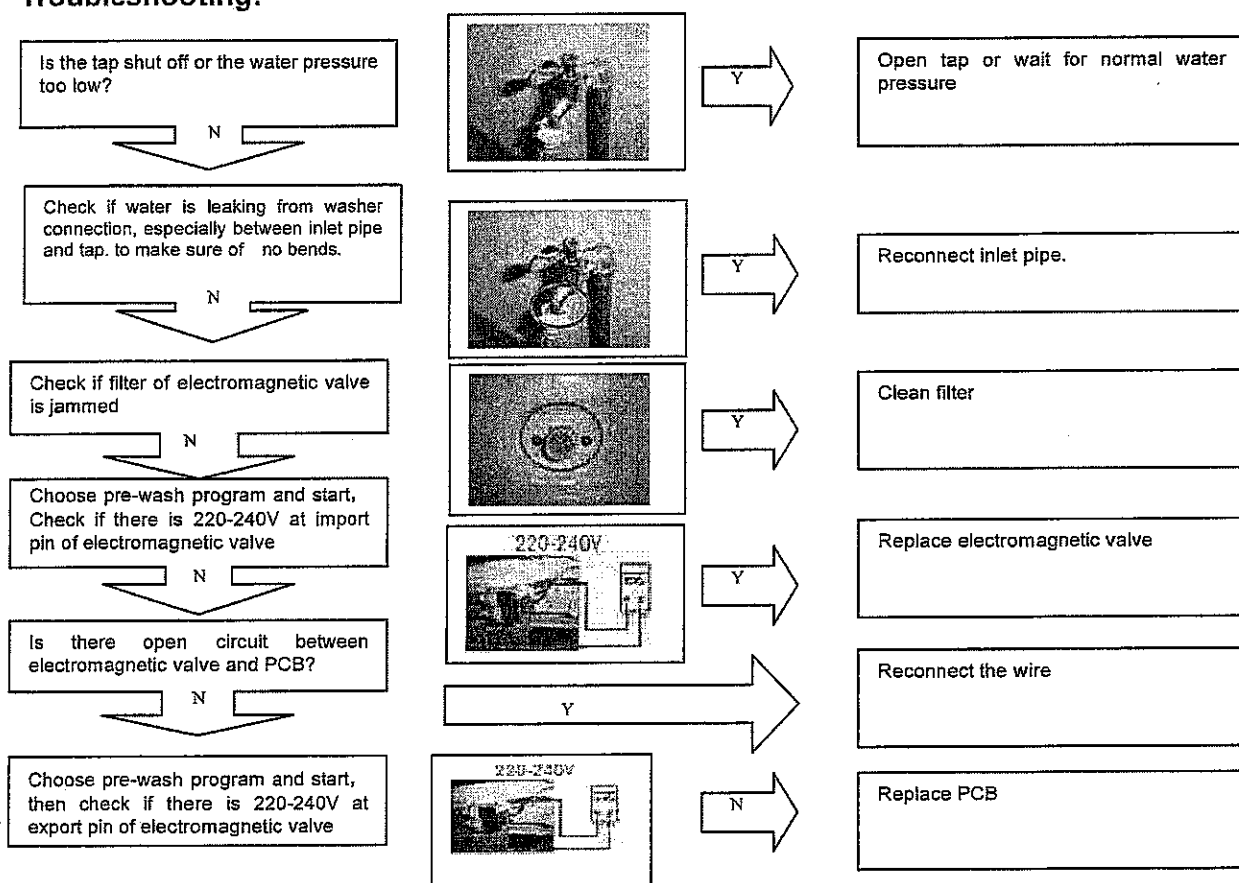

10-2-3. No draining troubleshooting:

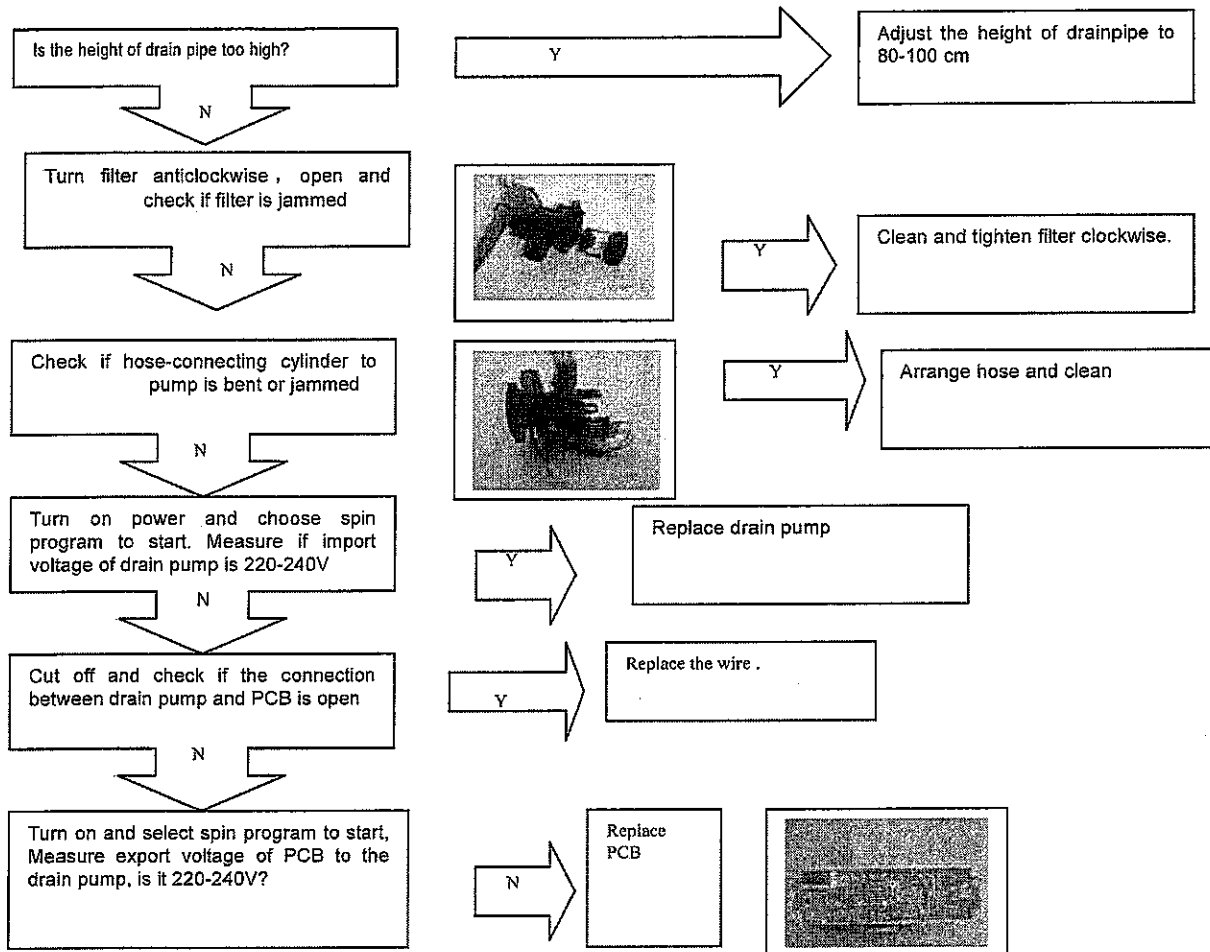

10-2-4. Abnormal noise and vibration Troubleshooting:

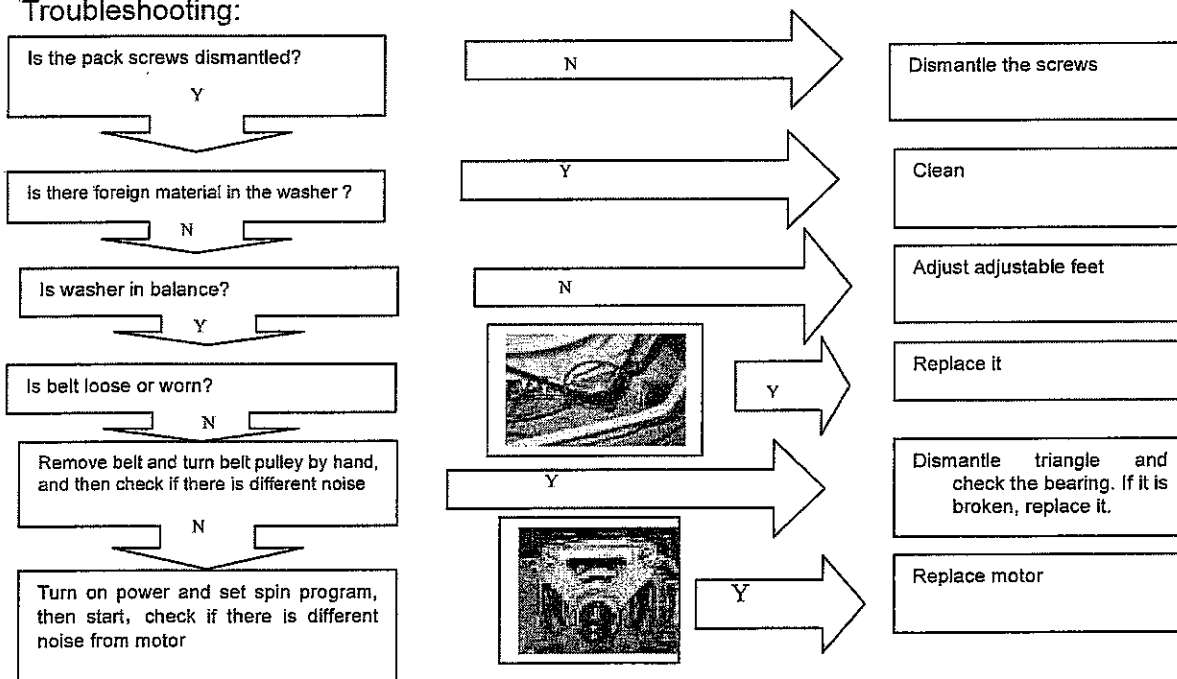

10-2-5. Water leaking Troubleshooting:

