	ERROR	SYMPTOM	CAUSE
1	WATER INLET ERROR		 Water has not reached to the pre-set level within 4 min. since inlet valve operated, or water has not reached to the normal level within 25 min.
2	UNBALANCED ERROR	LE	 The appliance is tilted. Laundry is gathered to one side. Non distributable things are put into the drum.
3	WATER OUTLET ERROR		Water has not drained enough within 8 min.
4	OVERFLOW ERROR	FE	 Water is automatically being pumped out because too amuch water is in the tub.
5	PRESSURE SENSOR S/W ERROR	PE	The sensor pressure switch is out of order.
6	DOOR OPEN ERROR	BE	The [Start/Pause] button is pressed with the door open.The door switch is out of order.
7	THERMISTOR(HEATING) ERROR	EE	The thermistor is out of order.
8	CURRENT ERROR		 PWB ASSEMBLY (Main) is out of order Replace the PWB assembly (Main) Winding in the MOTOR is short-circuited. Replace the MOTOR
9	MOTOR LOCKED ERROR		 The Connector (3-pin, male, white) in the wire harness is not connected to the Connector (3-pin, female, white) of MOTOR. Reconnect or repair the connector The electric contact between the connectors [3-pin, male, white in the wire harness and 6-pin, female, white in the PWB ASSEMBLY (Main]) is bad or unstable. Reconnect or repair the contact in the connector The wire harness between the MOTOR and PWB ASSEMBLY (Main) is cut (open circuited). The hall sensor is out of order/defective.
10	POWER FAILURE		The washer experienced a power failure.