 
 
 
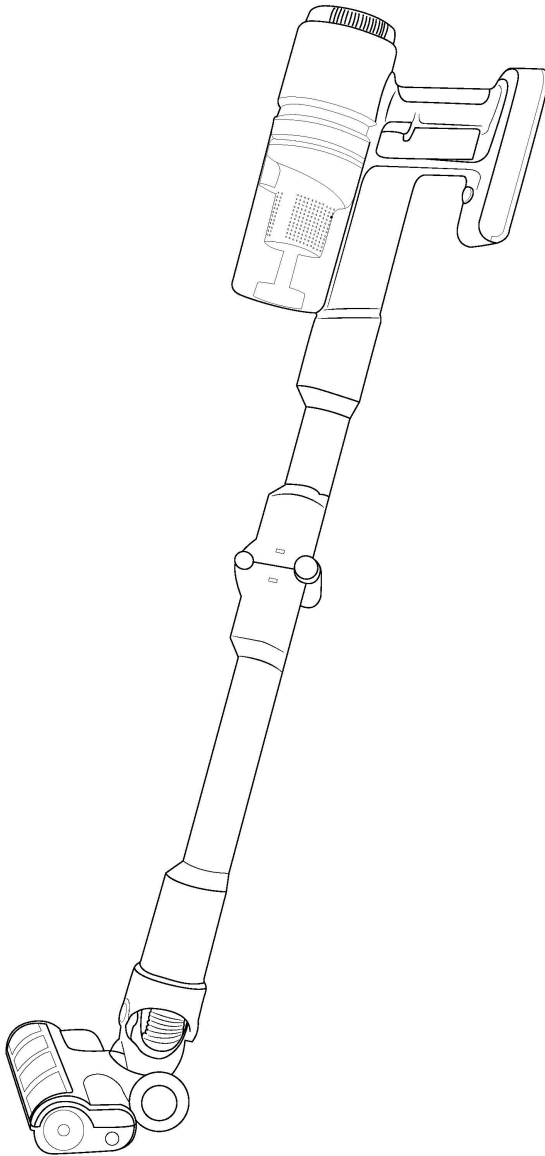 
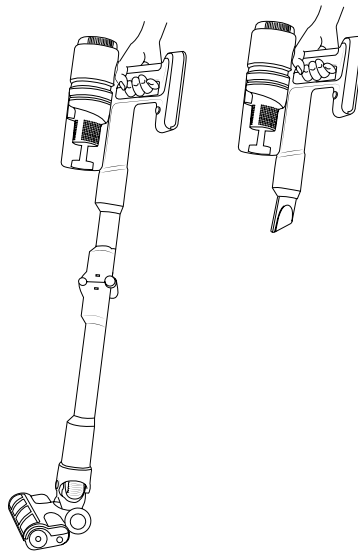 



# Hisense



 
HI-MOVE IV  
HVC613410W

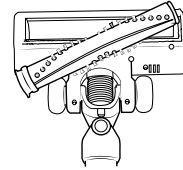

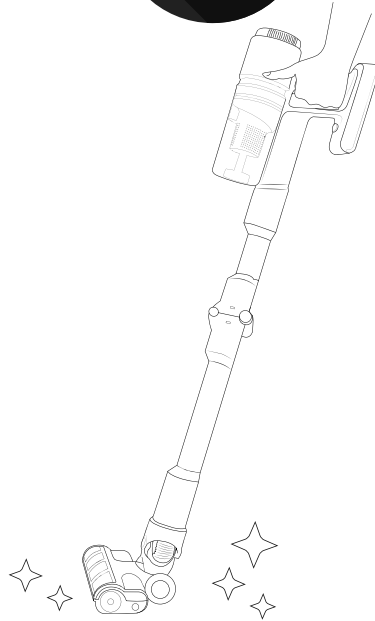


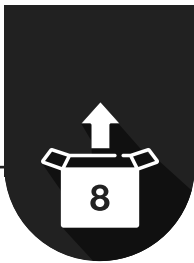

 
1.

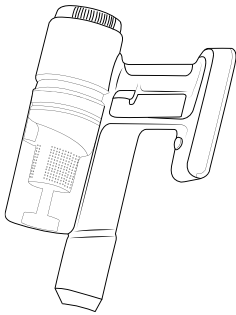

 2.

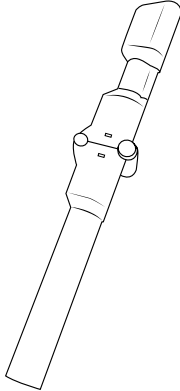

 3.

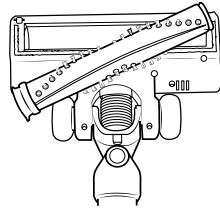


4.




5.




 6.

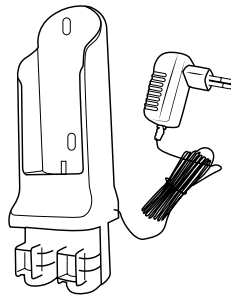


  7.




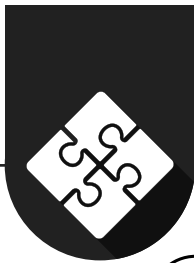

 1.

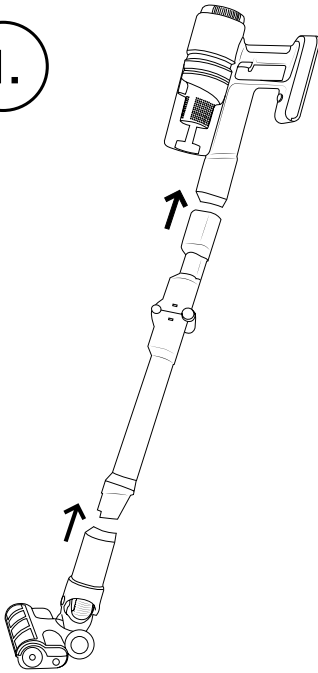

 2.

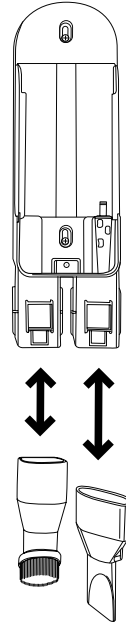

3.

 
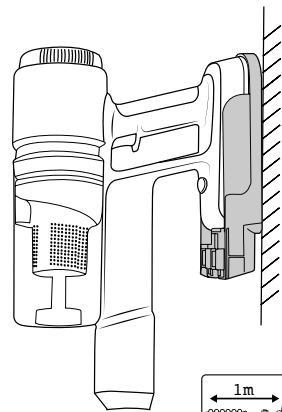 
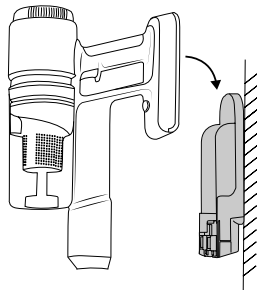 
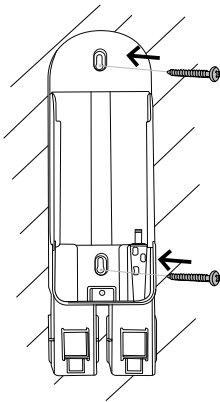 




Diagram illustrating the correct and incorrect use of a cordless stick vacuum cleaner. The top section shows two upright configurations with their respective use icons. The bottom section shows a motorized floor head configuration with its use icons.

**Upright Configuration 1 (Left):**

 
 
 
 
 
 
 
 
 
 
- Carpet (checkmark)
- Hardwood floor (checkmark)
- Tile floor (cross)
- Water (cross)

**Upright Configuration 2 (Right):**

- Grass (checkmark)
- Spider webs (checkmark)
- Stairs (checkmark)
- Flowers (checkmark)
- Tile floor (cross)
- Water (cross)


**Motorized Floor Head Configuration (Bottom):**

- Stairs (checkmark)
- Sofa (checkmark)
- Tile floor (cross)

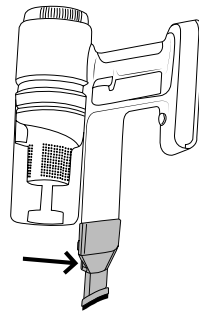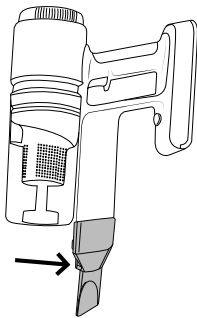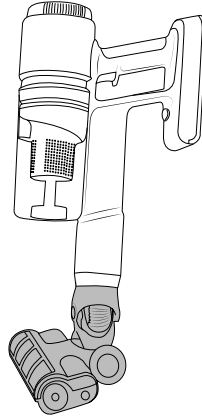
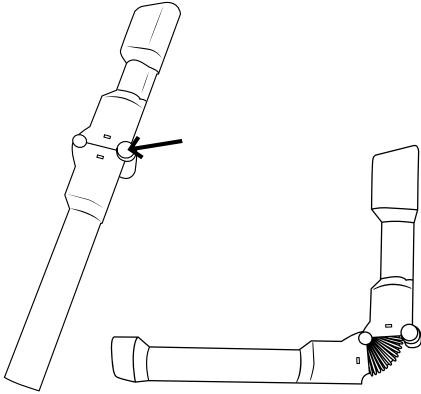
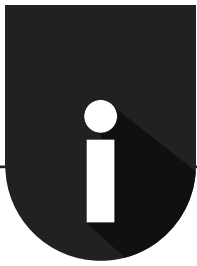






a


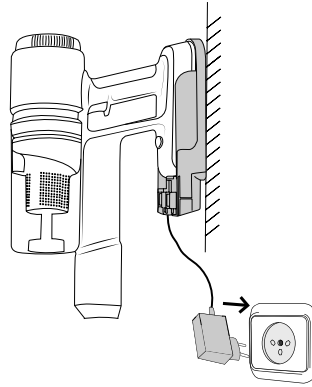 


b

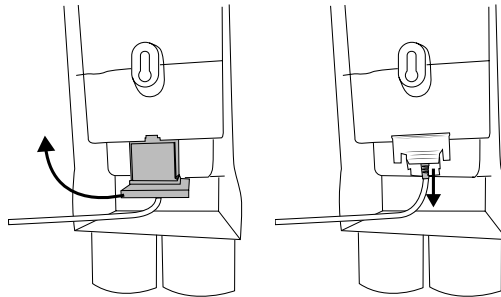 
 
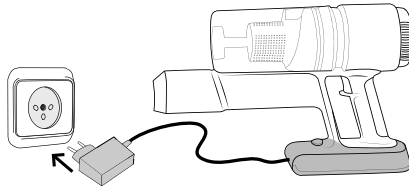 


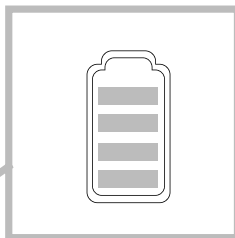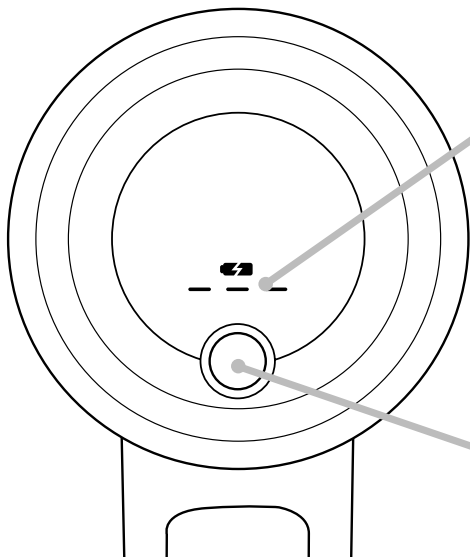  

    
 
**HIGH**  
≤ 20 min  
**LOW**  
≤ 45 min

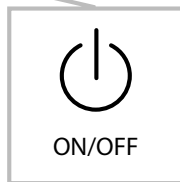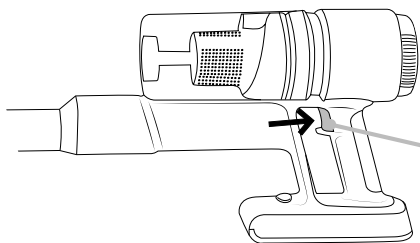




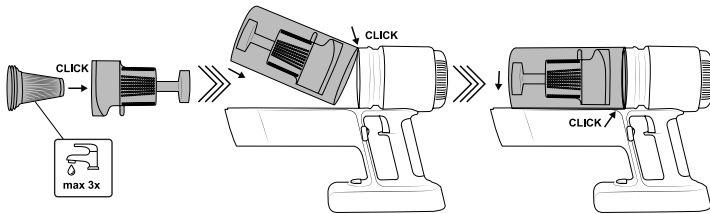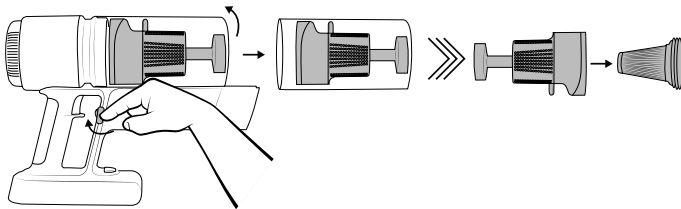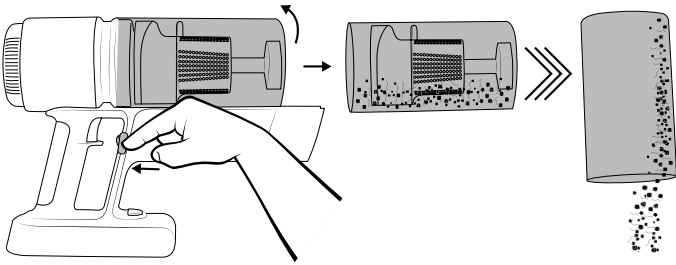


### Filter quick clean

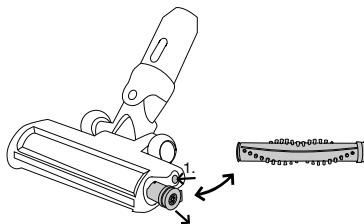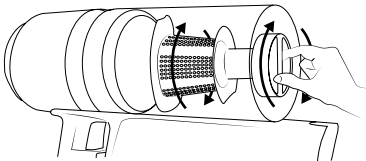  


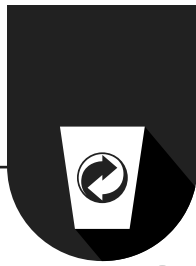 

 
1.

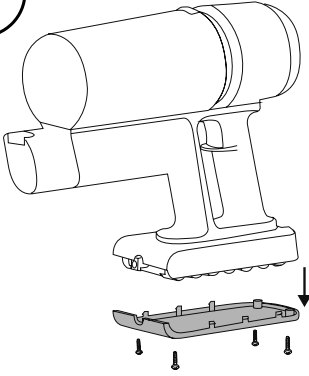

 
2.

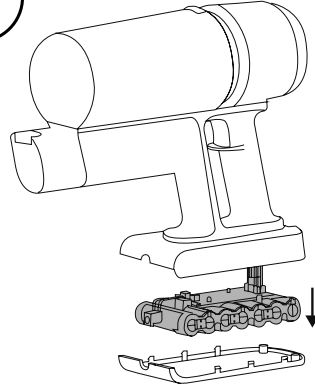

 
3.

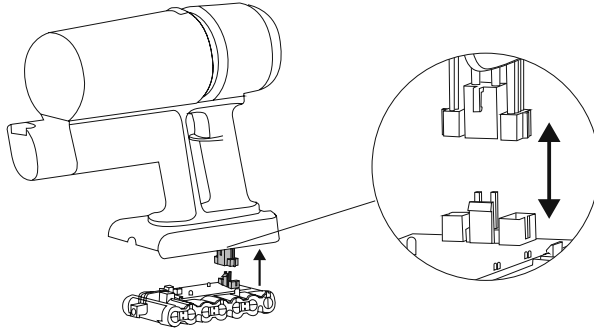

 4.

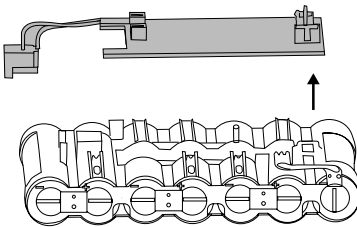

 5.

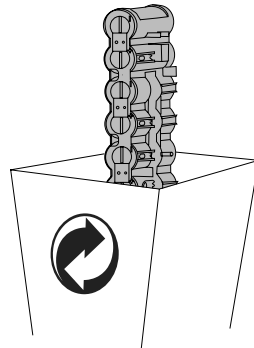



***Hisense***