
# **DISASSEMBLY**

### TOP PLATE

Remove two screws that fix the top-plate at the back.



Push the top-plate back and pull it up.

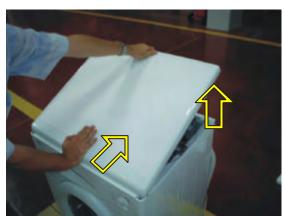

# **DOOR**

Remove two screws that fix the door.



Pull the door up.



Remove nine screws that fix the door group.



Remove the door inside plastic as it is showing the picture.



Remove the door hinge as it is showing the picture.



Remove the door glass as it is showing the picture.



Remove the door handle as it is showing the picture.



Remove the door handle pim as it is showing the picture.



Remove the door handle spring as it is showing the picture.



Remove the door lock tongue as it is showing the picture.



#### **GASKET**

Pull the gasket as it is showing in the picture.




Remove the gasket-body fixing string.




#### **DETERGENT DRAWER**

Remove the detergent drawer and pull it up carefully.

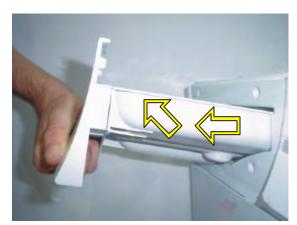

### **CONTROL PANEL**

Remove four screws which fix the control panel to the front panel.

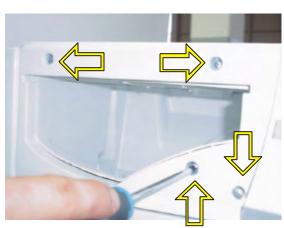

Remove two screws fixing the control panel.

Remove one screws fixing the detergent box


group.

the switch.


the timer.




Remove the wire that is connected to

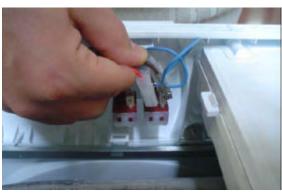

Remove the wire that is connected to

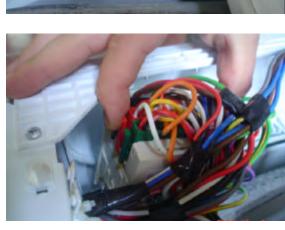

Pull the control panel up.

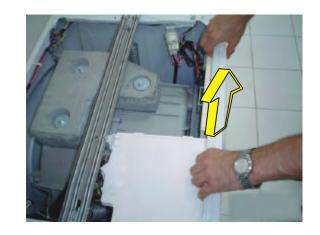

#### **KICKPLATE**

Remove the kickplate as it is showing the picture.



#### FRONT PANEL

Remove two screws fixing the front panel at the bottom.



Remove two screws fixing the door lock.




Push it down and remove the front panel.



#### MEDIUM SUPPORT BRACKET

Remove four screws fixing the panel.

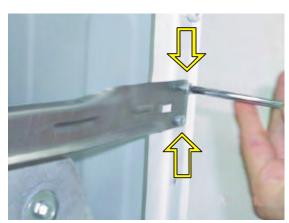


## **DETERGENT DRAWER HOUSING**

Remove the tub seal connector, which is attached to the detergent drawer housing.




Remove the wire that is connected to the valve.

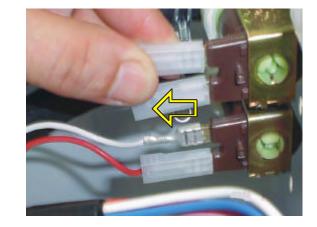

Remove the valve connection.



Remove the detergent drawer housing assembly.

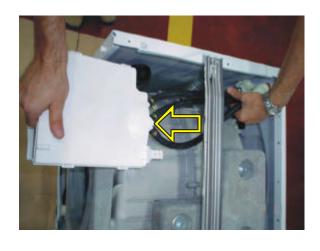

#### POWER CABLE GROUP AND PARASITE FILTER

Remove the wire that is connected to the parasite filter.

Remove two screws fixing the parasite filter.



Remove the power cable group as it is showing the picture.



#### **CAPACITOR**

Remove the wire that is connected to the capacitor.



#### PRESSURE SWITCH

Remove the wire that is connected to the pressure switch.



Remove the pressure switch as it is showing the picture.



Remove the pressure switch hose handcuffs and pressure switch hose as it is showing the picture.



#### **DOOR LOCK**

Remove the wire that is connected to the door lock.



### **PUMP MOTOR**


Remove pipe clip that fixes the drain hose.



Remove pipe clip fixing the tub outlet hose.



Remove the wire that is connected to the pump motor.

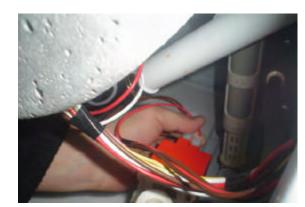

Remove four screws fixing the pump motor.



#### **RESISTANCE**

Remove the wire that is connected to the resistance.



Remove one nut fixing the resistance.



# **THERMOSTAT**

Remove the wire that is connected to the thermostat.



Remove the thermostat as it is showing the picture.



# FRONT COUNTERWEIGHT

Remove four screws fixing the front counterweight on the front and pull it up.



Hold the gasket and gasket-body fixing spring together, and pull them up.



# SHOCK ABSORBER PIM

Remove two pim fixing the shock absorber.



# <u>TUB</u>

Remove four screws fixing the spring hanger sheet iron.



Remove the washing group as it is showing the picture.



#### **UPPER COUNTERWEIGHT**

Remove three screws fixing the upper counterweight.



### BELT

Remove the belt as it is showing the picture.




#### **DRIVEN PULLEY**

Remove one screws fixing driven pulley.



# **MOTOR**

Lay down the machine with an angel of 45° to the floor. Disconnect wires and remove two screws fastening the motor under the tub. Pull the motor up for disassembly.

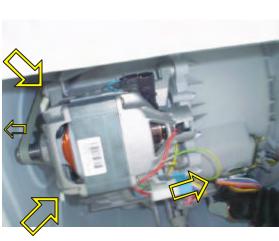

## **TUB**

Remove seventeen screws fixing tub.

