



A210

A039



A050 - A590

A280

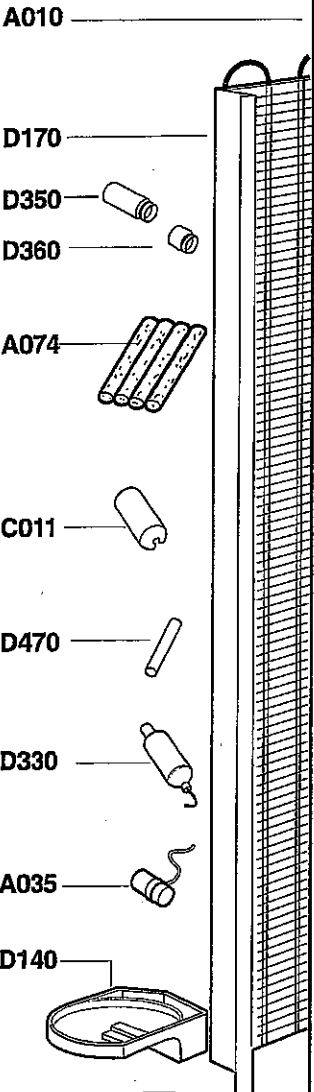

A010

D170

D350

D360

A074


C011

D470

D330

A035

D140

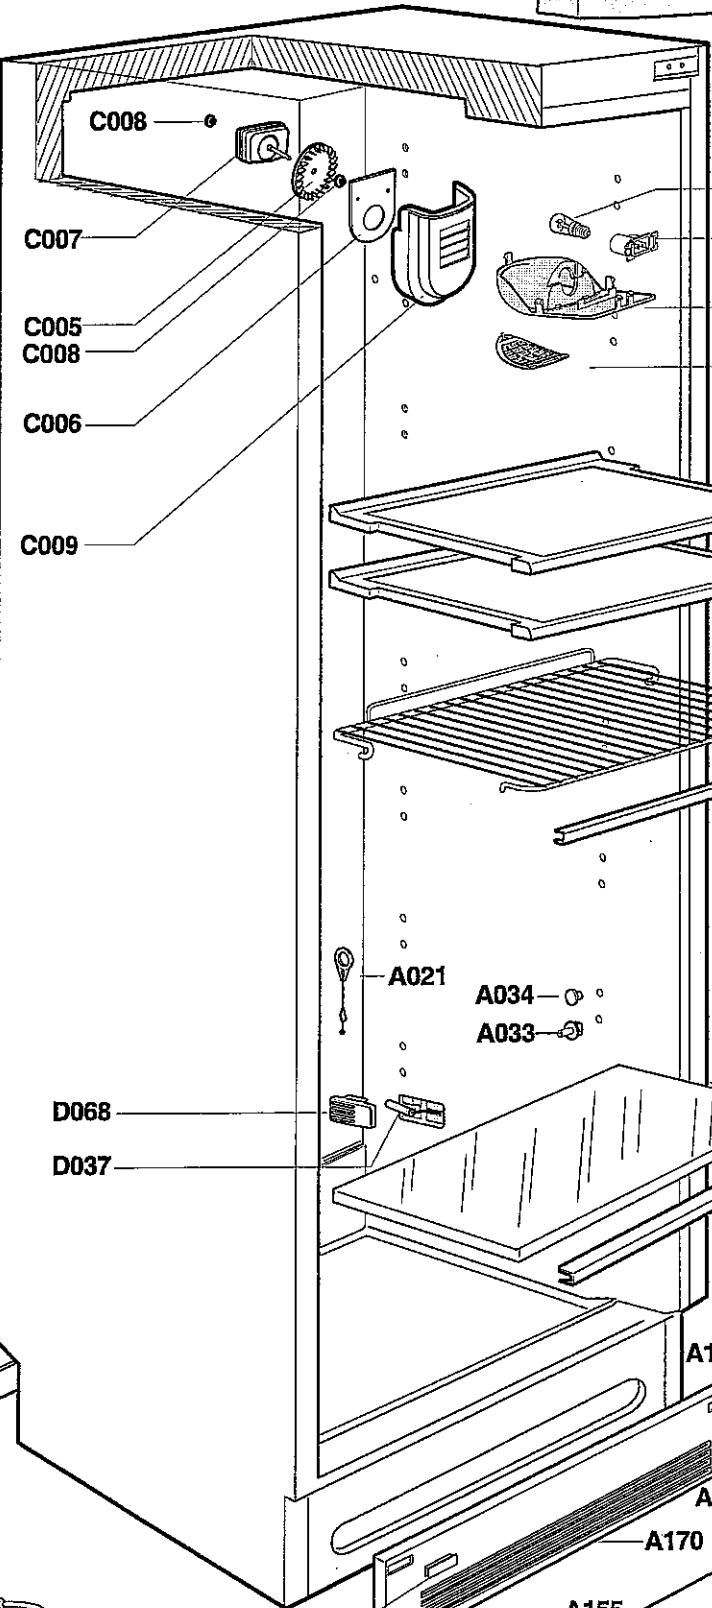

C008

C007

C005

C008

C006

C009


A021

A034


A033

D068


D037

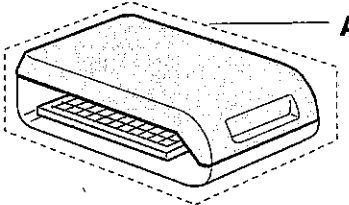

A188

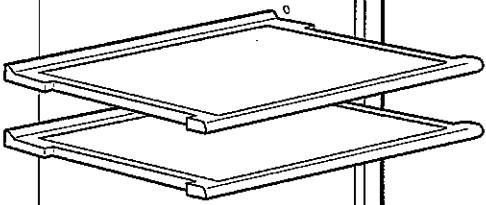


A104

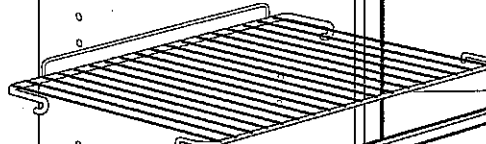

A130




B210

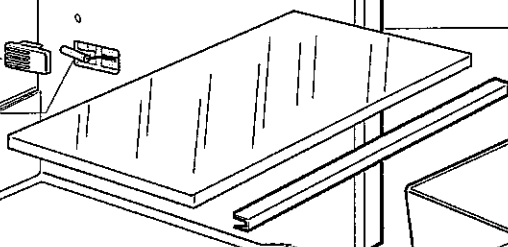


A140

B090

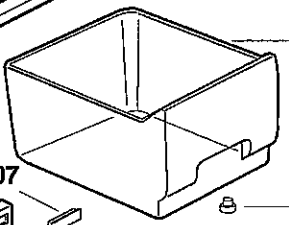

B100

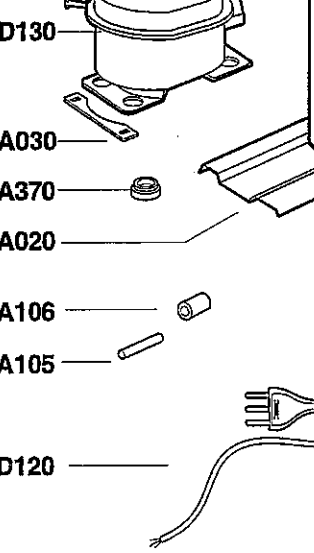

D130

A030


A370

A020

A106

A105


D120



A310

A051

A400

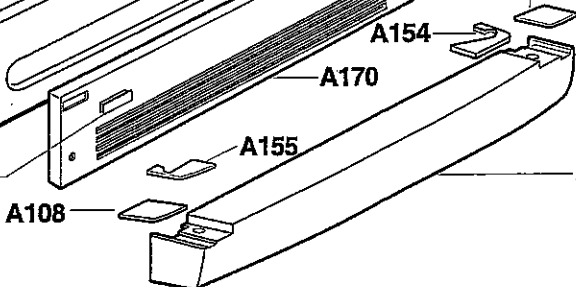

A107

A107

A154

A170

A155


A108

A108


A180

A340-A640


A170

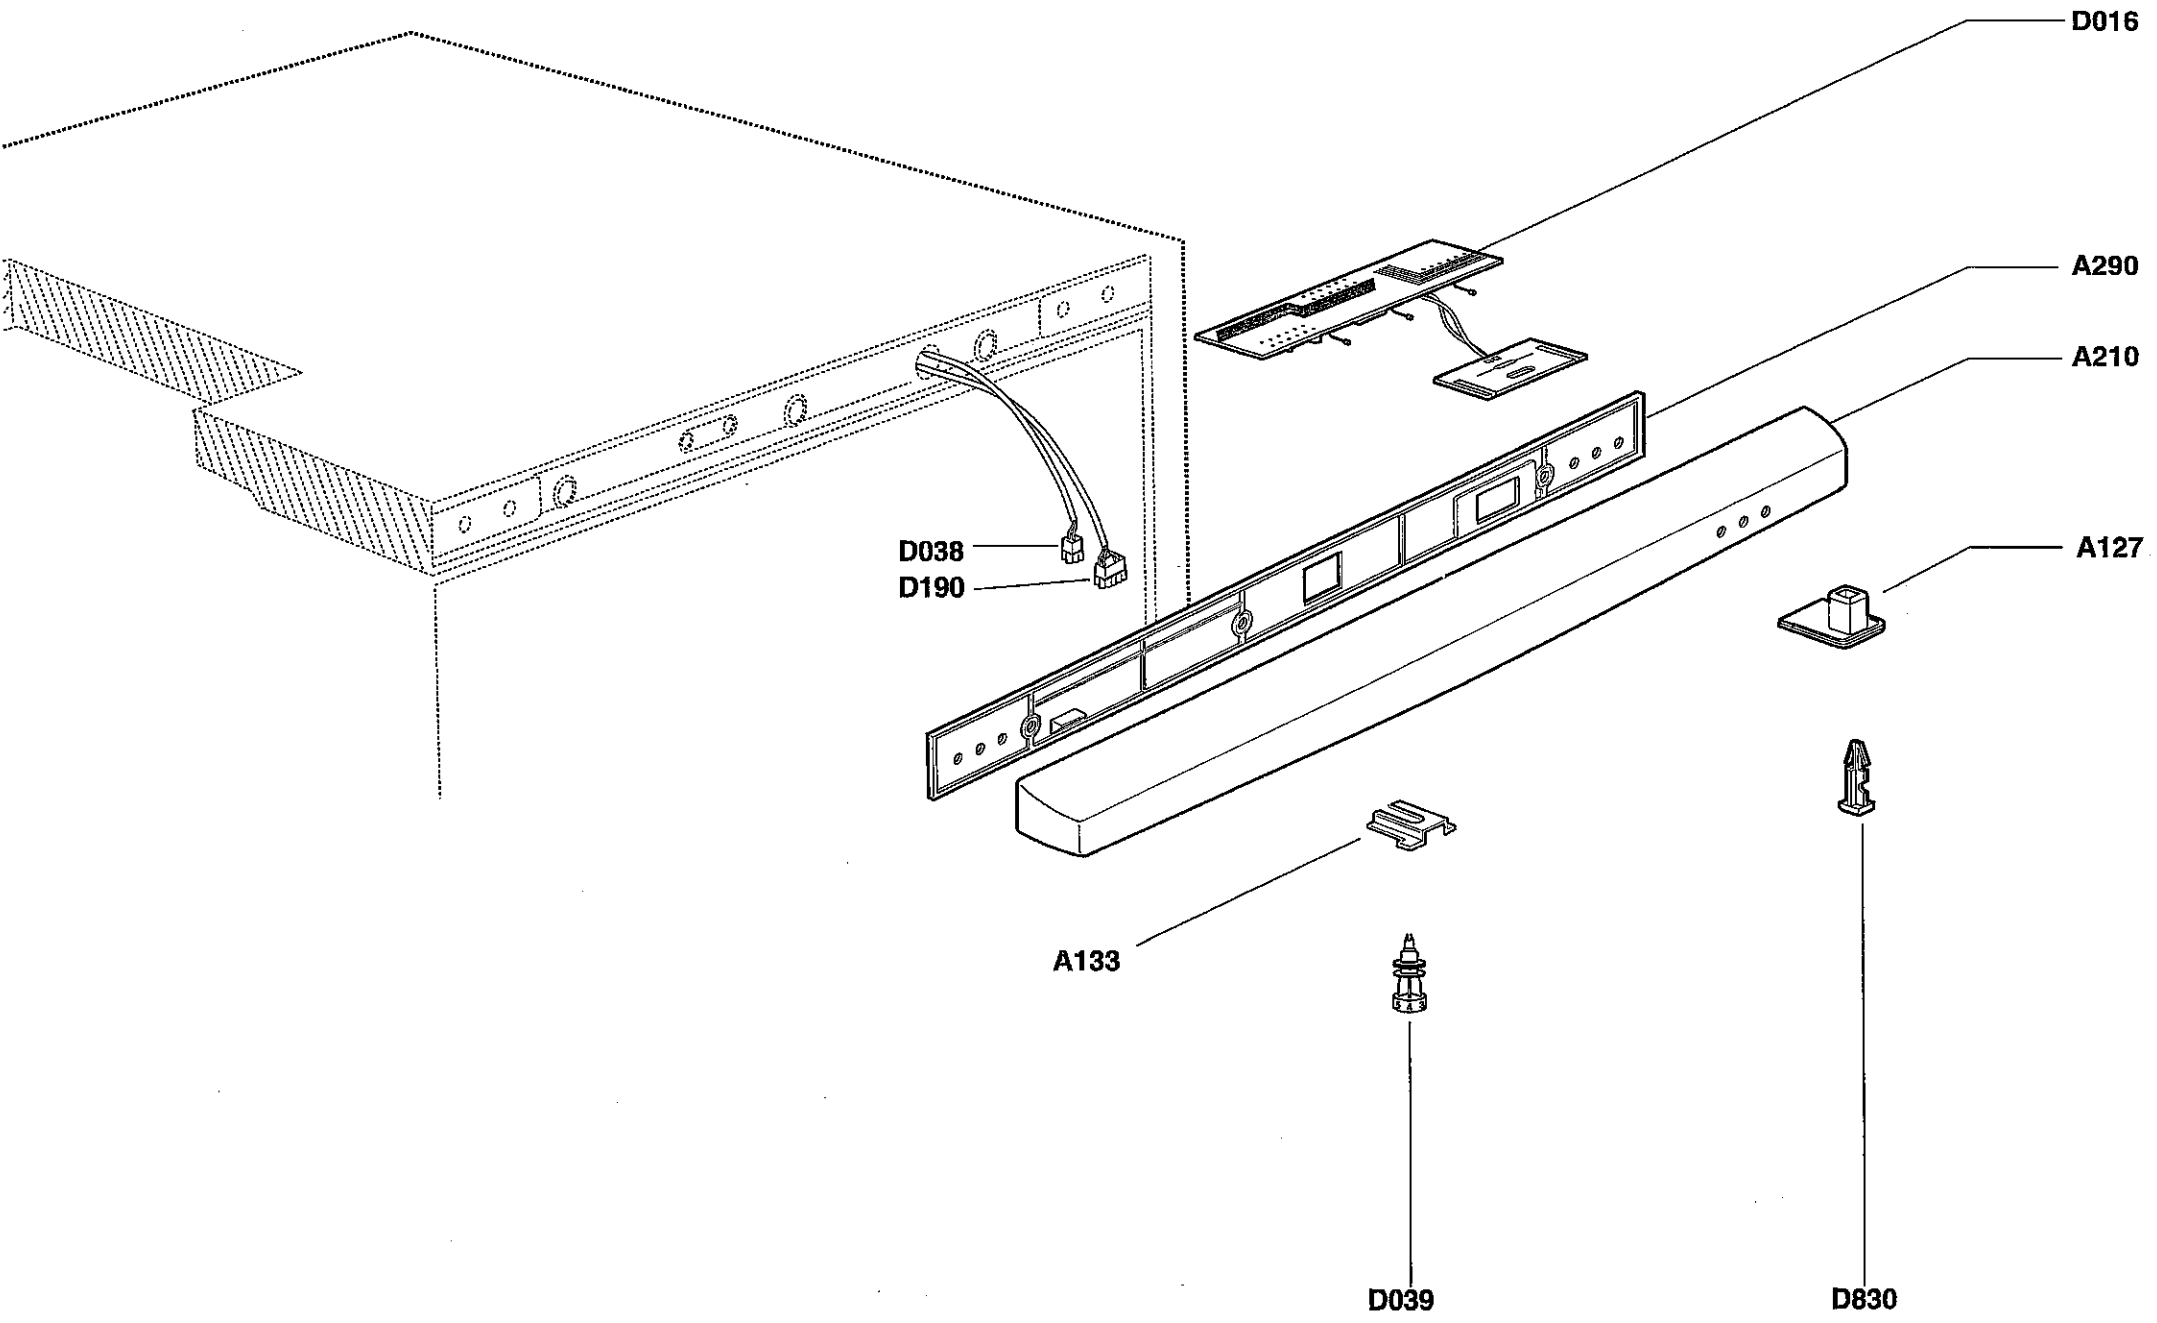


B060

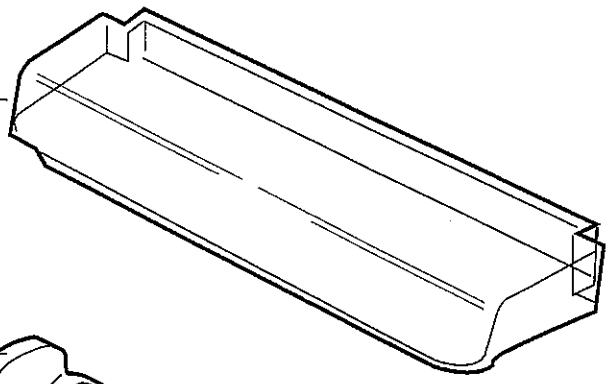


B050

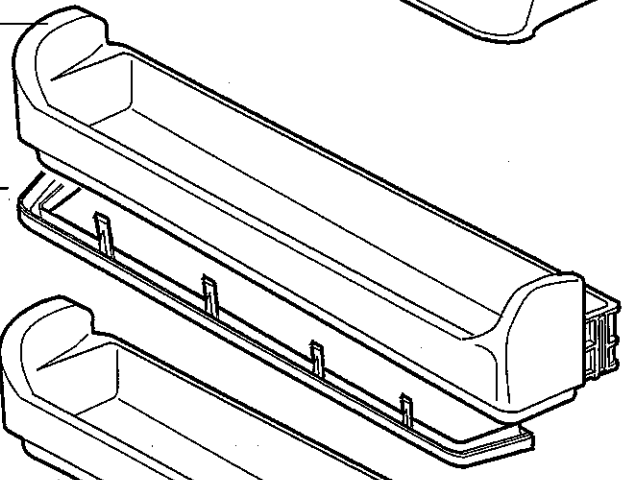


B006

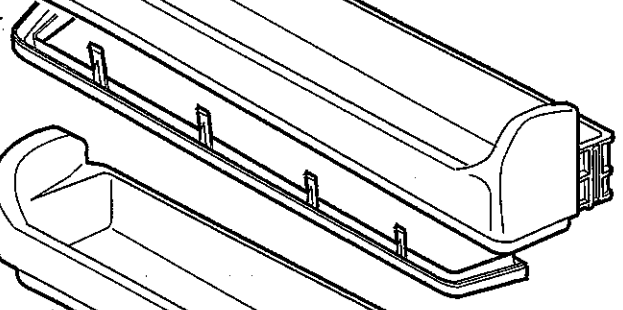


B030

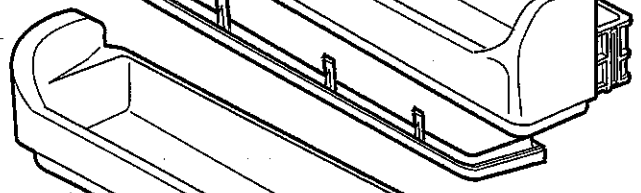


B006

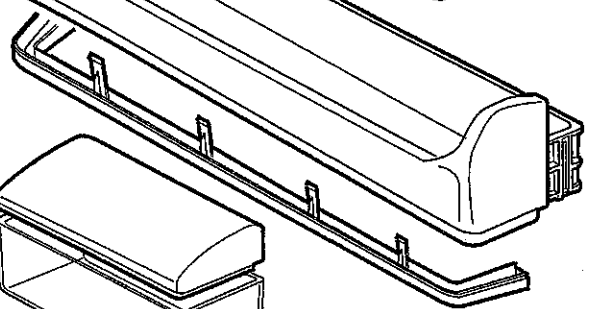


B140

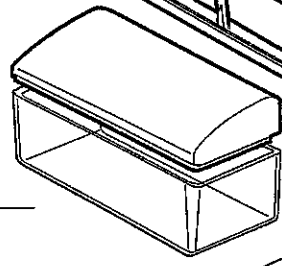

B080

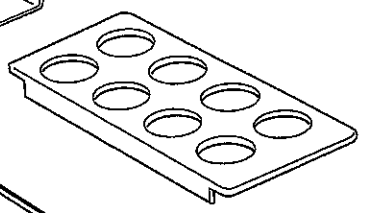

B070

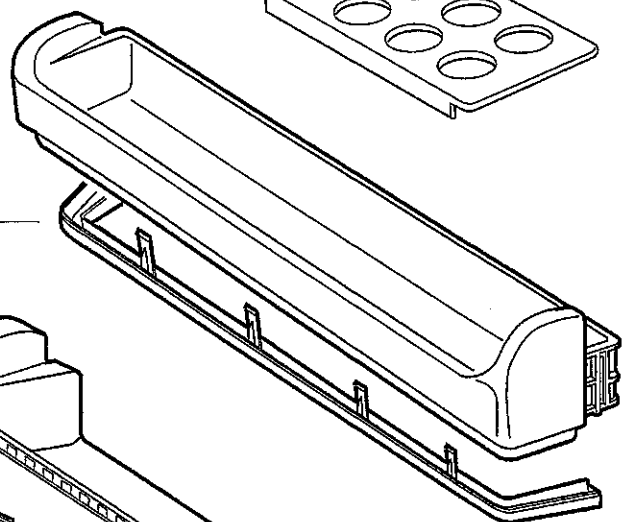


B510


B007

B040


B350

B007


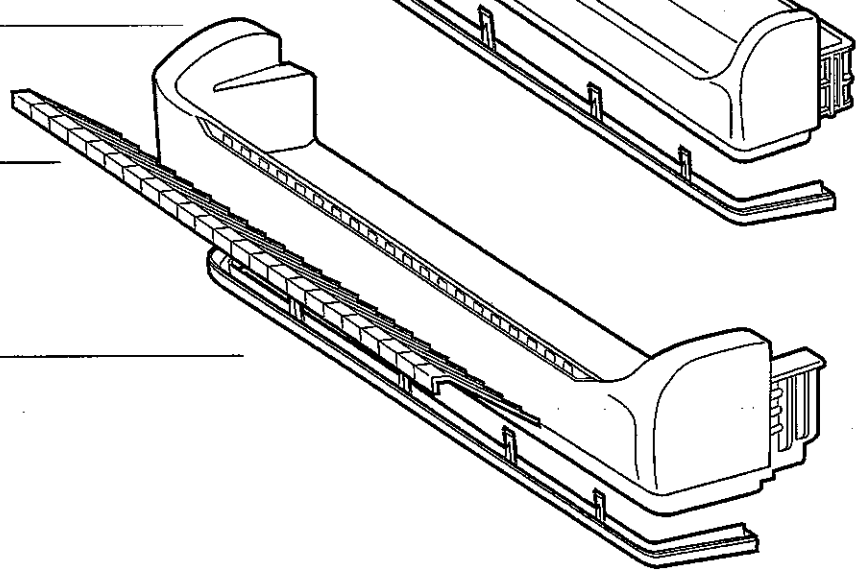


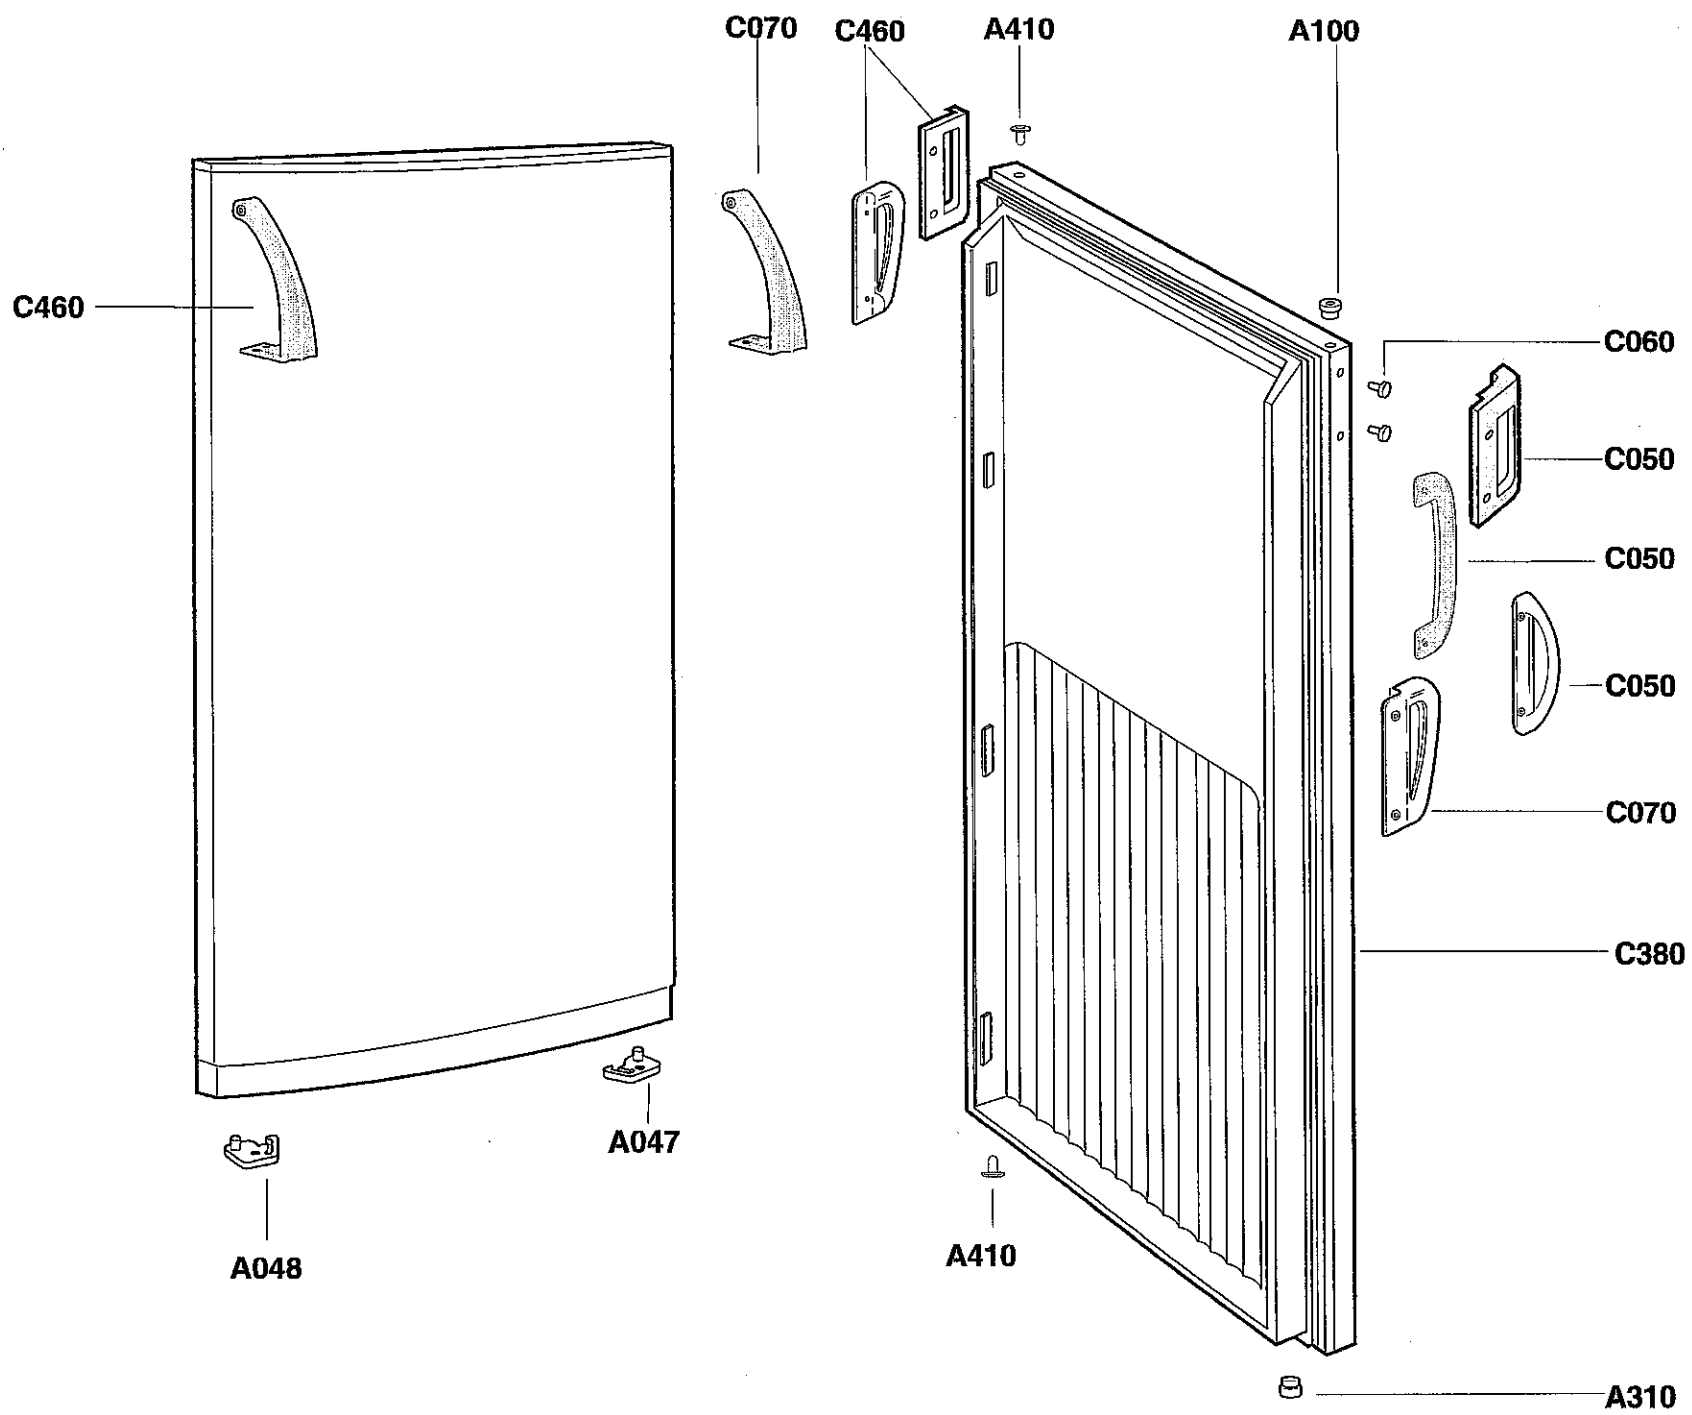

D093

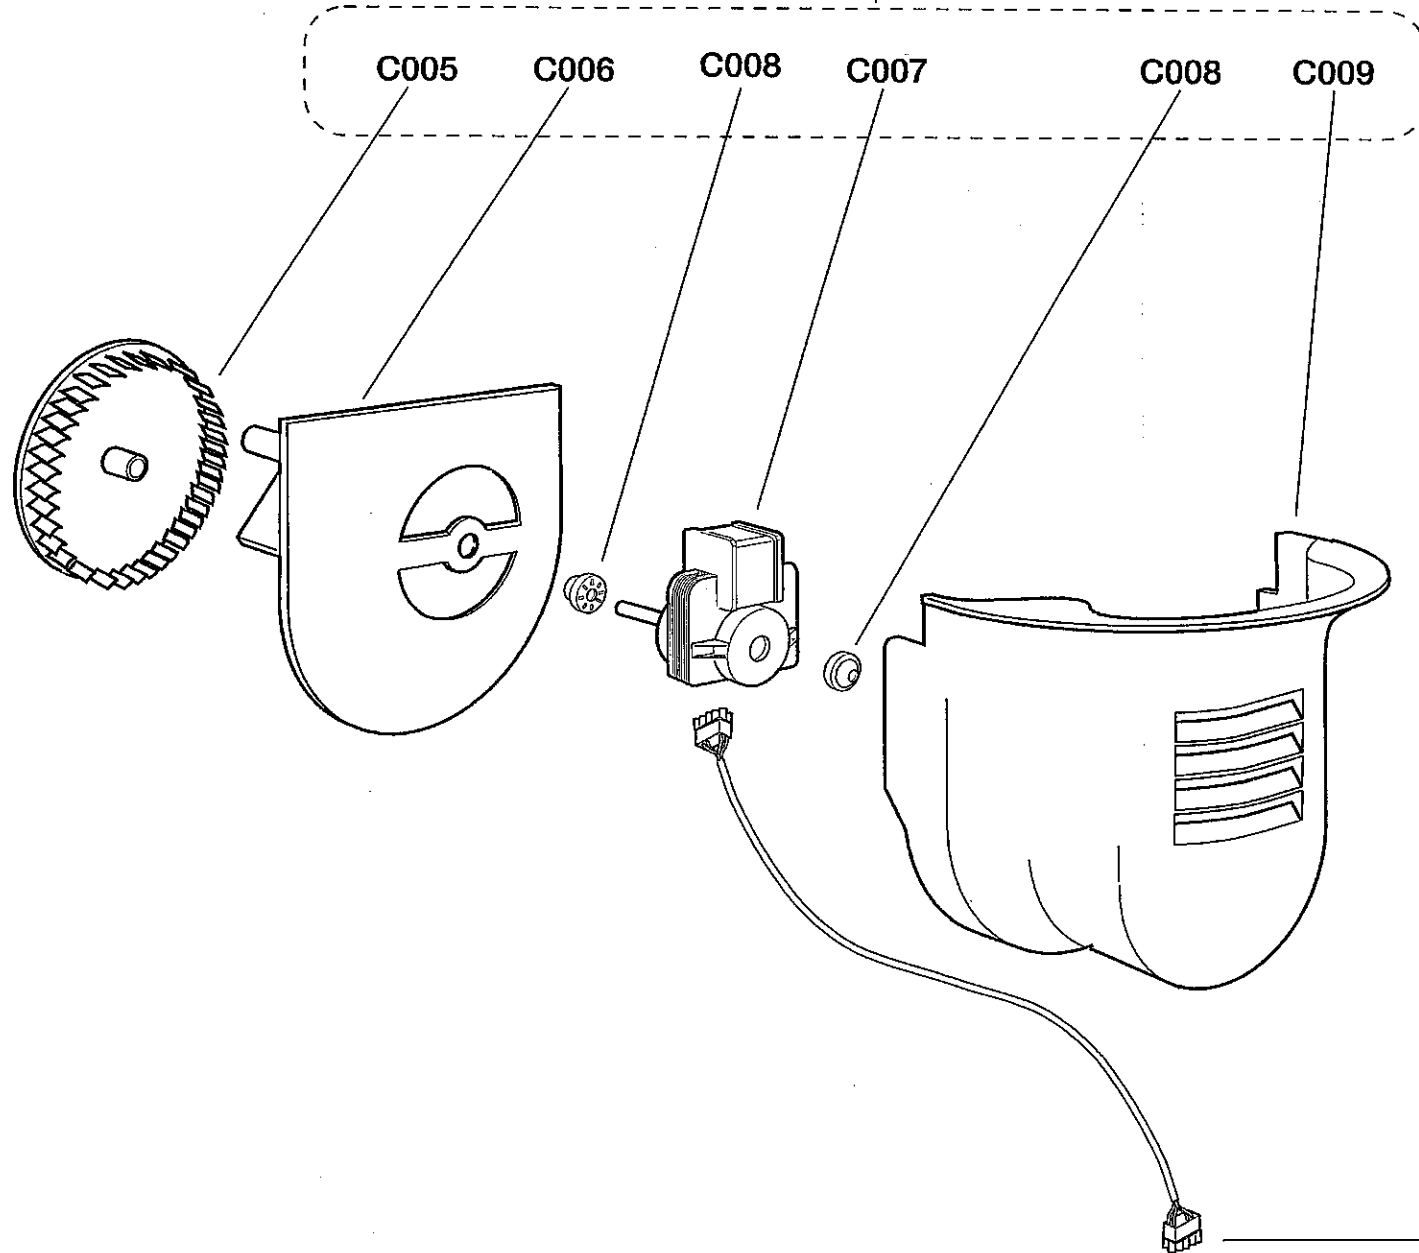

D088

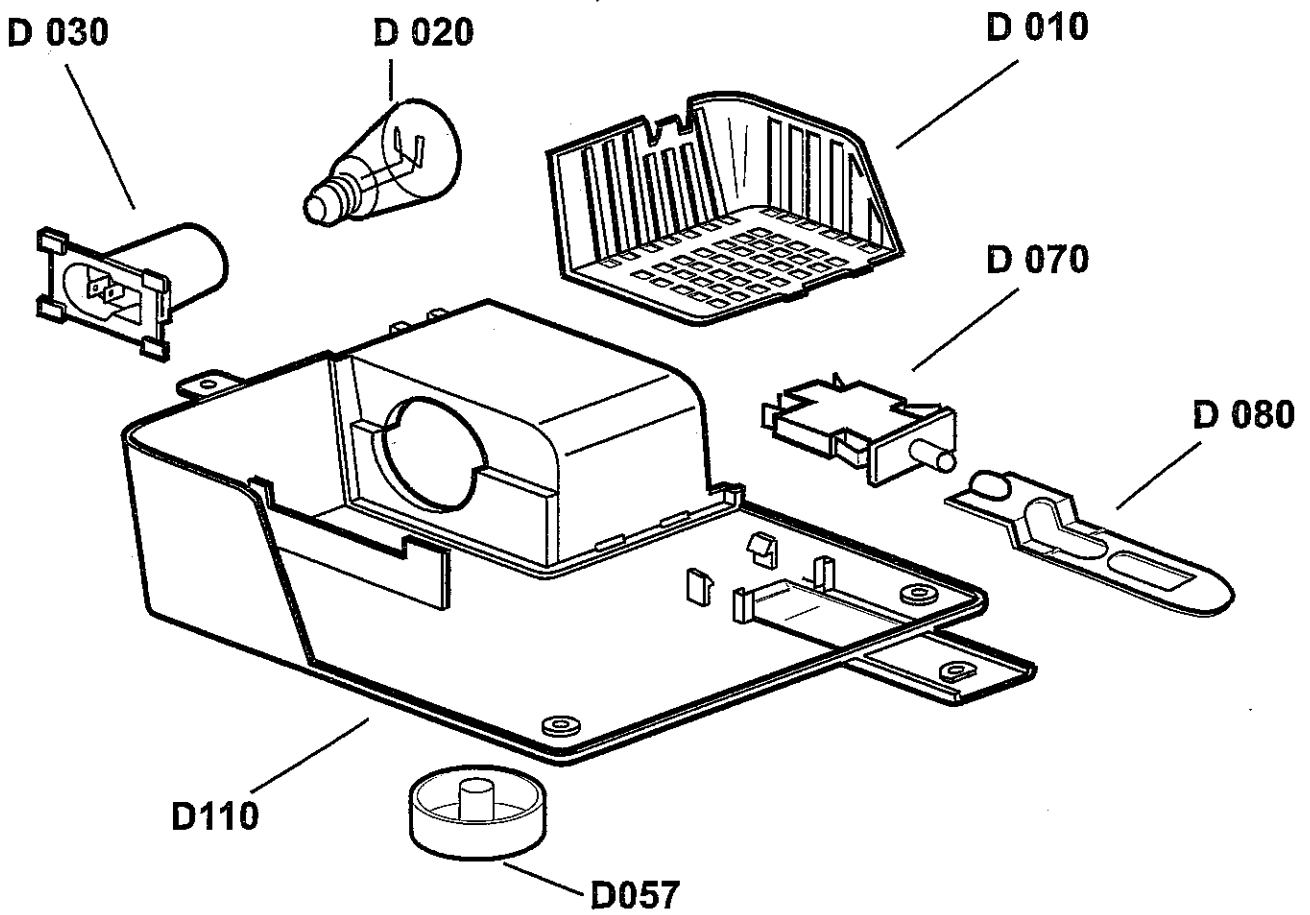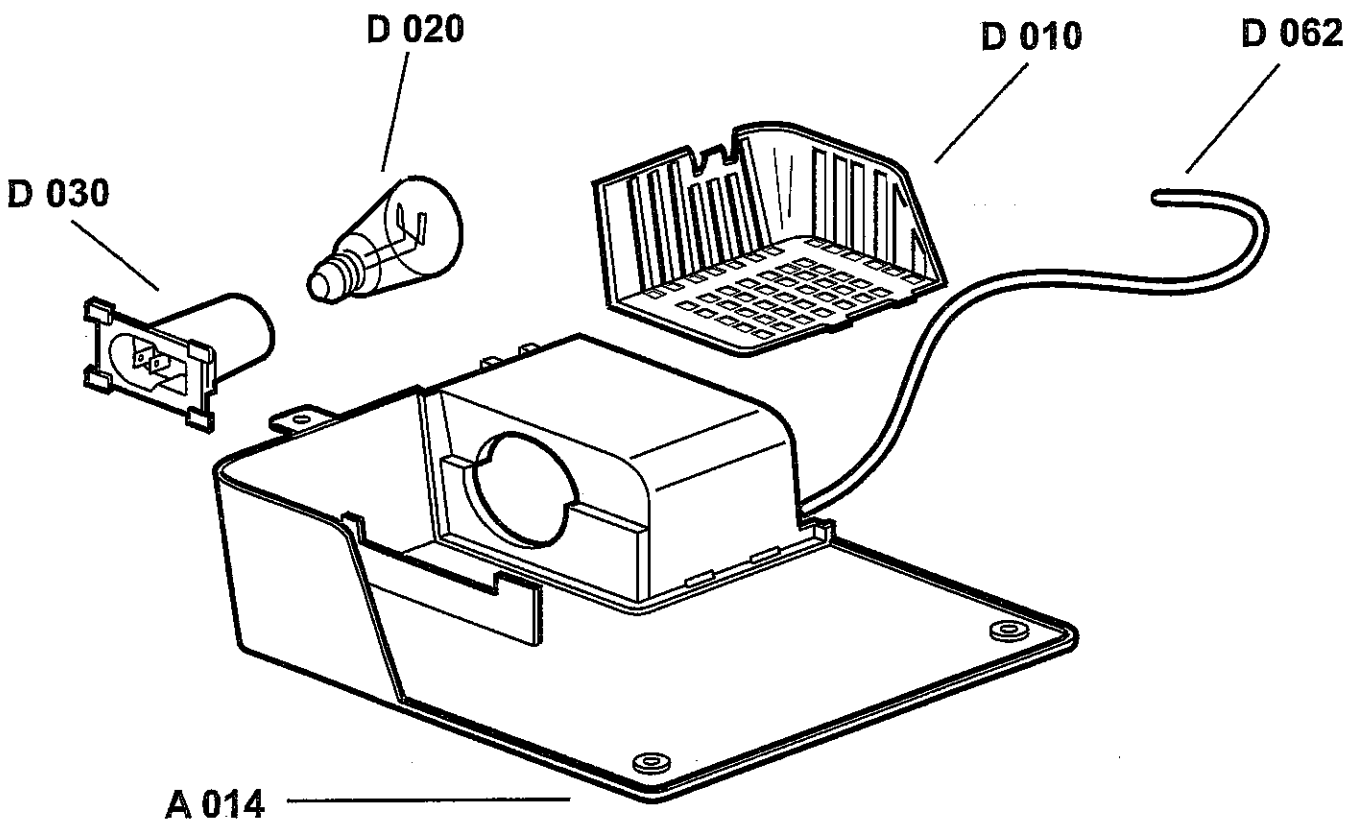

CC09

C025

CC10

C012 - C018

