



General View

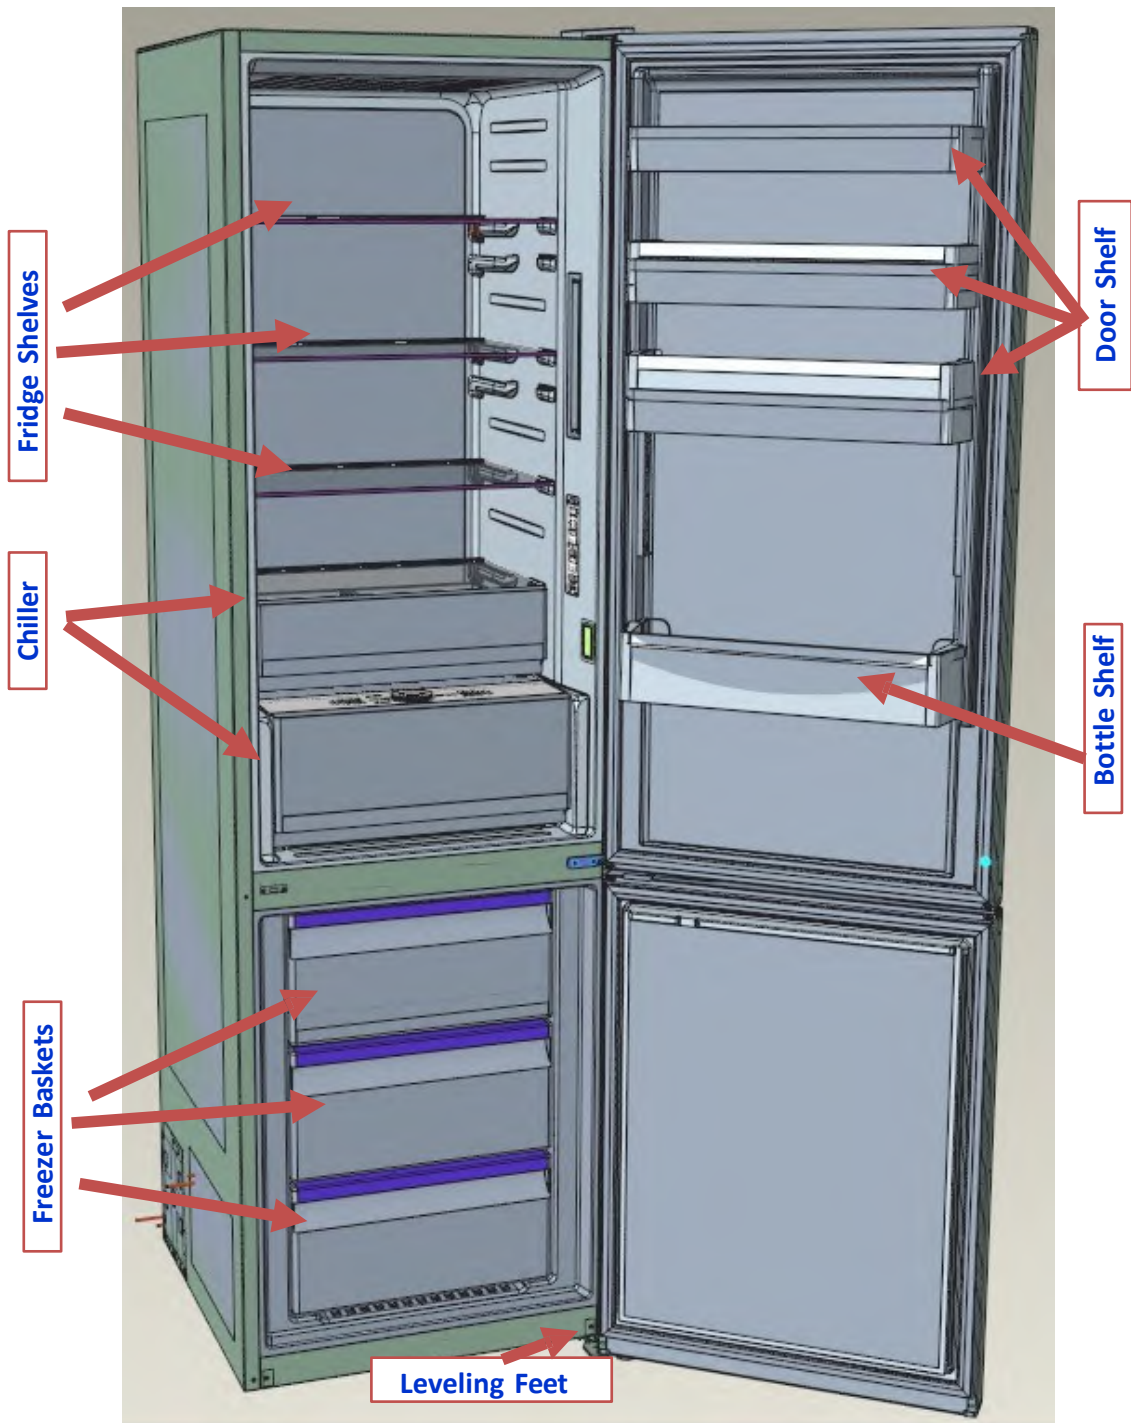

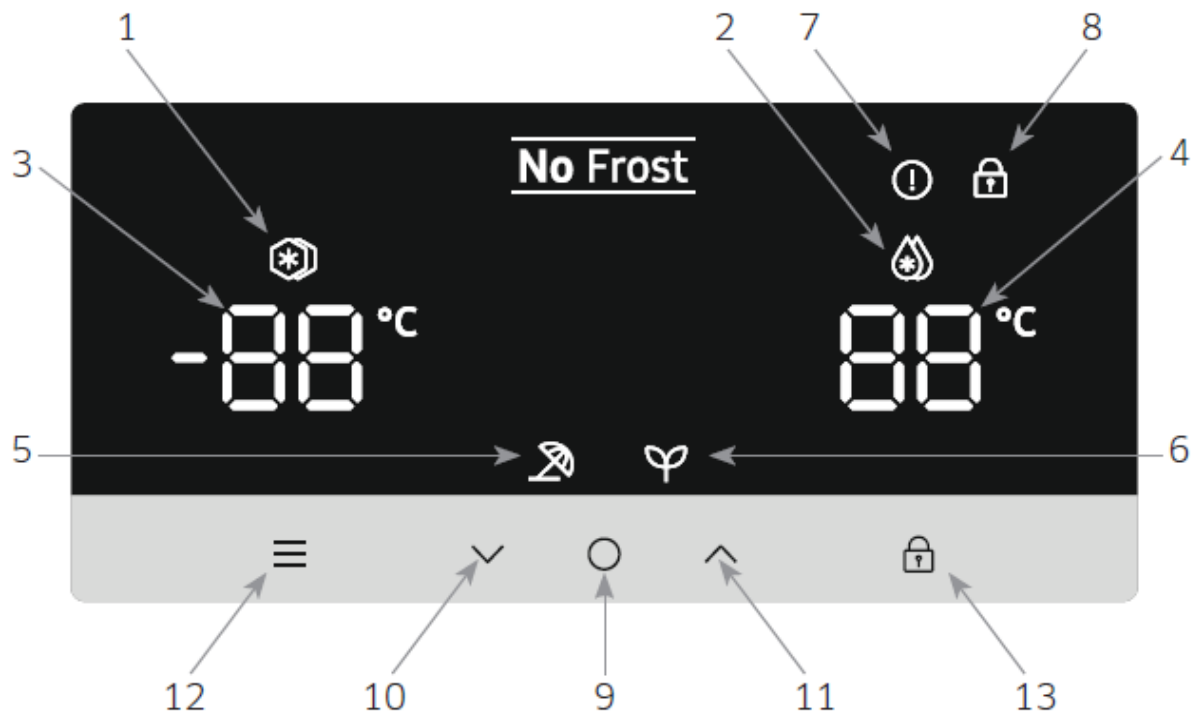

Using the Control Panel


- 1.Freezer temperature setting.
- 2.Super Freeze mode indicator
- 3.Fridge temperature setting
- 4.Super Cooling mode indicator
- 5.Holiday mode indicator
- 6.Eco mode indicator(*Before 15/07/2026*)
- 7.Alarm indicator
- 8.Child Lock mode indicator
- 9.Screen selector
- 10.Decrease value
- 11.Increase value
- 12.Mode selector
- 13.Child Lock selector
- 14.Light Off

1. Super Freeze Mode

Purpose

- To freeze a large quantity of food that cannot fit on the fast freeze shelf.
- To freeze prepared foods.
- To freeze fresh food quickly to retain freshness.

How to use

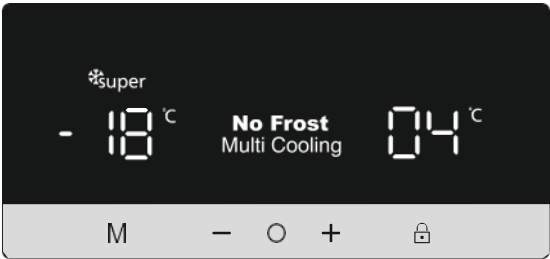

- Press  button (#9 on control panel diagram), until the 'Freezer temperature setting' is selected (#1).
- Once Freezer temperature setting is selected, the temperature will flash.
- Press the  button (#10) repeatedly until the 'Super Freeze' logo appears  in the top left corner (#2)
- Once the Super Freeze mode has been set, the machine will beep to confirm the mode has been switched on.
- After the beep the original temperature of the freezer will appear on screen.
- Mode can be cancelled by repeating the above instructions from the beginning.

During this mode:


- Temperature of the fridge compartment may be adjusted, this will not impact Super Freeze mode.
- Economy and Holiday mode cannot be selected whilst Super Freeze mode is active.

3.3.2 Super Cool Mode

Purpose

- To cool and store a large quantity of food in the fridge compartment.
- To quickly cool drinks.

How to use

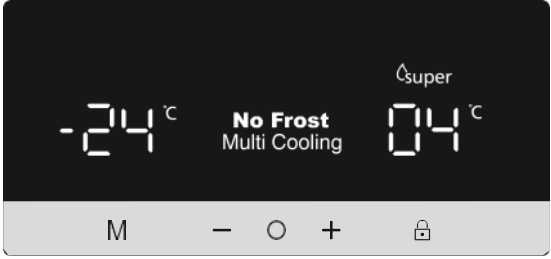

- Press  button (#9 on control panel diagram), until the 'Fridge temperature setting' is selected (#3).
- Once fridge temperature setting is selected, the temperature will flash.
- Press the  button (#10) repeatedly until the 'Super Cool' logo appears  in the top right corner (#4)
- Once the Super Cool mode has been set, the machine will beep to confirm the mode has been switched on.
- After the beep the last temperature of the fridge will appear on screen.
- Mode can be cancelled by repeating the above instructions from the beginning.

During this mode:

- Temperature of the freezer compartment may be adjusted, this will not impact Super Cool mode.
- Economy and Holiday mode cannot be selected whilst Super Cool mode is active.


Before 15/07/2026

3.3.3 Economy Mode

Purpose

Energy savings. During periods of less frequent use (door opening) or absence from home, such as a holiday, Eco program can provide optimum temperature whilst saving power.

How to Use

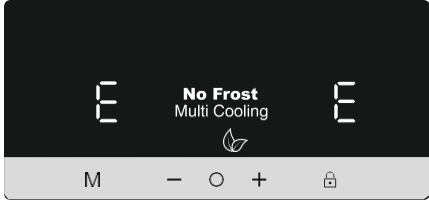

- Press **M** button (#12 on control panel diagram), until the 'Eco' mode icon  appears (#6).
- Once the 'Eco' mode has been set, the machine will beep to confirm the mode has been switched on.
- After the beep both the fridge and freezer temperature setting (#1 and #3) will display an 'E'.
- Eco mode can be cancelled by pressing the **M** button (#12).


During this mode:

- The freezer and fridge temperature may be adjusted however the adjustment will not be made until Eco mode is cancelled. When Eco mode is cancelled, the selected setting values will be activated and the temperature(s) will be adjusted.
- Super Cool or Super Freeze mode can be selected, however by selecting either modes Eco mode is cancelled immediately.
- Holiday mode can only be selected after cancelling the Eco mode.

Eco+Light Off Mode

- Press **M** button (#12 on control panel diagram), until the 'Eco' and 'Light Off' icons appear (#14, #6).
- When this mode is selected, the Eco (leaf #6) icon and Light Off (lamp #14) icon will be active simultaneously. The product

lighting will not operate to save energy.

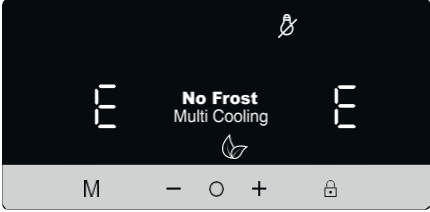


3.3.4 Holiday Mode

Purpose

Holiday mode is to be used if the device is to be left for an extended period.

How to Use

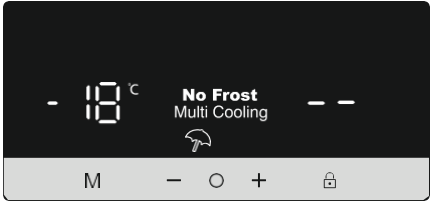

- Press **M** button (#12 on control panel diagram), until the 'Holiday' mode icon  appears (#5).
- Once the 'Holiday' mode has been set, the machine will beep to confirm the mode has been switched on.
- After the beep the fridge will display '--' and the freezer will display the -18 °C set temperature.
- Holiday mode can be cancelled by pressing the **M** button (#12).

During this mode:


- Freezer and fridge temperature may be adjusted however the adjustment will not be made until Holiday mode is cancelled. When Holiday mode is cancelled, the selected setting values will be activated and the temperature(s) will be adjusted.
- Super Cool or Super Freeze mode can be selected, however by selecting either modes Holiday mode is cancelled immediately.
- Eco mode can only be selected after Holiday mode has been cancelled.

3.3.5 Light Off Mode

- Press **M** button (#12 on control panel diagram), until the ‘Light Off’ icon appears (#14).
- Light Off mode can be selected when the ambient light level is enough. This mode saves energy. The user can cancel the mode at any time.

During this mode:

- When the mode is activated, the product's interior lights will not work.

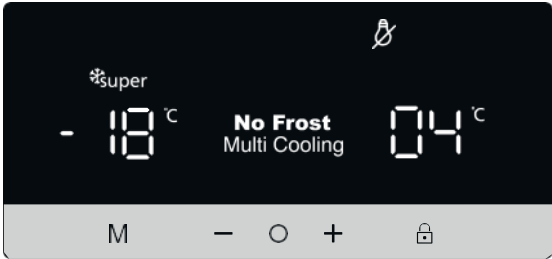


3.3.6 Drink Cool Mode

Purpose

This mode is used to cool drinks within an adjustable time frame.

How to Use

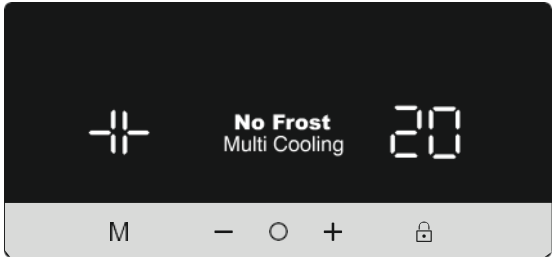

- Press **M** button (#12) and **○** (#9) button simultaneously for five seconds.
- The fridge temperature set indicator will start showing ‘05’. This value will flash on screen
- Users can either press **-** or **+** buttons to adjust the time period (05, 10, 15, 20, 25 or 30 minutes)
- When you select the time the numbers will blink 3 times on screen and sound beep beep. If the user do not press any button within 2 seconds the time will be set.
- The machine will then set the time, the remaining time will be shown on screen

- Once the total time has elapsed, an alarm will sound
- Cool Drink mode can be cancelled by following pressing the **M** button (#12) and **○** button (#9) simultaneously for five seconds.

During this mode:


- When Drink Cool and Child Lock modes are active, the Child Lock mode must be cancelled in order to stop the alarm sound
- While using this mode, you must regularly check the temperature of the bottles. When the bottles are cool enough, you must take them out of the appliance.
- Bottles can explode if left in the appliance for too long with Drink Cool mode active.

3.3.7 Screen Saver Mode

Purpose

This mode saves energy by switching off all control panel lighting when the panel is left inactive.

How to Use

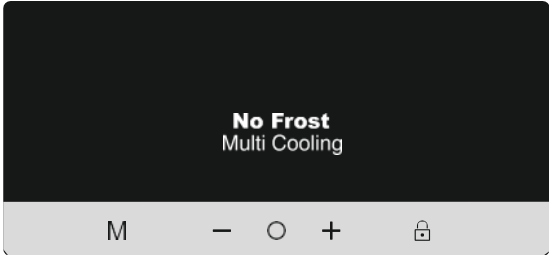

- Screen saver mode will be activated automatically after 30 seconds.
- If you press any key while the lighting of the control panel is off, the current machine settings will reappear on the display to let you make any change you wish.
- If you do not cancel the screen saving mode or press any key for 30 seconds, control panel lighting will switch off.

To deactivate the screen saving mode,

- To cancel the screen saving mode, first of all, you need to press any key to activate the keys and then press and hold the button **M** (#12) for 3 seconds.

	387 ELECTRONIC - ARES		
	Control Panel		


- To reactivate screen saving mode, press and hold the **M** button (#12) for 3 seconds.

3.3.8 The Child Lock Function

Purpose

Child Lock can be activated to prevent any accidental or unintentional changes being made to the appliance settings.

Activating Child Lock

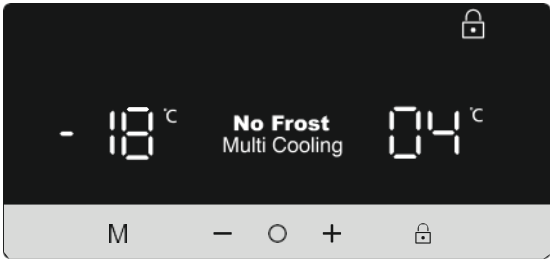

Press and hold Child Lock button  (#13) for 5 seconds.

Cancelling Child Lock

Press and hold Child Lock button  (#13) for 5 seconds.

Demo Mode

This mode will be use for only sales points by salesman to show functions & modes to customer without operating components as a compressor, fan, motor..Etc.

Entering Demo mode:

Firstly the power is on, secondly within 1 minute user will push **Mode, Cooler and Freezer Set Button** 5 seconds at the same time , Then appliance will go on “demo function” . «dE» will light on cooler set value screen for 1 second, and «On» will light on freezer set value screen for 1 second and off.

Every 10 seconds this operations will occur.


All functions can be adjusted to show how they are adjusted to the customer.

Canceling Demo mode:

For cancelling; Same operation will be used. If user will push **Mode, Cooler and Freezer Set Button** at the same time, demo function will be cancelled.

When appliance is Demo mode; if plug is removed or there is an electricity breakdown; demo mode will continue with current settings after user plug into or electricity breakdown finish.

Temperature Settings

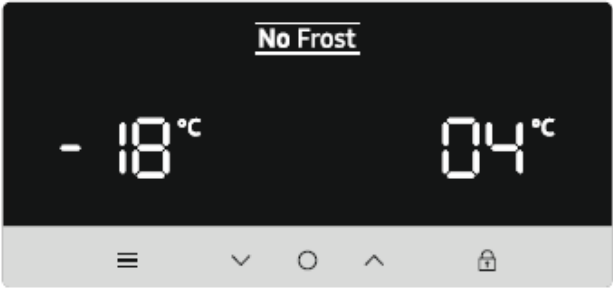


Freezer Temperature Settings

- Press () icon (#9 on control panel diagram), until the ‘Freezer temperature setting’ is selected (#3).
- Once Freezer temperature setting is selected, the temperature will flash.
- Users can then use the up or down arrow () / () to set the temperature (-16, -18, -20, -22, -24 °C and Super Freeze Mode).
- If Super Freeze mode or Eco mode is activated, the temperature will not change until the mode is cancelled.

Cooler Temperature Settings

- Press () icon (#9 on control panel diagram), until the ‘Fridge temperature setting’ is selected (#4).
- Once Fridge temperature setting is selected, the temperature will flash.
- Users can then use the up or down arrow () / () to set the temperature (8, 6, 5, 4, 2 °C and Super Cool Mode).
- If Super Freeze mode or Eco mode is activated, the temperature will not change until the mode is cancelled.

Freezer Compartment	Cooler Compartment	Remarks
-18 °C	4 °C	For regular use and best performance.
-20 °C, -22 °C or -24 °C	4 °C	Recommended when environmental temperature exceeds 30 °C.
Super Freeze mode	4 °C	Must be used when you wish to freeze food in a short period of time.
-18 °C, -20 °C, -22 °C or -24 °C	2 °C	These temperature settings must be used when the environmental temperature is high or if you think the refrigerator compartment is not cool enough becuse the door is being opened frequently.
-18 °C, -20 °C, -22 °C or -24 °C	Super Cool mode	Must be used when the refrigerator compartment is overloaded with food or when food needs to be cooled quickly.

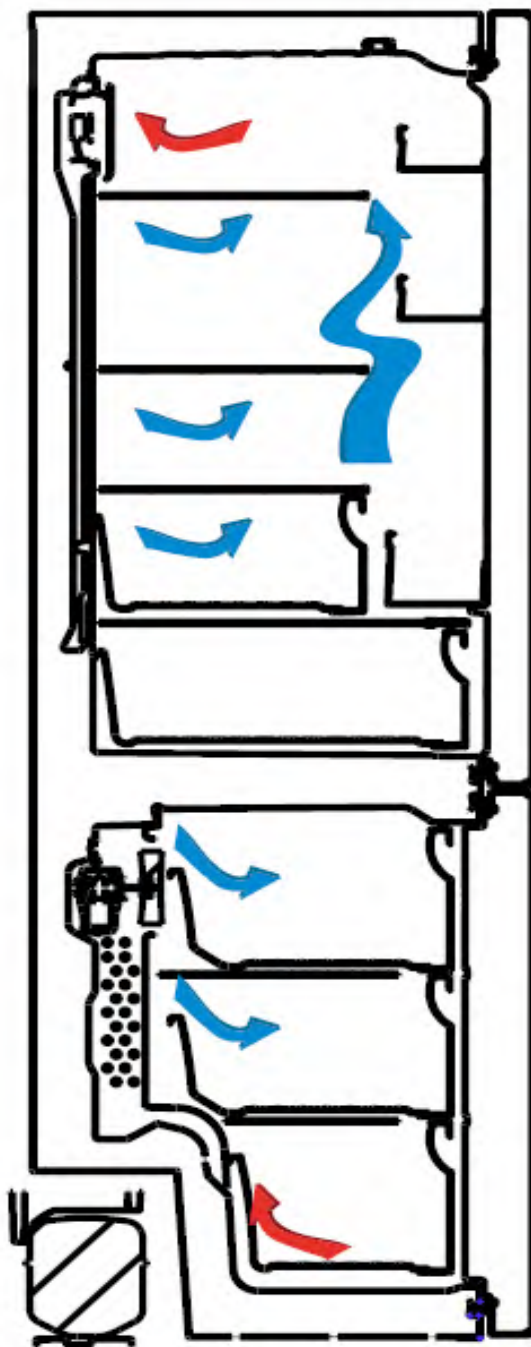

Cold Air



Returning warm air




387 ELECTRONIC - ARES



Warnings about Temperature Adjustments

- Your temperature adjustments will not be deleted when an energy breakdown occurs.
- It is not recommended that you operate your fridge in environments colder than 10°C in terms of its efficiency.
- Temperature adjustments should be made according to the frequency of door openings and the quantity of food kept inside the fridge.
- Do not pass to another adjustment before completing an adjustment.
- Your fridge should be operated up to 24 hours according to the ambient temperature without interruption after being plugged in to be completely cooled. Do not open doors of your fridge frequently and do not place much food inside it in this period.
- A 5 minute delaying function is applied to prevent damage to the compressor of your fridge, when you take the plug off and then plug it on again to operate it or when an energy breakdown occurs. Your fridge will start to operate normally after 5 minutes.
- Your fridge is designed to operate in the ambient temperature intervals stated in the standards, according to the climate class stated in the information label. We do not recommend operating your fridge out of stated temperatures value limits in terms of cooling effectiveness.

Climate Class	Ambient Temperature °C
T	Between 16 and 43 (°C)
ST	Between 16 and 38 (°C)
N	Between 16 and 32 (°C)
SN	Between 10 and 32 (°C)

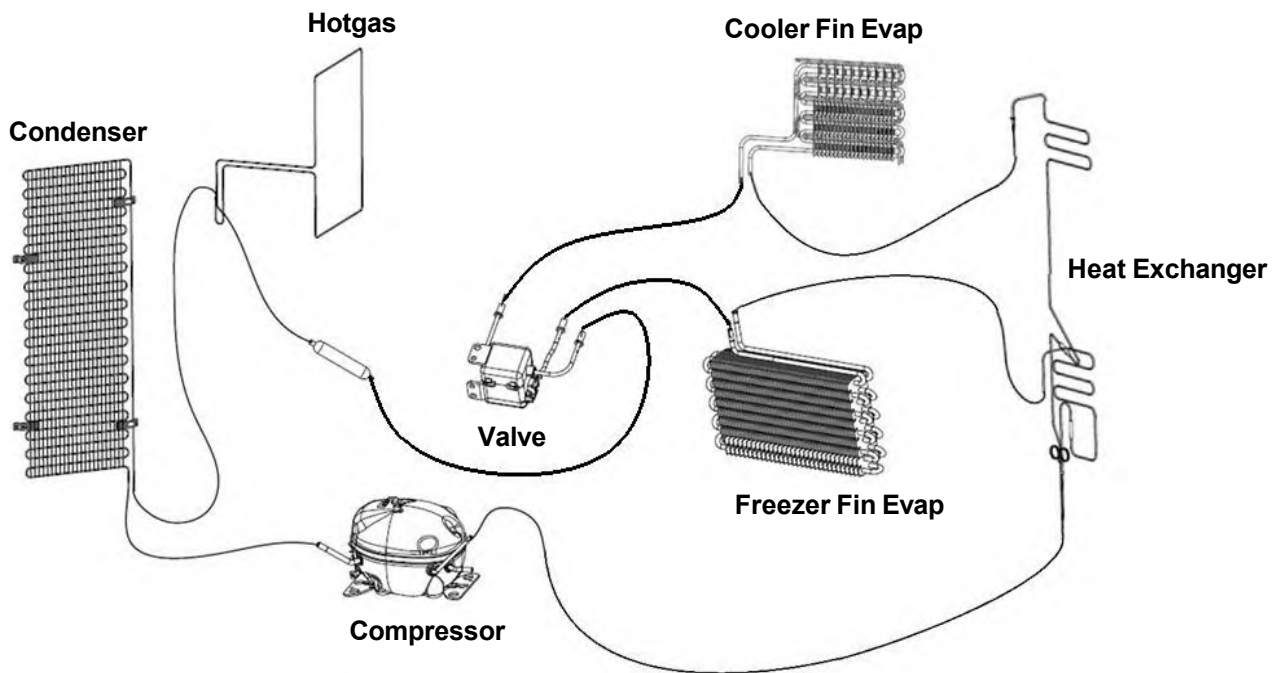

387 (with valve) has a 3-way valve and frequency controlled VCC Compressor. This valve operates according to the cooler, freezer and RDS sensor. In each ambient condition, whichever section (Cooler or Freezer) needs cooling, the valve automatically directs the gas to cool the relevant section.



387 ELECTRONIC - ARES



Sensor Rezistance Values

SENSOR VALUE TABLE			
-50	76.276	1	5.745
-49	71.906	2	5.503
-48	67.811	3	5.272
-47	63.973	4	5.053
-46	60.374	5	4.843
-45	56.998	6	4.644
-44	53.831	7	4.454
-43	50.857	8	4.273
-42	48.065	9	4.100
-41	45.442	10	3.935
-40	42.977	11	3.777
-39	40.660	12	3.627
-38	38.481	13	3.484
-37	36.432	14	3.347
-36	34.503	15	3.216
-35	32.688	16	3.091
-34	30.979	17	2.971
-33	29.369	18	2.857
-32	27.852	19	2.748
-31	26.422	20	2.643
-30	25.073	21	2.543
-29	23.801	22	2.448
-28	22.601	23	2.356
-27	21.469	24	2.269
-26	20.399	25	2.185
-25	19.389	26	2.105
-24	18.435	27	2.028
-23	17.533	28	1.954
-22	16.681	29	1.883
-21	15.875	30	1.816
-20	15.112	31	1.751
-19	14.391	32	1.689
-18	13.708	33	1.629
-17	13.061	34	1.572
-16	12.449	35	1.517
-15	11.868	36	1.464
-14	11.318	37	1.413
-13	10.797	38	1.365
-12	10.303	39	1.318
-11	9.834	40	1.273
-10	9.389	41	1.230
-9	8.967	42	1.189
-8	8.566	43	1.149
-7	8.185	44	1.111
-6	7.824	45	1.074
-5	7.480	46	1.038
-4	7.153	47	1.004
-3	6.843	48	0.972
-2	6.548	49	0.940
-1	6.267	50	0.910
0	6.000		



387 ELECTRONIC - ARES



Special Programs

When you first start the appliance

If the freezer and defrost sensors are warmer than -5°C , then the automatic test starts. The below listed components will be tested respectively with 5 second intervals.

- Radyal fan for 5 seconds
- Drain heater for 5 seconds
- Defrost heaters for 5 seconds
- Evaporator fan motor for 5 seconds
- Compressor for 5 seconds

After 5 seconds, the appliance will start to run.

Defrost algorithm

Defrosting activates after 55 hours of total running time of refrigerator or 18 hours of total compressor running time. Up to below mentioned reasons running times might decrease to 12 hours for refrigerator or 15 hours for compressor.

- Amount of ice formed,
- Number of times the door is opened and closed,
- Duration the door remained opened,
- Sudden usage change ,
- Sudden Cooler Compartment temperature increase,
- Sudden Freeze Compartment temperature increase,

Freezer Defrosting time

Under normal conditions, defrosting period ends when the defrost sensor measures 8°C . But if the defrosting period exceeds 37 minutes, then the defrosting mode completion temperature will be rised to 15°C .

Cooler Defrosting time

The cooler defrost and the freezer defrost are operated parallel except those below.

If the cooler defrost sensor does not feel 5°C three times during a particular period of time.

- Defrost will be activated after the refrigerator works max 9 hours. According to the conditions of usage, the defrost might be activated (due to mentioned those below) after the compressor works min 5 hours.
- Consisted ice amount,
- Door open-close,
- Sudden usage variance,
- Cooler sudden temperature rise,

Delay of the compressor run

Compressor will be started after 5 minutes of defrost mode.

Low Voltage Program

In case of supply voltage lower than 170 V for more than 5 seconds, the low voltage program will stop the compressor, evaporator fan motor, condenser fan motor and also the super freezing super cooling functions. If this situation happens during the defrost mode, then the appliance will stop during defrosting.

When the supply voltage reaches a value greater than 180V, the appliance will start again from the defrost mode.

If the appliance was not stopped during the defrost mode, then will be stopped for minutes more for compressor secure start-up and will be started from the last setted program.

When the electricity is off

- All the parameters and functions will be kept in the memory (except the child lock function)
- When the electricity is on if the defrost sensor measures $<5^{\circ}\text{C}$ then the compressor will be started after 5 minutes.
- The appliance will be started with the last program setted.



387 ELECTRONIC - ARES



SERVICE MODE

Push freezer temperature button continuously. During this time, open and close the cooler or freezer door for least 3 times. The appliance will enter service mode 3 sec. late.

- If there is a faulty situation, error code will be observed on screen. Otherwise nothing will be on the screen.
- Buzzer will sound beep for 0.1 sec. each 5 sec. during service mode.
- Child lock icon will blink
- Service function could be activated by pushing «Mode» button

SERVICE FUNCTIONO	
	While display is on service mode, it could be changed among service functions by touching mode icon
TOUCHING M (MODE) BUTTON ONE TIME.	STARTING MODE
	Eco icon blinks
	The number of components which is controlled is shown at freezer segments of display
	Eco icon goes off when the starting test finishes and then display returns to initial service mode.
TOUCHING M (MODE) BUTTON TWO TIMES.	MANUAL DEFROST
	Holiday icon blinks
	Defrost might be finished manually or automatically.
	Defrost might be finished manually by using the screen select button. Holiday icon goes off and display returns to initial service mode.
	Automatic defrost operates according to the standard defrost time.
TOUCHING M (MODE) BUTTON THREE TIMES.	Holiday icon goes off when he when the manual defrost ends and display returns to initial service mode.
	DAMPER MOTOR CONTROL MODE (this is a general function for other models which have damper)
	SC icons blink.
	There is no function due to not having damper component in the product
	Unless touch anything on the screen for 5 minutes , this function will be finished.
TOUCHING M (MODE) BUTTON FOUR TIMES.	SC icons goes off and display returns to initial service mode.
	CURRENT TEMPERATURE VALUES INDICATOR
	Sf icons blink.
	Current temp. Value of freezer set sensor is shown on cooler set segment. Freezer set segment shows "1"
	After touching child lock button one time , current temp. Value of cooler sensor is shown on cooler set segment. Freezer set segment shows «2"
	After touching freezer set icon one more time , current temp. Value of defrost sensor is shown on cooler set segment. Freezer set segment shows «3"
	After touching child lock button one more time , Constant value is shown on cooler set segment due to not being an ambient sensor in the appliance .Freezer set segment shows «4" (this is a general function for other models which have ambient sensor)
	After touching child lock button one more time , current temp. Value of cooler serpentine sensor is shown on cooler set segment. Freezer set segment shows «5"
	Unless touch child lock button for 5 minutes , function will be finished automatically.
	Touching screen select button, function will be finished manually.
TOUCHING M (MODE) BUTTON FIVE TIMES.	Sf icon goes off and display returns to initial service mode.
	DOOR SWITCH CONTROL
	No icons at display
	Cooler set segment gives information about cooler door
	Mode just could be deactivated by cooler set button.

	387 ELECTRONIC - ARES		
	User and Service Mode Error Message		

**Error codes can appear in normal use and they will be on a screen for 10 seconds. SR (Symbol blinks. No alarm sounds).

SENSOR	TEMPERATUR E	USER MODE REACTION	SERVICE MODE REACTION
(1) Freezer	> +50 °C or <-50 °C (sensor is short or open)	Display E 01	Display E 01
(2) Refrigerator		Display E 02	Display E 02
(3)Defrost		Display E 03	Display E 03
4)Serpantin		In normal mode, Serpantin sensor defect will not be shown.	Display E 05

Component defect on display

DEFECT TYPE	DETAILS	USER MODE REACTION	SERVICE MODE REACTION
Compressor Defect	Defrost sensor temp > -10°C (D sensor temp.unchanges for 10 min.continuous compressor run)	Display E 06	Display E 06
Defrost Heater Defect	Defrost sensor < 0°C		Display E 07

	387 ELECTRONIC - ARES	
	User and Service Mode Error Message	

Low voltage error on display

DEFECT TYPE	DETAILS	USER MODE REACTION	SERVICE MODE REACTION
Low voltage	Power supply < 170	Display E 08	Display E 08

Cooling error on display

Note: To prevent the wrong alarms, this alarm status is disabled on following conditions:

- During the first 6 hours after the product was firstly connected.
- During the defrost period
- During the first two hours after a defrost
- During the first 2 hours that one of the doors was open.

DEFECT TYPE	DETAILS	USER MODE REACTION	SERVICE MODE REACTION
Freezer sensor > -10°C	Freezer compartment is not cool enough	Display E 09	Display E 09
Ref. sensor > +10°C and if Holiday mode is not active	Refrigerator compartment is warm	Display E 10	Display E 10
Ref. sensor < -5°C	Refrigerator compartment is so cool	Display E 11	Display E 11
F sensor > -10°C and R sensor >15°C and if Holiday mode is not active	Freezer and Refrigerator compartment both are not cool enough	Display E 09 ,E 10	Display E 09 ,E 10



Reversing the door

1. Hold the top hinge cover and remove it toward that direction (Picture-1)



Picture-1

2. Disconnect the display connector. Unscrew the screws fixing the top hinge and remove it. (Picture-2)



Picture-2

3. Displace the top door (Picture-3)



Picture-3

4. Unscrew the two screws fixing the middle hinge and remove it. (Picture-4)



Picture-4

5. Displace the bottom door. (Picture-5)



Picture-5

6. Unscrew the adjustable foot (Picture-6) 7. Unscrew the bottom hinge screws. (Picture-7)



Picture-6



Picture-7

Reversing the door

8. Unscrew the bottom hinge pin and screw it to other hole. (Picture-8)

9. Screw the bottom hinge to the left bottom side of refrigerator. Screw the adjustable foot there. (Picture-9)



Picture-8




Picture-9

10. Unscrew the two screws fixing stopper and stopper support plate under the cooler door. After that screw the other side. (Picture-10)



Picture-10

11. Replace the top bushing and the top bushing cap at the bottom door. (Pic-11)

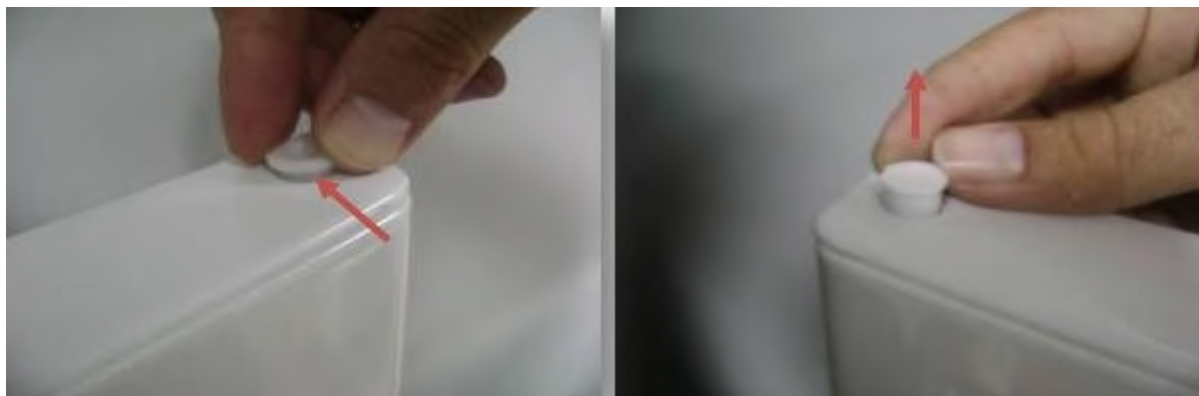

Picture-11

12. Remove the support plastic and then metal stopper placed under the upper door. (Picture-12.2) Then re screw these parts to the other side symmetrically. (remember the screw for the metal part must be screwed to the hole which is closer to the bushing). Do not use cordless screwdriver for these screws.



Picture-12.1



Picture-12.2

13. Remove the hinge cover on the top panel and replace to other side.(Picture-13)



Picture-13

Reversing the door

14. Remove the middle hinge cover and then screw the screw on the side panel (Picture-14.1) and assemble to the right side panel (Picture-14.2)



Picture-14.1



Picture-14.2

15. Place the bottom door (Picture-15.1) and rotate the middle hinge by 180°. After that, Screw to the right side on the middle sheet. (Picture-15.2)



Picture-15.1



Picture-15.2

	387 ELECTRONIC - ARES	
	Reversing the door	

- 16.** Remove the socket cover-right of the top door (Picture-16.1)
 Remove the display socket (Picture-16.2)
 Please use the socket cover to hidden other housing (Picture-16.3 / Picture-16.4)



Picture-16.1



Picture-16.2



Picture-16.3



Picture-16.4

- 17.** Place the top door to the middle hinge and then connect the display connector and screw the top hinge to the top panel. (Picture-17)
- 18.** Place the top hinge cover. (Picture-18)



Picture-17



Picture-18

Removing and Chancing The Mainboard


CAUTION: The plug must be pulled out before the mainboard group is removed.

1. Unscrew the screws which are fixing the main board cover. (Picture-1)



Picture-1

2. Pull the mainboard slightly forward and disconnect all the connectors and then replace it. Finally, place the mainboard cover and screw it. (Picture-2)

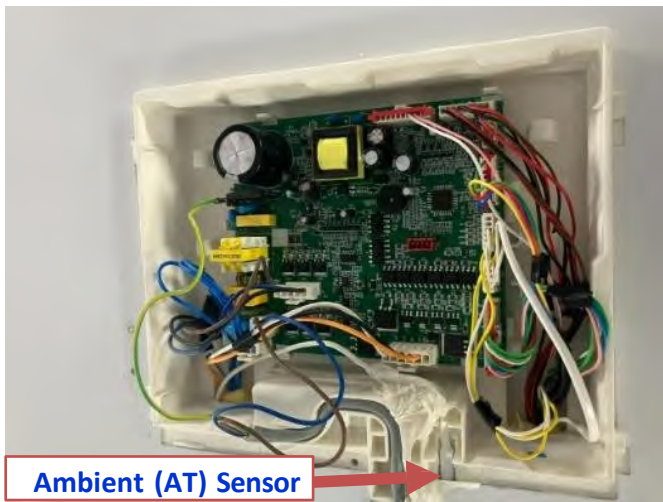

Picture-2

Removing- Assembling LEDs and LED's Covers

1. Stick a tape to protect plastic. Insert a flat screwdriver into the gap and remove the cover. (Picture-1)




Picture-1

2. Remove the led strip light from its housing. (Picture-2)



Picture-2

3. Disconnect the connector and change the led light strip. (Picture-3)

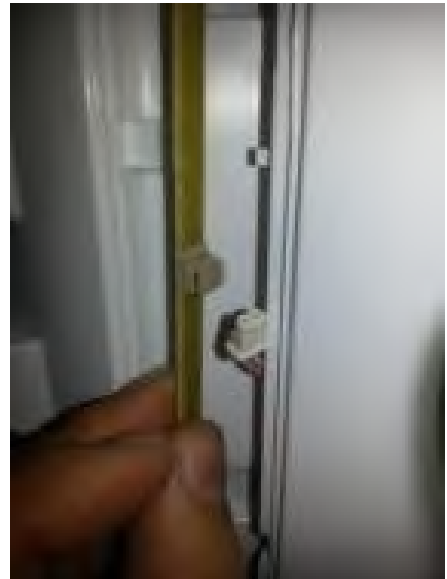

Picture-3



387 ELECTRONIC - ARES

Removing- Assembling LEDs and LED's Covers



4. First, place the bottom point of the led light strip and then place towards other side.(Picture-4)



Picture-4

5. Reassemble the led cover. (Picture-5)



Picture-5

Not: The method of removing the side led and ceiling led is similar.



387 ELECTRONIC - ARES

Removing The Cooler Air Duct and Cooler Sensor



1. Remove the cooler glass shelves and the drawers. (Picture-1/ Picture-2)



Picture-1

Cooler Glass Shelves



Picture-2

Drawers

2. Remove the air duct by unscrewing its tabs. (Picture-3/Picture-4)




Picture-3




Picture-4

Not: The technical drawing of the cooler air duct is as follows. The tab positions can be seen in detail.

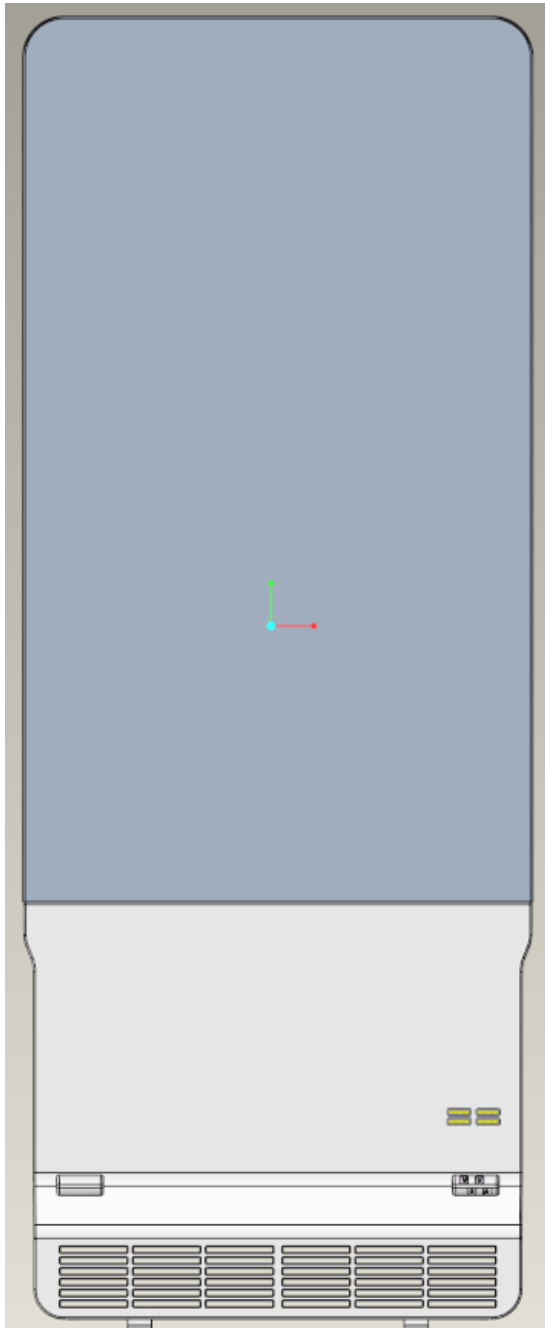




Front View

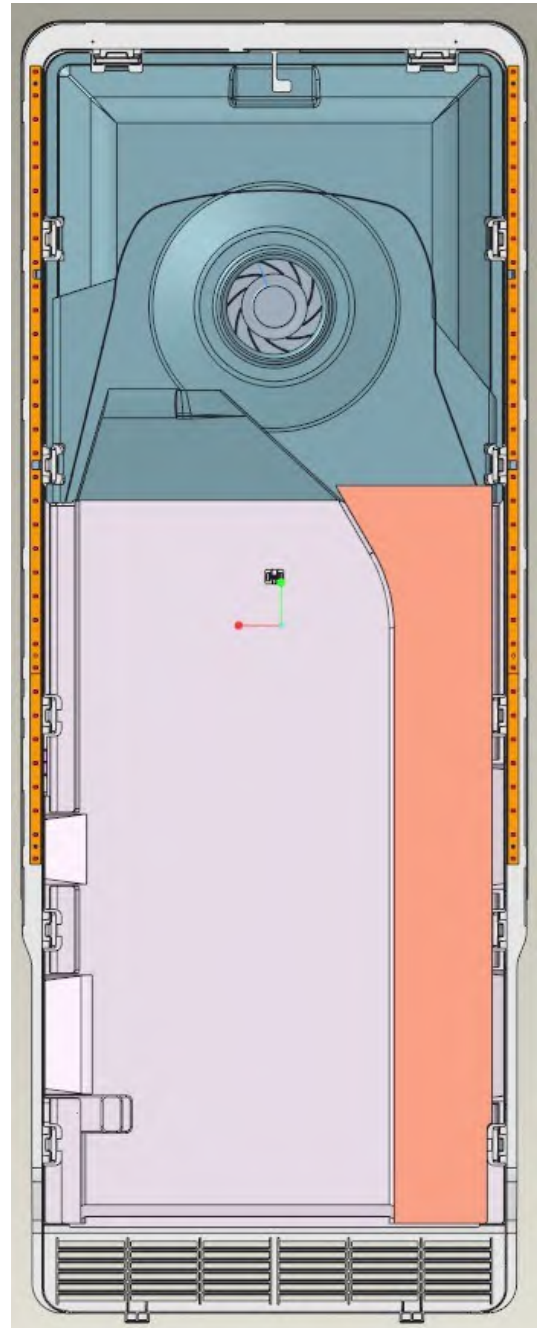

Back View

Removing The Cooler Air Duct and Cooler Sensor

Not: The technical drawing of the cooler air duct is as follows. The tab positions can be seen in detail.

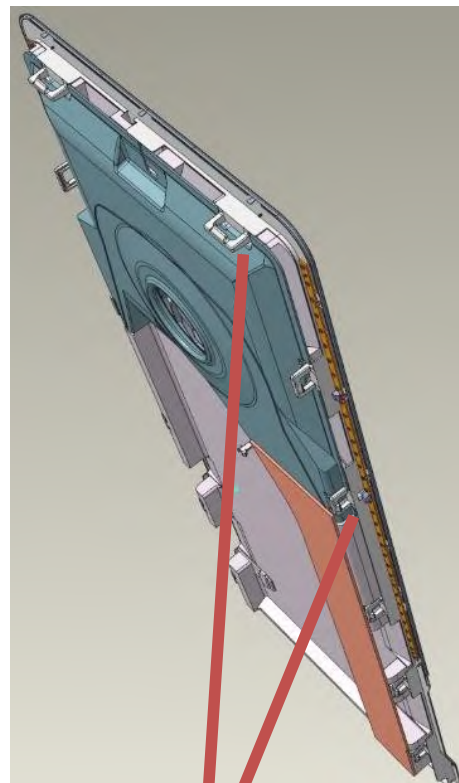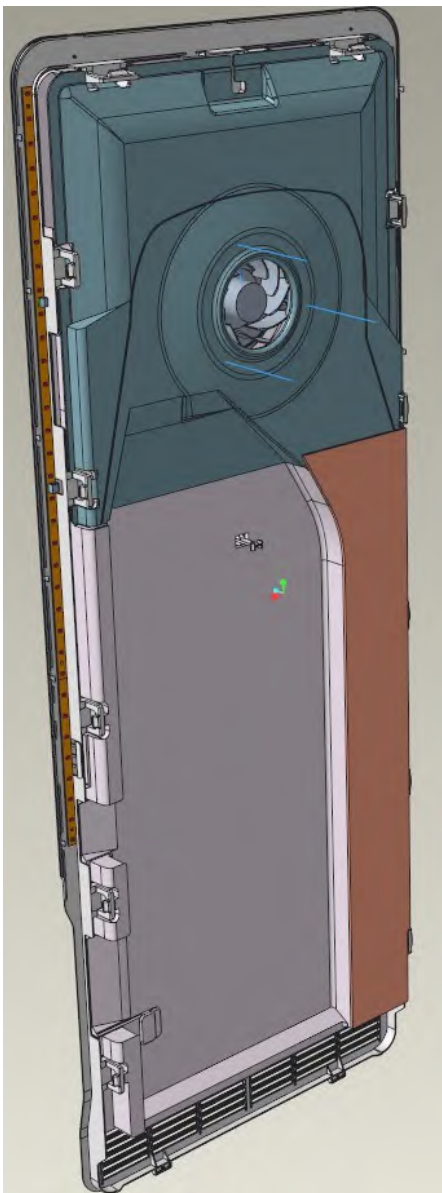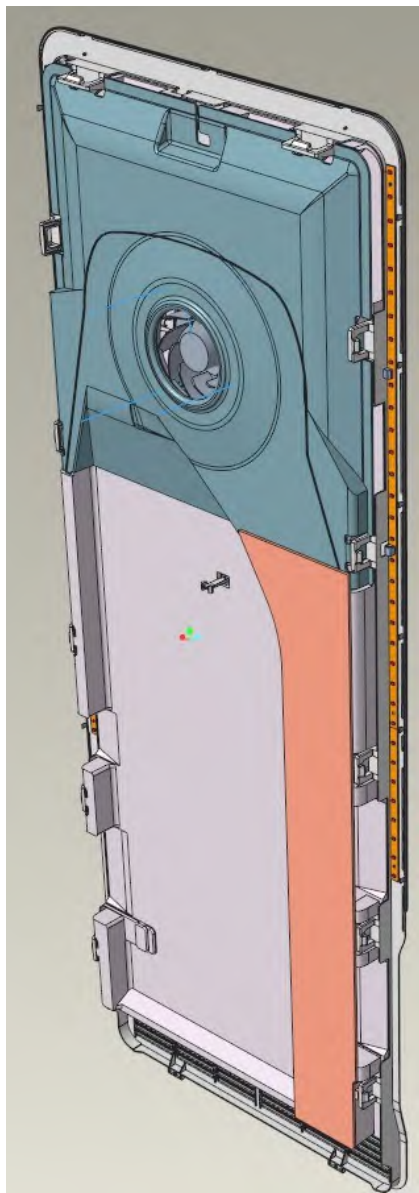

Tabs

3D View

CAUTION: Pay attention not to damage the tabs.

Removing The Cooler Air Duct and Cooler Sensor


3. Disconnect the connector after removing the cooler air duct (Picture-5)



Picture-5




4. Remove the fan cover by lifting the tabs (Picture-6)

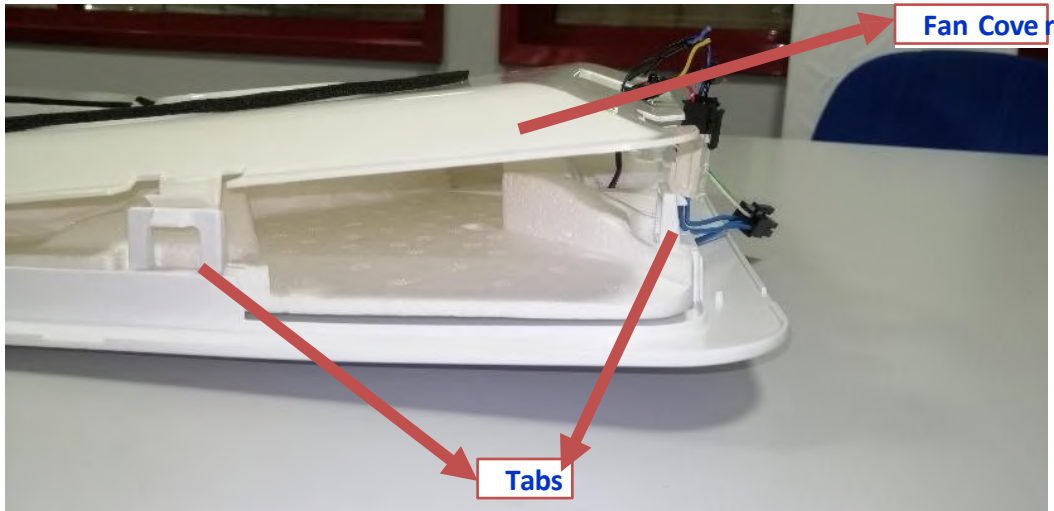


Picture-6

5. After the fan cover (Picture-7) is removed, the cooler air duct styrofoam (Picture-8) is removed.

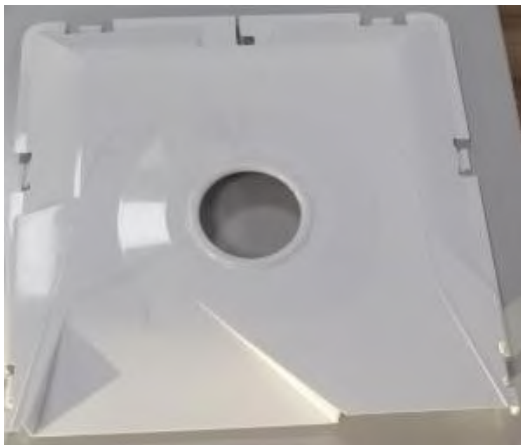


Picture-7

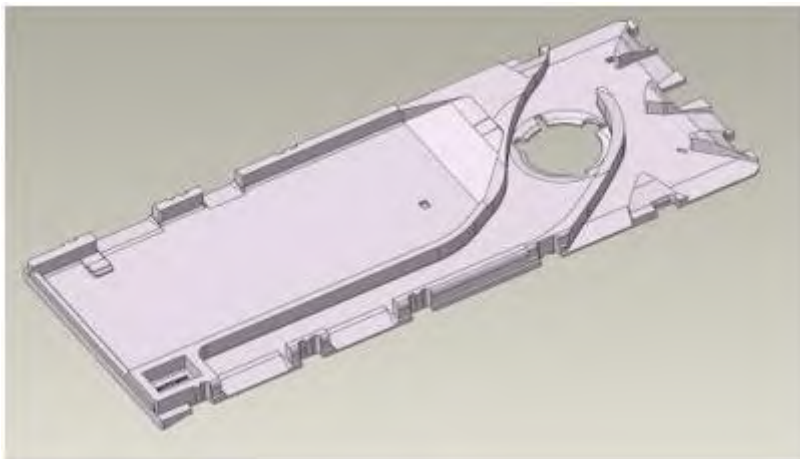

Picture-8

Removing The Cooler Air Duct and Cooler Sensor

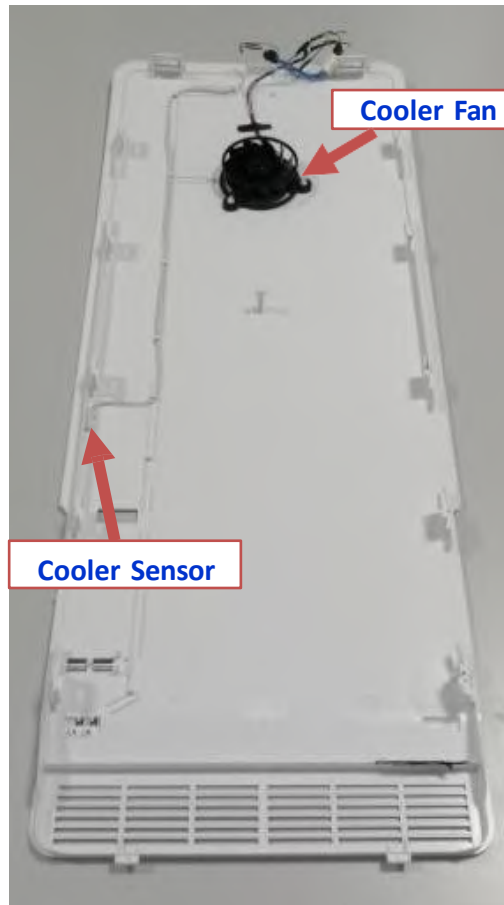


Picture-9

6. After separating the air duct plastic (Picture-9), cooler fan and cooler sensor can be removed as shown in the image below. (Picture-10/Picture-11)



Picture-10

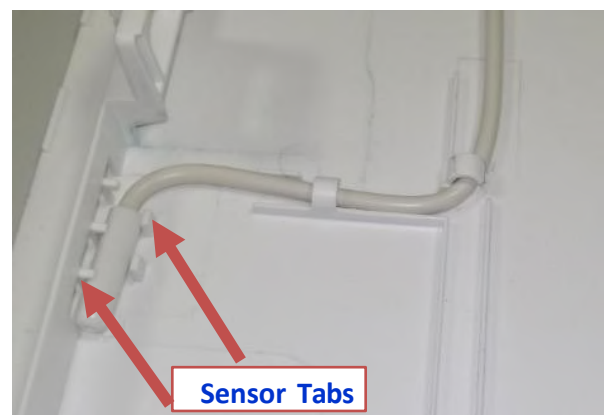


Picture-11

CAUTION: Pay attention not to damage fan holders and sensor tabs.

1. The separated air duct plastic, air duct styrofoam and fan holder are reassembled. After the fan socket is installed, the lower tabs (Picture-2) of the air duct plastic are inserted into the slot detail (Picture-1) in the body. (Picture-3)



Picture-1

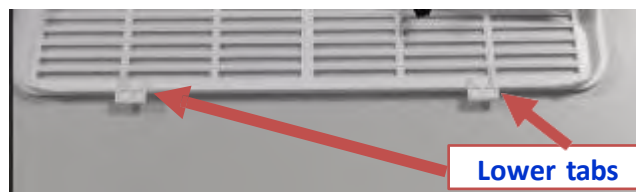

Picture-2



Picture-3

2. The air duct is pressed to the tab details in the technical drawing. (Picture-4)



Picture-4

	387 ELECTRONIC - ARES	
	Removing The Freezer Air Duct and Freezer Sensor	

1. Displace the baskets. (Picture-1/Picture-2)



Picture-1



Picture-2

2. Unscrew the screw fixing the freezer air duct. (Picture-3) and removing the freezer bottom cover by flexing back side of it. (Picture-4)



Picture-3



Picture-4




387 ELECTRONIC - ARES

Removing The Freezer Air Duct and Freezer Sensor




Not: The technical drawing of the cooler air duct is as follows.

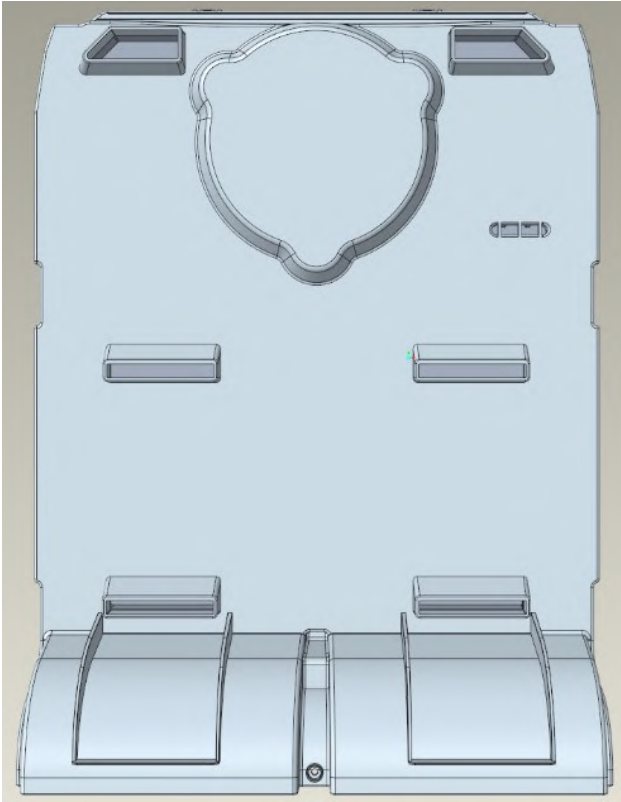

Front View




Back View

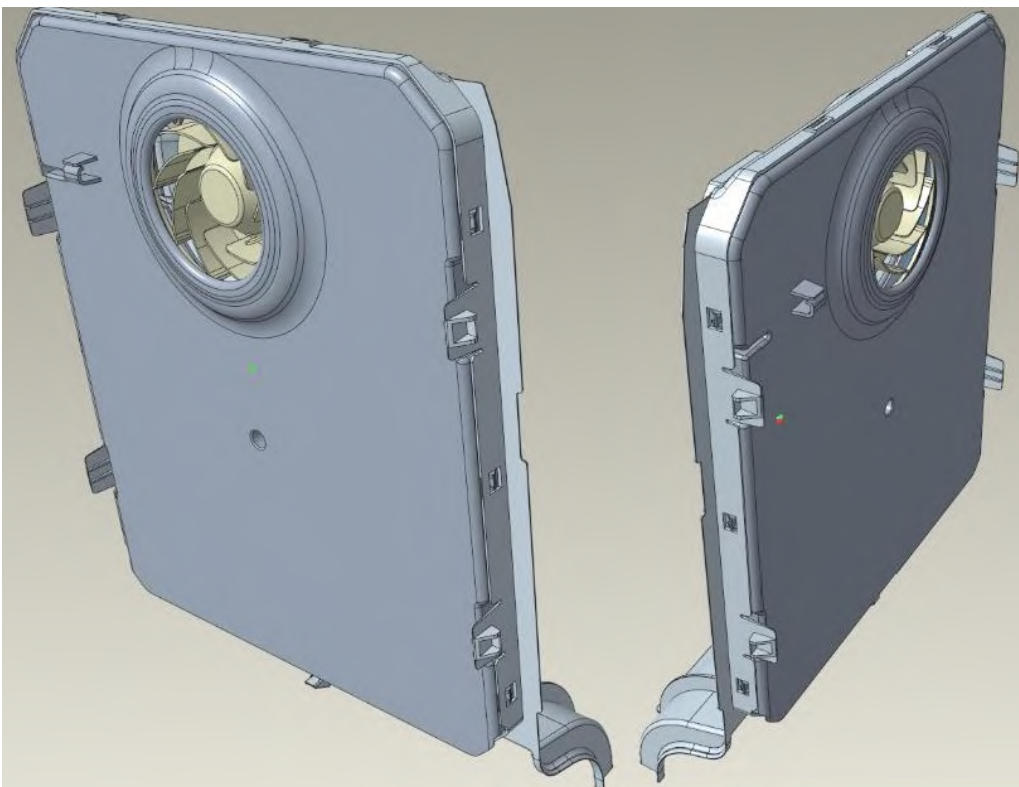

3D View

3. The freezer sensor cable and freezer fan cables are removed from their sockets.
(Picture-5)

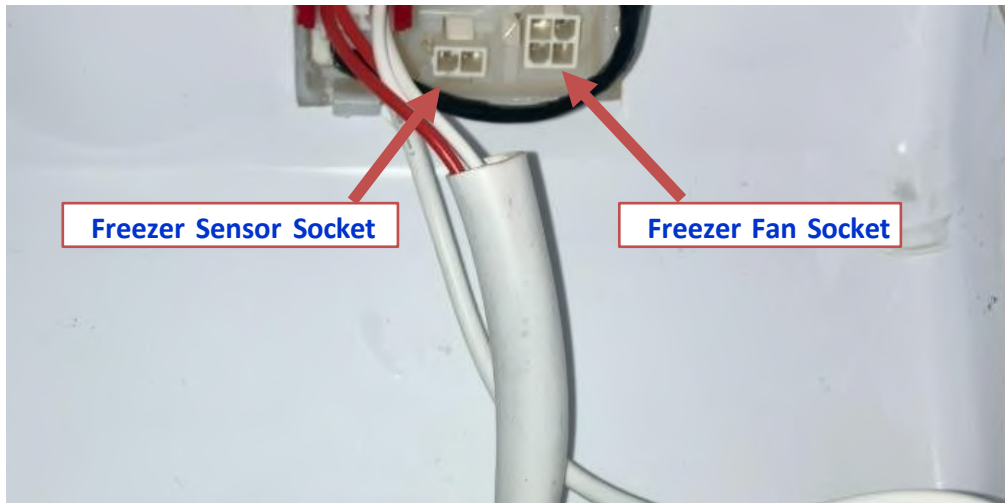

Picture-5



4. Remove the fan cover by lifting the tabs (Picture-6)



Picture-6

5. After the fan cover (Picture-7) is removed, the freezer air duct styrofoam (Picture-8) is removed.




Picture-7



Picture-8

	387 ELECTRONIC - ARES	
	Removing The Freezer Air Duct and Freezer Sensor	

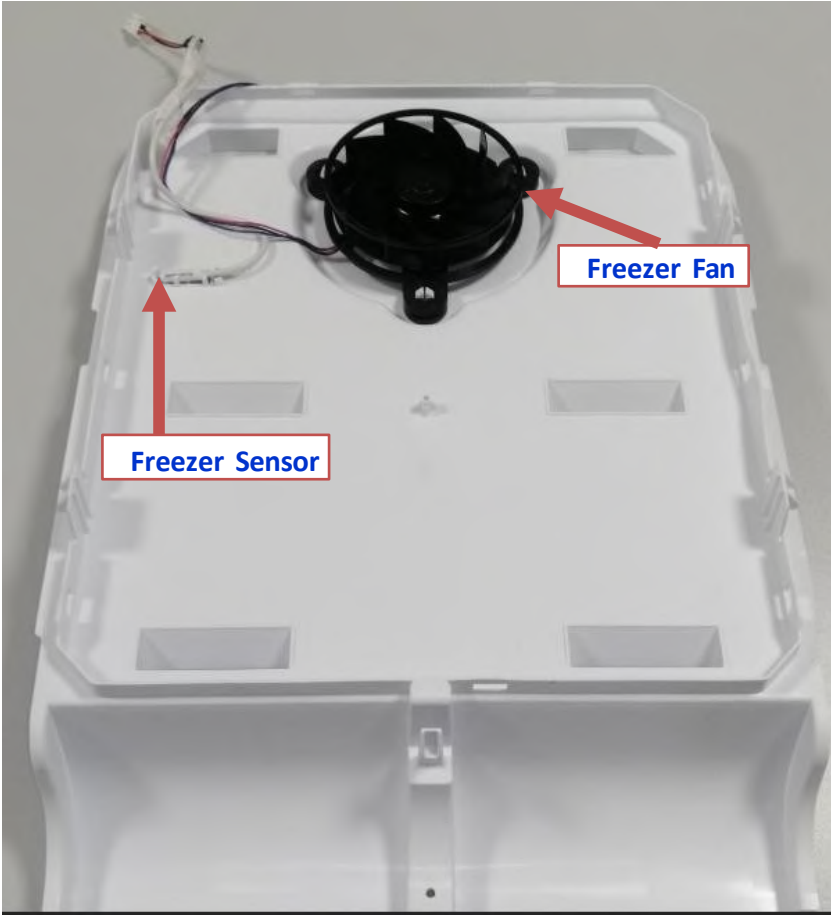


Picture-9

6. After separating the air duct plastic (Picture-9), freezer fan and freezer sensor can be removed as shown in the image below. (Picture-10/Picture-11)



Picture-10

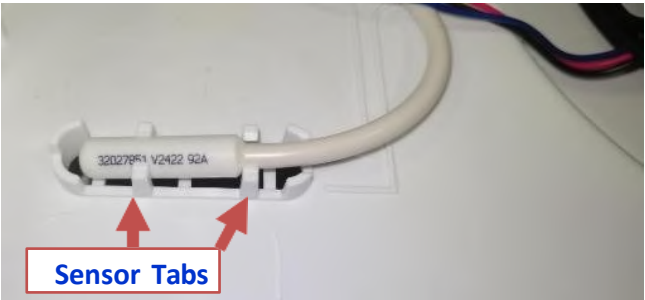

Picture-11

CAUTION: Pay attention not to damage fan holders and sensor tabs.

Reassembling The Freezer Air Duct

1. The separated air duct plastic, air duct styrofoam and fan holder are reassembled. After the freezer fan and freezer sensor socket is installed, the freezer air duct is positioned on the body (Picture-1). Installation is completed by screwing from the slot. (Picture-2)




Picture-1



Picture-2


Removing The Fin Evap Resistance

1.Remove the fin evaporator resistance connectors from the sockets. (Picture-1)

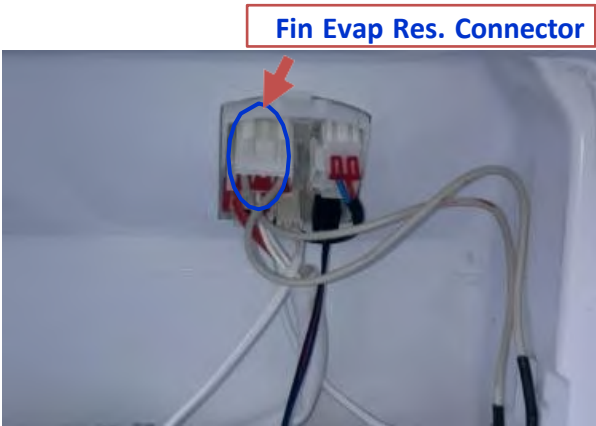

Picture-1

2. Displace the fin evaporator balanced by holding on both sides. (Picture-2)

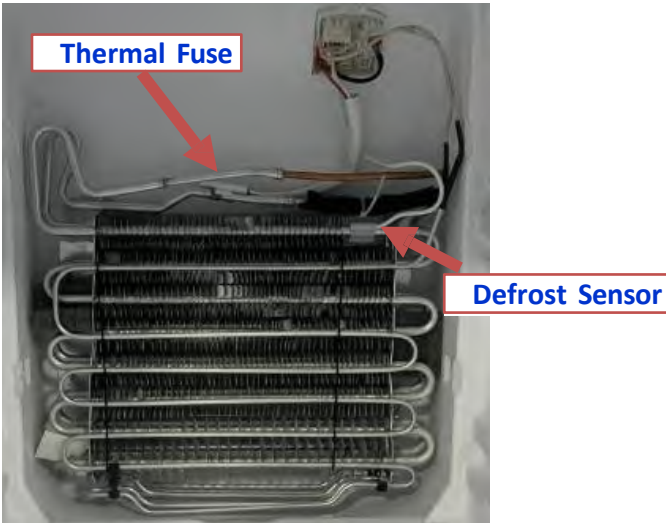


Picture-2

CAUTION: The fin evaporator should not be pulled upward-downward. Otherwise, the fin evaporator fixing plastics might be broken.


Removing The Thermal Fuse

1. Remove the thermal fuse connector. (Picture-1)

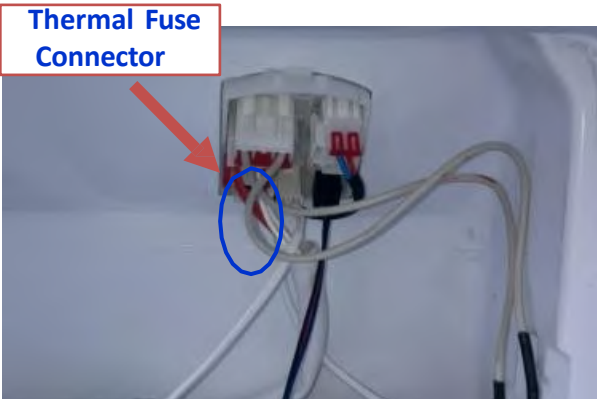

Picture-1

2. Thermal fuse has two details. These details hold on to the pipe. It could be removed easily. (Picture-2)

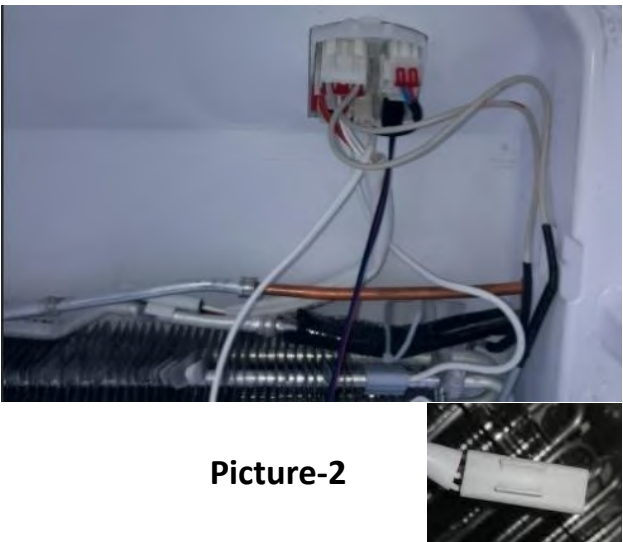

Picture-2

Removing/Assembling The Reed Switch



Picture-1



Picture-2



Picture-3



Picture-4

Take the reed switch (both cooler and freezer) out of its place with a screwdriver. (Picture-2/4)
Then Disconnect the connectors of the Switch and remove it. (Picture-2/4)

NOTE: Reed Switch is a very sensitive miniature electronic card. So during the assembly and disassembly be carefull not to damage it.

During the disassembly of the reed switch, there is a step on the edge of the plastic part which provides easier dissassembly and by that tool it can be taken out from the same place every time.

It must be assembled as this step should be in the invisible(inside of the refrigerator)part. Otherwise The distance which the lamp turn on/off may change.

After the assembly or replacement the service should check if the reed switch is damaged by giving energy and opening and closing the door.

⚠ CAUTION: The plug must be pulled out before the display is removed.

1. Display can be removed with the disassembly tool. Do not use any sharp objects to remove the display.




Picture-1

2. Place and fix the disassembly tool on to display and pull to take out the display. (Pic-2)



Picture-2

3. Take out the display cable socket. (Pic-3)


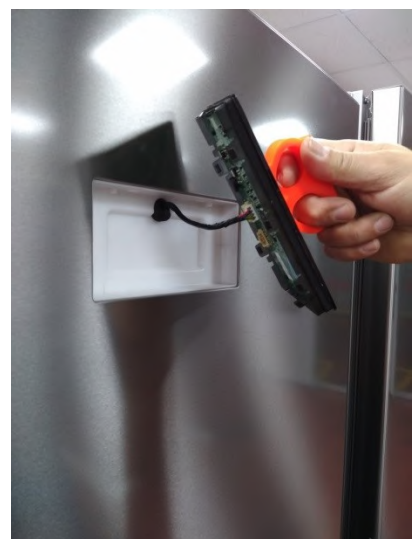


Picture-3

Removing- Assembling The Door Gasket

Pull the gasket towards starting from top right corner
Slowly pull the rest of the gasket.
Completely remove the gaskets from bottom and upper doors.

Check the replacement gasket form
Starting with upper right corner, press on the gasket until it fits to its place..
Place the other sides of the gasket with the help of your thumb

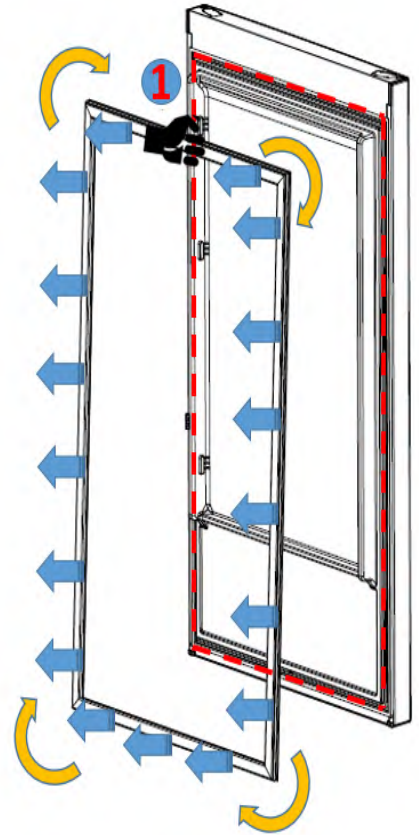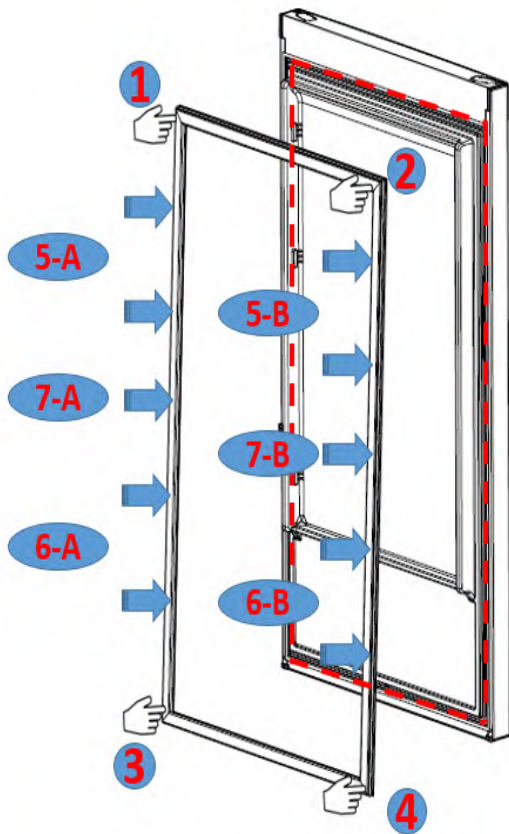

Please follow below order for pulling the gasket out to remove it properly

1 → 2 → 3 → 4 → 5A → 5B → 6A → 6B

Vestel refrigerator serial numbers are consist of 22 digits.

